

LANDTEC®



BIOGAS 3000

OPERATING MANUAL



Table of Contents

1	Manual guidelines	8
1.1	Safety symbol	8
1.2	Hyperlinks.....	8
1.3	Notes	8
2	Safety information	9
2.1	Safety instructions	9
2.2	ATEX and IECEx Certification	11
2.2.1	Marking	11
2.2.2	Instructions Specific to Hazardous Area Installations.....	12
2.2.3	Entity Parameters	14
2.3	Range of environmental conditions	14
2.4	Safety symbols used on the instrument	15
3	BIOGAS 3000 Overview	16
3.1	Features.....	16
3.2	Benefits.....	17
3.3	Options	18
3.4	Main Applications.....	18
3.5	Model Type Definitions	19
3.5.1	BG3K1	19
3.5.2	BG3K2	19
3.5.3	BG3K3	20
3.5.4	BG3K4	21
3.5.5	BG3KD.....	22
3.5.6	BG3KE	22
3.6	BIOGAS 3000 Internal Components.....	24
3.7	BIOGAS 3000 Module Features	26
3.7.1	Physical Characteristics of the Module.....	26

3.7.2	Definitions	27
4	Installation	29
4.1	Pre-Installation Requirements.....	29
4.1.1	General	29
4.1.2	Packaging Contents	30
4.1.3	Storage of the System and Module	30
4.1.4	Ventilation Requirements.....	31
4.2	External Customer Connections	31
4.3	Mounting the Enclosure	32
4.4	Connecting the Gas Lines to the BIOGAS 3000.....	34
4.4.1	Gas Sample Lines	34
4.4.2	Process Return.....	35
4.4.3	Air In	36
4.4.4	Vent to Atmosphere	36
4.5	Drain	36
4.6	Protective Cover	39
4.7	Cable Gland Selection and Cord Anchorage	40
4.8	Cable Conductor Sizes and Insulation Requirements	42
4.8.1	Cable Conductor Sizes	42
4.8.2	Cable Insulation Requirements.....	42
4.9	Mains Wiring	43
4.9.1	Protective Earthing and Mains Supply.....	43
4.9.2	How to Wire the Mains Supply.....	44
4.10	Modbus Digital Output.....	46
4.10.1	Wiring the BIOGAS 3000 Modbus Outputs.....	46
4.10.2	Default Configuration of the BIOGAS 3000 Modbus Port.....	48
4.10.3	Readable Parameters of the BIOGAS 3000.....	48
4.11	4-20mA Outputs	54

4.11.1	General Information	54
4.11.2	Wiring the BIOGAS 3000 to a Current Sinking Input.....	55
4.11.3	4-20mA Scaling	57
4.12	Relays	58
4.13	Profibus Digital Output.....	60
4.13.1	Configuration of the Profibus Module.....	60
4.13.2	Wiring the Profibus Module	62
4.13.3	Readable Parameters of the Profibus Module	65
4.14	Profinet Digital Output	69
4.14.1	Configuration of the Profinet Module	69
4.14.2	Wiring the Profinet Module.....	70
4.14.3	Readable Parameters of the Profinet Module.....	73
4.15	Heater Option.....	76
4.16	Final Checks	77
5	General Operating Instructions	78
5.1	Switching the BIOGAS 3000 System On.....	78
5.2	Self-Test.....	78
5.3	First Time Run Set-up	80
5.4	Gas Readings Screen.....	82
5.5	Alarms.....	85
5.5.1	Notification.....	85
5.5.2	Viewing Alarms	86
5.6	Stop Sampling.....	87
5.7	Menu	88
5.7.1	Settings Menu.....	89
5.7.2	Device Information Menu.....	105
5.7.3	Calibration Menu.....	109
5.8	Help Function	114

5.9	BIOGAS 3000 Sampling Process	115
5.9.1	BG3K1, 2, 3, 4, and D Variants	115
5.9.2	BG3KE Variants	116
5.10	Switching the BIOGAS 3000 System Off	117
6	Gas Check and Calibration	118
6.1	Introduction.....	118
6.2	Required Equipment.....	119
6.2.1	Gas.....	119
6.2.2	Flow Regulator.....	119
6.3	Gas Mixtures.....	120
6.3.1	Adding a Mixture	121
6.3.2	Deleting a Mix.....	122
6.3.3	Edit O ₂ in Fresh Air Mix.....	123
6.4	Connecting a Gas Bottle to the BIOGAS 3000.....	125
6.5	Gas Check and Calibration	128
6.6	Status Icons	130
6.6.1	Post Gas Check	130
6.6.2	Post Calibration	130
6.7	Disconnecting a Gas Bottle from the BIOGAS 3000.....	131
7	Maintenance	133
7.1	Maintenance Schedule	133
7.2	BIOGAS 3000 Consumable Products.....	135
7.3	Emptying the Catchpot	137
7.4	Replacing the Catchpot Filter	140
7.5	Replacing the Inline PTFE Filter	144
7.6	Pressure Test	147
7.6.1	Required Equipment.....	147
7.6.2	Diagnostics Control Mode	147

7.6.3	General Set-Up	149
7.6.4	Performing the Pressure Test	149
7.7	Cleaning and Decontamination	155
8	Service	156
8.1	General.....	156
8.2	Service Notifications.....	156
8.3	Replacement BIOGAS 3000 Module for Service – Hot Swap	157
9	Problem Solving	160
9.1	Fault Detection	160
9.1.1	Non-Critical Faults	160
9.1.2	Critical Faults	162
9.2	System Will Not Power On	163
9.3	Module Will Not Power On	163
9.4	Module Lock-Up	164
9.5	Under and Over Range Codes.....	164
9.6	Analog Outputs Not Working	165
9.7	Modbus Outputs Not Working	165
9.8	Low Flow / Flow Fail	165
9.9	Fuses.....	166
9.10	User Calibration Explained	167
9.10.1	General	167
9.10.2	Factory Calibration	168
9.10.3	User Zero Calibration.....	168
9.10.4	User Span Calibration	169
9.10.5	Trouble Shooting	169
9.11	CH ₄ Reading Low and O ₂ Reading High.....	171
9.12	Event Log	171
10	BIOGAS 3000 Warranty Terms and Conditions	173

11	WEEE Compliance.....	176
12	Declaration of Conformity	Error! Bookmark not defined.
13	Glossary of Terms.....	177

1 Manual guidelines

1.1 Safety symbol

Information in this manual that may affect the safety of users and others is in the following format:



Warning

Warning text will be placed here.

Failure to follow this information may result in physical injury that in some cases could be fatal, cause damage to the equipment or to the environment, or invalidate the certification of the equipment.

1.2 Hyperlinks

Hyperlinks to other sections of this manual, websites or email addresses are in the following format:

www.landtecnica.com

1.3 Notes

Important/useful information and instructions are shown clearly throughout the manual in a note format.

For example:



Note: For further information contact our technical support team at (800) 968-2026 or email landtec_support@gedenv.com.

2 Safety information

2.1 Safety instructions

Warning

The BIOGAS 3000 comes with a guard that covers all accessible components with mains power. This guard must only be removed when power to the system is isolated. Failure to isolate the supply could result in an electric shock.

When opening the cabinet great care must be taken by the operator as mains voltages are present. It is the responsibility of the owner of the equipment to ensure that all personnel are adequately trained.

It is the responsibility of the owner of this equipment to complete a risk assessment on its installation, operation, and maintenance prior to it being used.

Anti-static precautions should be observed during installation, maintenance, and general operation of the equipment.

Inhaling toxic gases may be harmful to health and in some cases may be fatal. It is the responsibility of the user to ensure that he/she is adequately trained in the safety aspects of the gases being used and appropriate procedures are followed. In particular, where hazardous gases are being used, the gas exhausted from the system must be piped to an area where it is safe to discharge the gas, or returned to the process.

The equipment should not be altered in any way other than described within this operating manual. Alterations or changes outside of this operating manual could make the equipment unsafe and invalidate the ATEX/IECEx certification.

It is vital that the instructions in this operating manual are followed closely. Failure to comply could cause an injury to the operator.

The auto-drain pump will need replacing before 4,000 hours use. At 3,000 hours, a non-critical fault will appear on screen to advise the user that replacement is due. At 4,000 hours, a critical fault will occur and stop the system from operating until replaced.

- Suitably trained personnel should carry out the installation in accordance with the applicable code of practice.
- Repair and maintenance of this equipment should be carried out in accordance with the applicable code of practice and this operating manual.
- Only LANDTEC approved components are to be used as replacement parts.
- If the equipment is likely to be exposed to aggressive substances (e.g. acidic liquids, gases that may attack metals or solvents that may affect polymeric materials) then it is the responsibility of the user to take suitable precautions, e.g. regular checks are performed as part of routine inspections or establishing from the material's datasheet that it is resistant to specific chemicals.



Note: If there is any uncertainty, please contact our technical support team at (800) 968-2026 or email landtec_support@qedenv.com.

2.2 ATEX and IECEx Certification

Warning

The equipment is designed for use in potentially explosive atmospheres as defined by the classification. The equipment can be configured to measure low levels of several gases, but may not be certified for use in potentially explosive atmospheres of these gases. It is the responsibility of the operator to determine the protection concept and classification of equipment required for a particular application and if these gases create a potentially explosive atmosphere.

The equipment should not be altered in any way other than described within this operating manual. Alterations or changes outside of this operating manual will invalidate the certification and could make the apparatus unsafe.


2.2.1 Marking

In reference to European ATEX Directive 2014/34/EU and the IECEx International Certification Scheme, the BIOGAS 3000 has been certified according to the following designation:



Ex nA nC IIA T1 Gc (-20°C ≤ Ta ≤ +50°C)

[Nameplate 1 - BIOGAS 3000 markings](#) can be found on the main enclosure of the system:

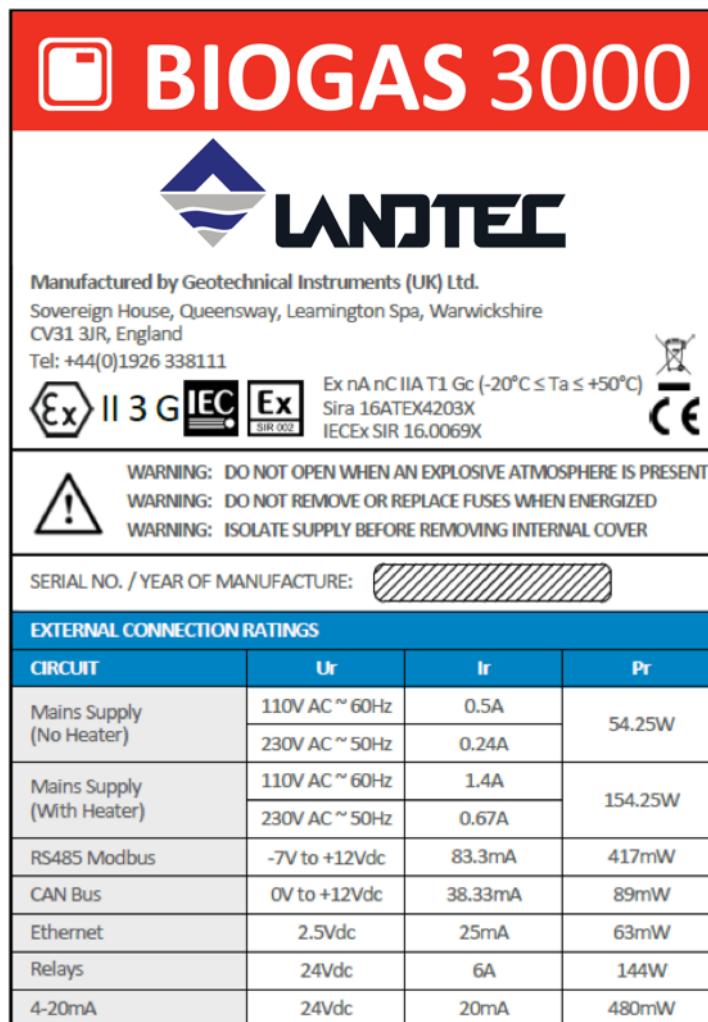*Nameplate 1 - BIOGAS 3000 markings*

2.2.2 Instructions Specific to Hazardous Area Installations

- 1) The equipment may be used in zones 2 with flammable gases and vapors with apparatus groups IIA and with temperature classes T1.
- 2) The equipment is only certified for use in ambient temperatures in the range -4°F to +122°F and should not be used outside this range.
- 3) Installation shall be carried out in accordance with the applicable code of practice by suitably trained personnel.
- 4) There are no special checking or maintenance conditions other than a periodic check.
- 5) With regard to explosion safety, it is not necessary to check for correct operation.

- 6) The equipment contains no user-replaceable parts and is not intended to be repaired by the user. Repair of the equipment is to be carried out by the manufacturer, or their approved agents, in accordance with the applicable code of practice.



Note: Please contact our technical support team at (800) 968-2026 or email landtec_support@qedenv.com to receive equipment repair training.

- 7) Repair of this equipment shall be carried out in accordance with the applicable code of practice.
- 8) If the equipment is likely to come into contact with aggressive substances, e.g. acidic liquids or gases that may attack metals or solvents that may affect polymeric materials, then it is the responsibility of the user to take suitable precautions that prevent it from being adversely affected thus ensuring that the type of protection is not compromised.
- 9) The certificate number has an 'X' suffix, which indicates that special conditions of installation and use apply. Those installing or inspecting this equipment must have access to the contents of the certificate or these instructions. The conditions listed in the certificate are reproduced below:
 - All cable entry holes shall be fitted with either a certified cable gland or a certified stopping plug with minimum IP65 that is suitable for the application.
 - The equipment may only be used in areas with a low risk of mechanical impact.
 - Warning – in locations where high external humidity and internal temperature variations (e.g. frequent on-off cycles) may cause condensation inside the equipment, the interior should be periodically inspected.
 - The terminal blocks shall only be fitted with wires that have cross sectional area falling within the terminal blocks certificates limitations. Refer to operating manual.

- Equipment has only been assessed for electrical safety. No non-electrical assessment has been conducted and the manufacturer declares compliance for this under his own responsibility.

10) Cell replacement must only be carried out in the safe area or when a hazardous atmosphere is not present.



Note: Additional instructions shall be supplied alongside any replacement cell related to the specific installation requirements.

11) Regarding the use of covers, jumpers, and end brackets, the instructions of the manufacturer must be followed.

2.2.3 Entity Parameters

The following ratings must not be exceeded on the listed circuits below:

Circuit	Ur (rated voltage)	Ir (rated current)	Pr (rated power)
Relay coil	24Vdc	6A	144W
4-20mA	24Vdc	20mA	480mW
RS485 Modbus	-7 to +12V	83.3mA	417mW

2.3 Range of environmental conditions

- The system is only for use in ambient temperatures in the range of 0°C to 50°C (32°F to 122°F) without the use of the approved heater, and -20°C to 50°C (-4°F to 122°F) with the use of the approved heater.
- The BIOGAS 3000 is designed for use outdoors and has an IP65 rating.
- The mains voltages (110-230V) can fluctuate up to ±10% of the nominal voltage.
- The system is only for use in ambient pressures in the range 700 to 1200mbar (-4.5 -2.7 psi).

2.4 Safety symbols used on the instrument

The following safety symbols are used on the BIOGAS 3000:

	Protective conductor terminal
	Function earth (ground) terminal
	Caution, risk of electric shock
or	Caution
	Caution, risk of hot surface
	Warning
	Where the symbol or is used in the BIOGAS 3000, the operating manual must be consulted.

3 BIOGAS 3000 Overview

3.1 Features



The BIOGAS 3000, primarily for the AD Biogas and Bio-methane upgrading market has been designed to enable site operations to maximize gas production yield and protect expensive capital equipment from the damaging contaminant gases contained within the production process. The ATEX and IECEx certified BIOGAS 3000 builds on field proven, robust gas analysis technology to offer cost effective online monitoring with local data outputs.

- CH₄, CO₂ & O₂ – standard measurements
- H₂S, H₂ and CO – optional measurements (choice of up to two)
- Modular design enabling hot-swap for serviceability and onsite maintenance
- User calibration function to maintain accuracy and ensure data reliability in extreme temperatures
- ATEX and IECEx certified for use in potentially explosive gas atmospheres – Zone 2
- ISO/IEC 17025 calibration for optimal accuracy
- Ability to monitor the gas control process before and after desulphurization

- Continuous monitoring option
- Up to 4 sample points to monitor the complete gas control process
- Gas return to process as standard
- IP65 rated for weatherproofing
- Built-in liquid level monitoring with a dedicated alarm to inform the user contents of the catchpot require emptying or an optional automated moisture removal drain
- Gas alarms and fault notifications
- 6 x 4-20mA outputs
- Modbus RTU communication
- Optional Profibus and Profinet communication
- Clear, visual and informative color display
- Optional heater to extend operating temperature range to -4°F
- Extended Warranty and Service pack options through approved global service centers

3.2 Benefits

- Customizable to site requirements
- Zero operational downtime for servicing
- Product reliability and longevity
- Protect expensive capital equipment from damaging gases
- Maximize operational efficiency through optimizing the AD process
- Operational within hazardous areas
- Ease of operation, integration and installation
- Minimal through-life costs

- Local support for peace of mind

3.3 Options

- H₂S ranges from 0-50ppm to 0-10,000ppm
- CO 0-1,000ppm
- H₂ 0-1,000ppm
- Profibus replaces Modbus
- Profinet replaces Modbus
- 110V or 230V heater
- Auto-drain to empty contents of catchpot without user interaction
- Hydrolysis tank measurement option to improve the life of the external sensor, if required


3.4 Main Applications

- AD research
- Agricultural waste AD (large scale)
- Biogas upgrading
- Farm waste AD (small scale)
- Gas flaring
- Mixed food waste AD
- Sewage / waste water treatment AD

3.5 Model Type Definitions


3.5.1 BG3K1

- The BG3K1 measures CH₄, CO₂, and O₂ as standard with a choice of up to two additional gases (one internal to the module and one external) and measures from one sample point.
- It has user selectable sample and air purge intervals that are exhausted back to the process and atmosphere respectively.
- The 4-20mA and Modbus outputs are updated at the end of each sample.
- The following image is a simple block diagram of the system including the optional external gas sensor:

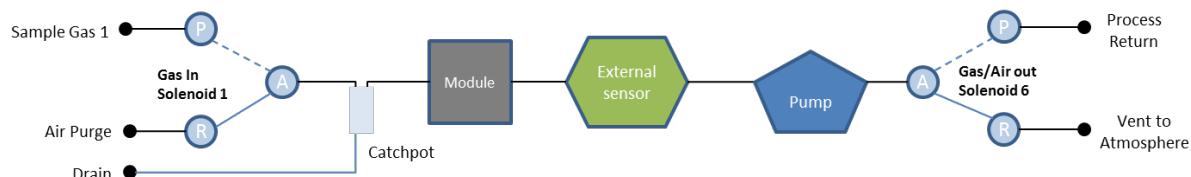


3.5.2 BG3K2

- The BG3K2 measures CH₄, CO₂, and O₂ as standard with a choice of up to two additional gases (one internal to the module and one external) and measures from two sample points.
- It has user selectable sample and air purge intervals that are exhausted back to the process and atmosphere respectively.
- The 4-20mA and Modbus outputs are updated at the end of each sample.
- The following image is a simple block diagram of the system including the optional external gas sensor:

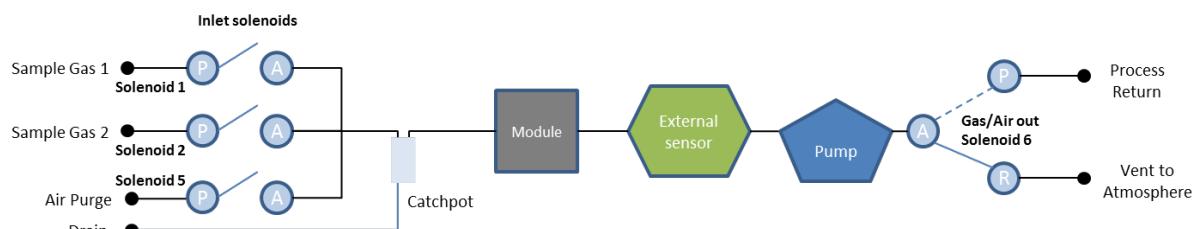


3.5.3 BG3K3

- The BG3K3 measures CH₄, CO₂, and O₂ as standard with a choice of up to two additional gases (one internal to the module and one external) from three sample points.
- It has user selectable sample and air purge intervals that are exhausted back to the process and atmosphere respectively.
- The 4-20mA and Modbus outputs are updated at the end of each sample.
- The following image is a simple block diagram of the system including the optional external gas sensor:

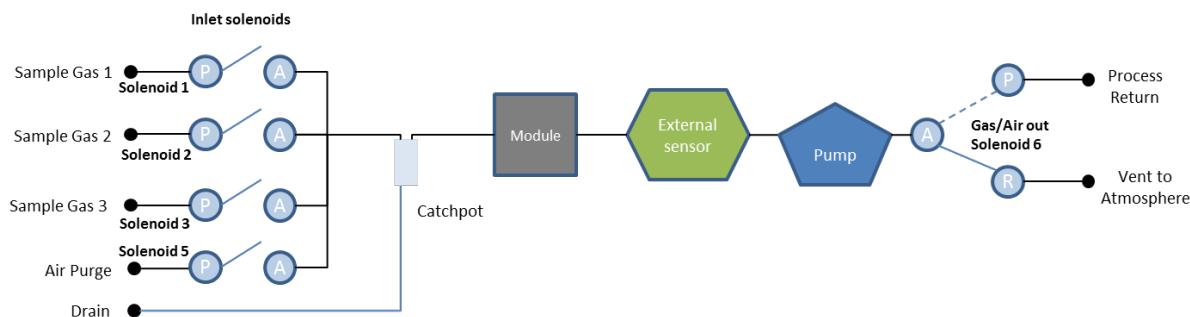


- The BG3K3 also has the option of measuring from the hydrolysis tank on sample point 1 and not passing this gas across the external sensor. The following image is a block diagram if the system with this option selected:

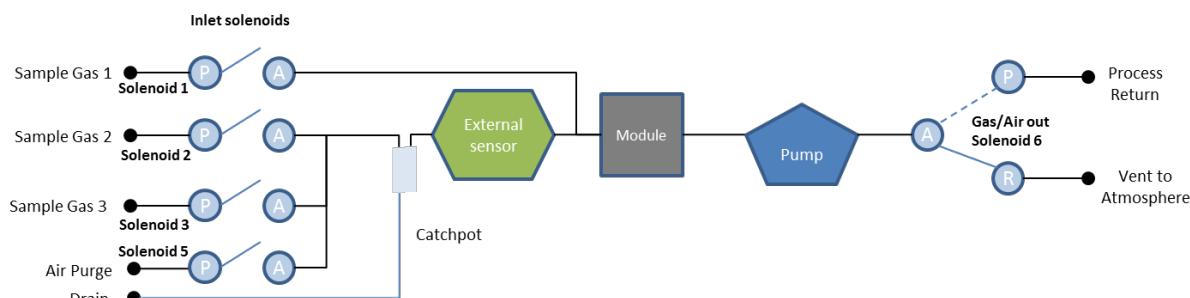


Warning For this option, additional moisture filtration will be required external to the equipment on 'Sample Gas 1'.

3.5.4 BG3K4

- The BG3K4 measures CH₄, CO₂, and O₂ as standard with a choice of up to two additional gases (one internal to the module and one external) from four sample points.
- It has user selectable sample and air purge intervals that are exhausted back to the process and atmosphere respectively.
- The 4-20mA and Modbus outputs are updated at the end of each sample.
- The following image is a simple block diagram of the system including the optional external gas sensor:

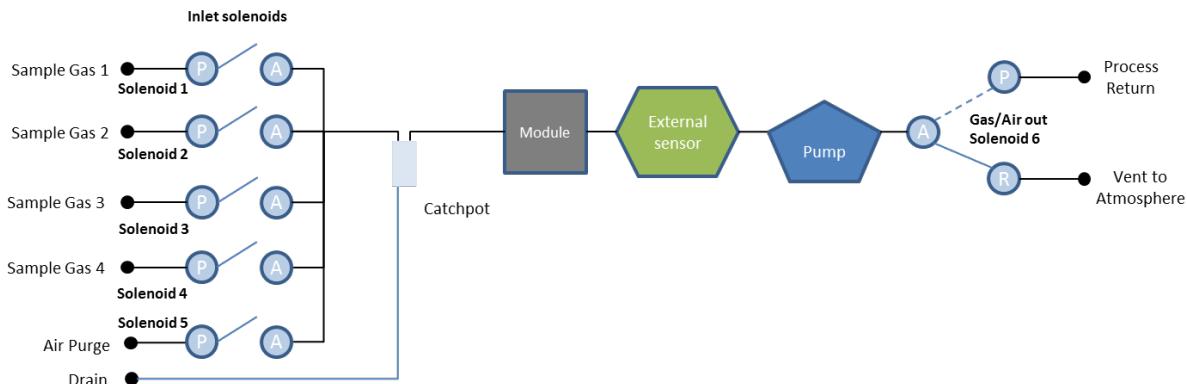

- The BG3K4 also has the option of measuring from the hydrolysis tank on sample point 1 and not passing this gas across the external sensor. This prolongs the life of the sensor. The following image is a block diagram if the system with this option selected:

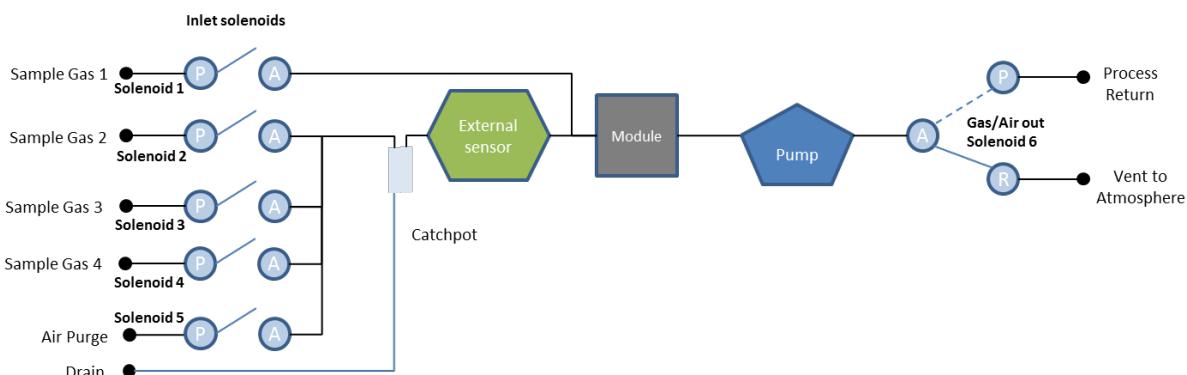


Warning

For this option, additional filtration will be required external to the equipment on 'Sample Gas 1'.

3.5.5 BG3KD

- The BG3KD measures CH₄, CO₂, O₂ and high and low range H₂S as standard (high range internal to the module and low range external) from two sample points.
- It has user selectable sample and air purge intervals that are exhausted back to the process and atmosphere respectively.
- The system has bypass solenoids in order to divert high levels of H₂S from the low range sensor, which will prolong its life.
- The 4-20mA and Modbus outputs are updated at the end of each sample.
- The following image is a simple block diagram of the system:

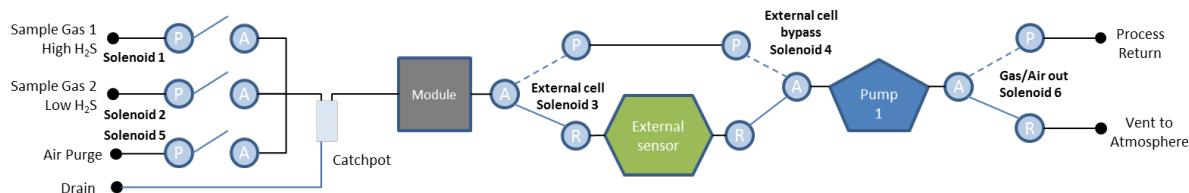


3.5.6 BG3KE


- The BG3KE measures CH₄, CO₂, and O₂ as standard with a choice of up to one additional gas (external to module only) from one sample point.
- It measures CH₄, CO₂, and O₂ continuously that is exhausted back to the process.
- The module has a minimum three-minute air purge every 24-hours. The duration and time of day this occurs is user-definable.
- The external sensor has user selectable sample intervals that are exhausted back to the process. The external sensor cannot be subjected to the gas stream continuously.
- After each defined cycle, the external sensor is subjected to a user definable air purge that is exhausted to the atmosphere.
- The 4-20mA and Modbus outputs are updated continuously, with the external sensor data being refreshed at the end of each sample

- The following images are two simple block diagrams of the system with one including the optional external gas sensor:

BG3KE with no external sensor

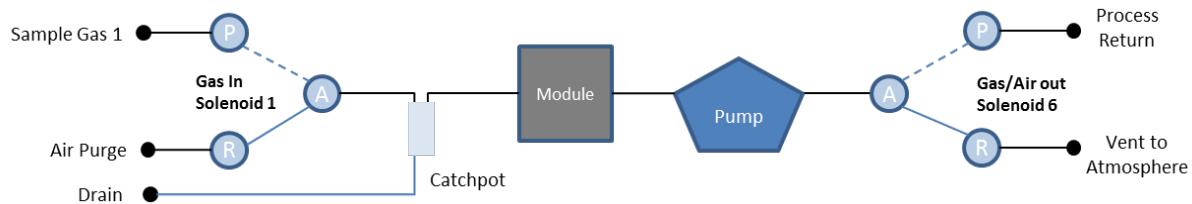

BG3KE with an external sensor

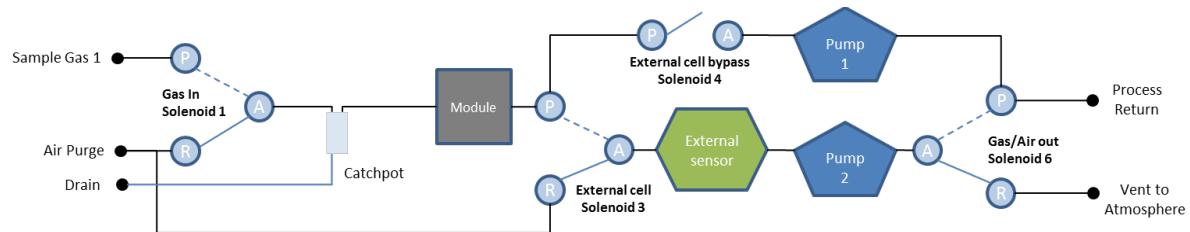

3.6 BIOGAS 3000 Internal Components

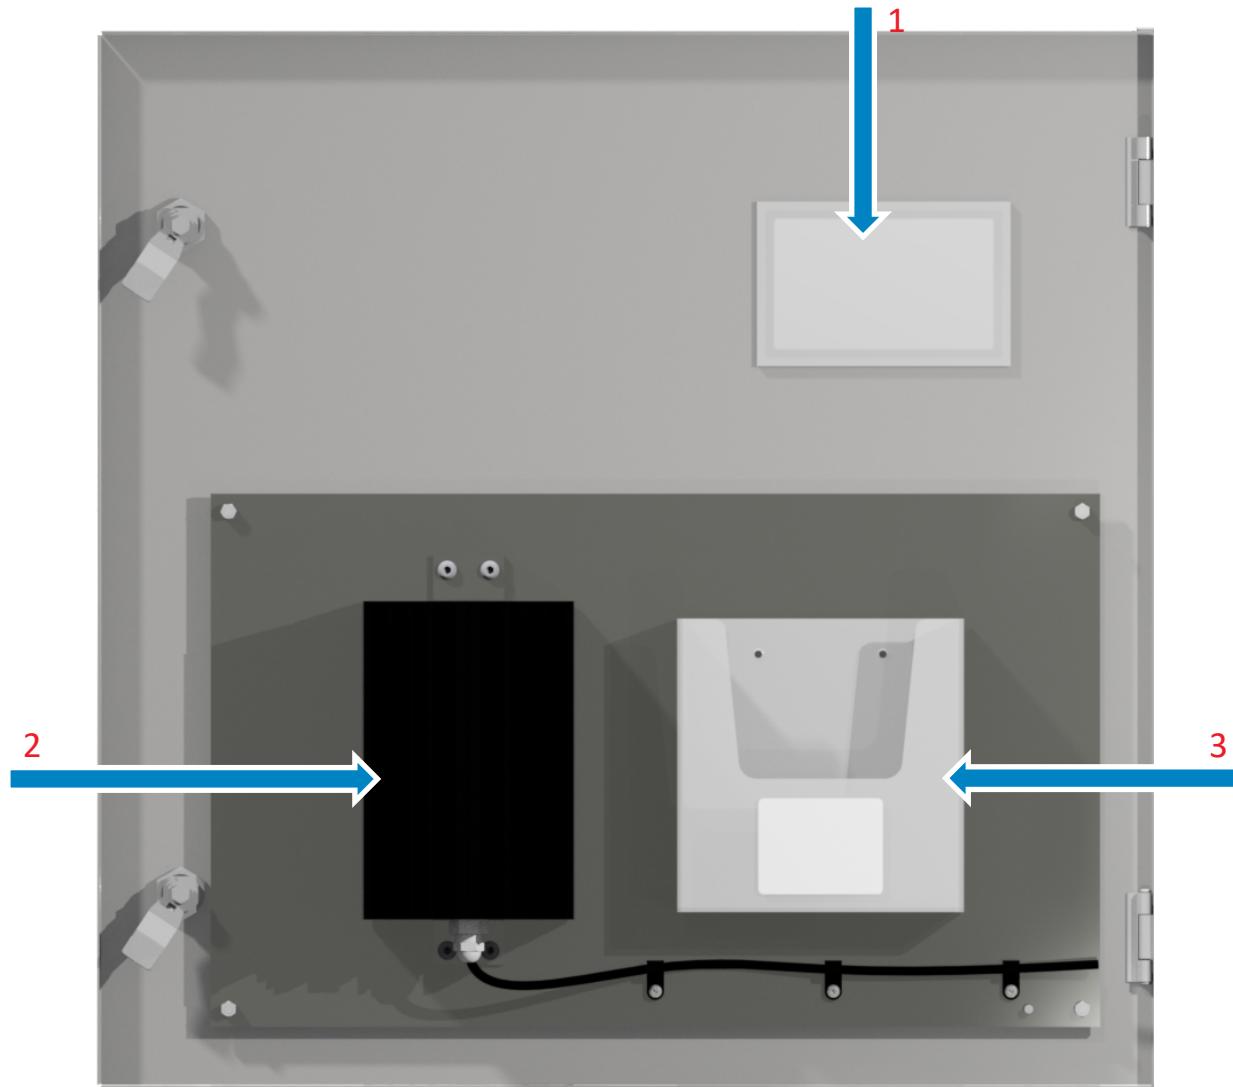


Figure 1 - BIOGAS 3000 door internals

- 1) Viewing window
- 2) Heater (110V or 230V)
- 3) Plastic wallet containing operating manual and calibration certificate

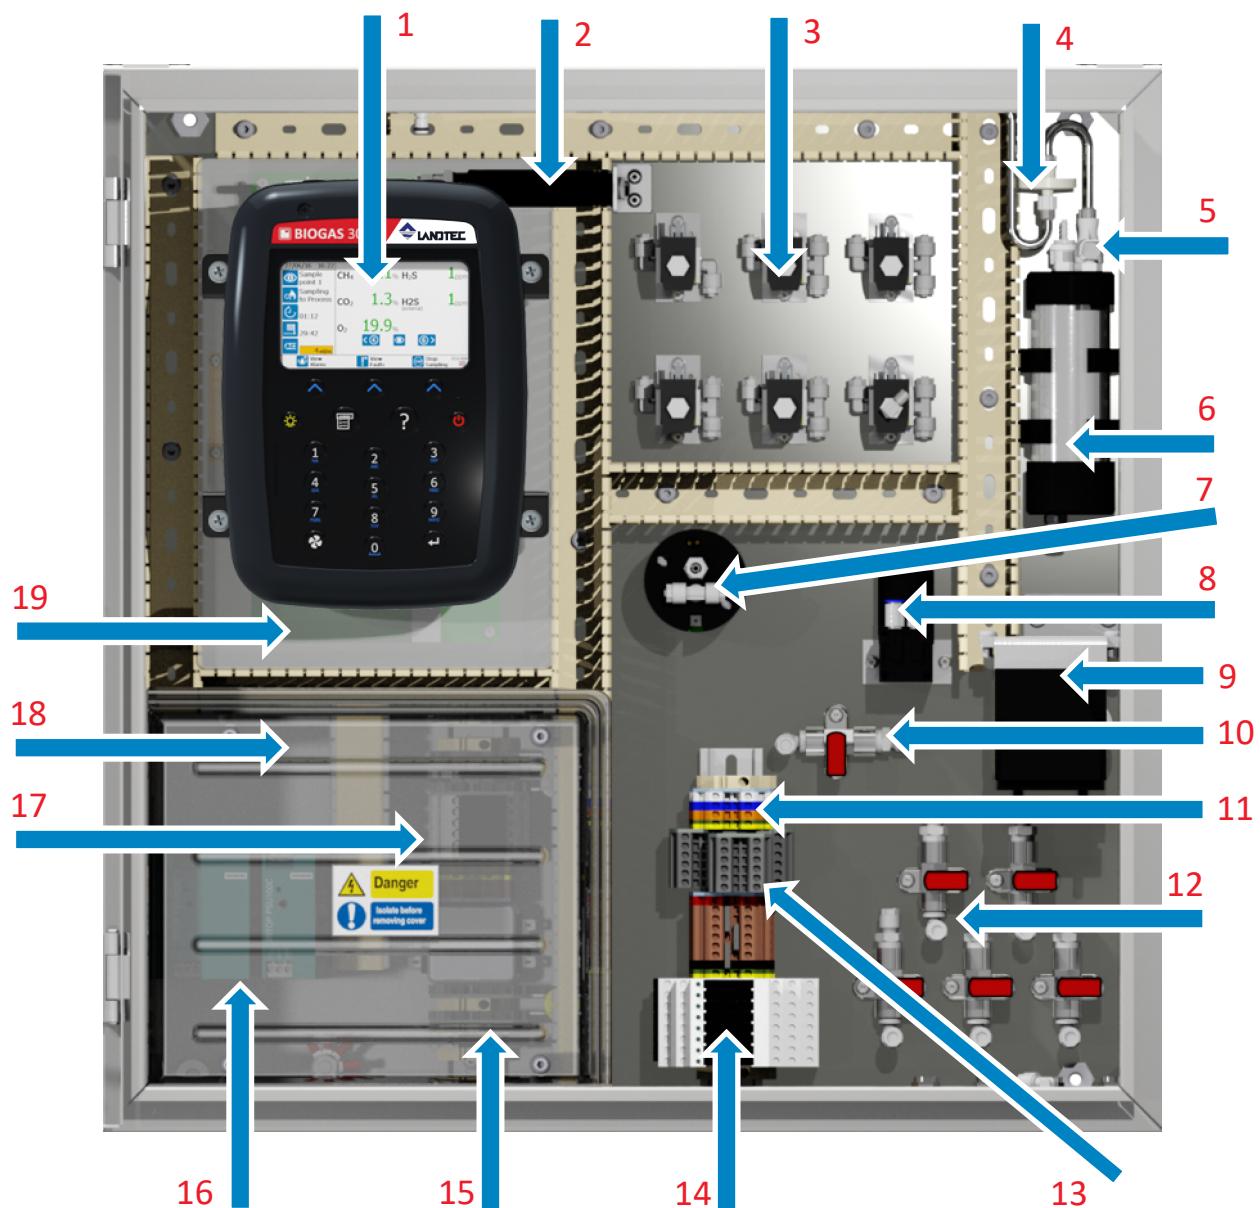


Figure 2 - BIOGAS 3000 internal components

- | | |
|--------------------------------------|----------------------------|
| 1) BIOGAS 3000 module | 11) Modbus terminals |
| 2) Heater thermostat | 12) Gas in/out valves |
| 3) Solenoid valves | 13) 4-20mA terminals |
| 4) Inline PTFE filter | 14) Relays |
| 5) Female QRC for calibration | 15) Mains supply terminals |
| 6) Catchpot with liquid level switch | 16) Power supplies |
| 7) External sensor | 17) Fuses |
| 8) Pumps | 18) Protective cover |
| 9) Auto-drain pump (or drain valve) | 19) Interface PCB |
| 10) Calibration valve | |

3.7 BIOGAS 3000 Module Features

3.7.1 Physical Characteristics of the Module

Front View:



Reference:


- 1) Display
- 2) Soft keys
- 3) Help key
- 4) On/off key
- 5) Keypad
- 6) Return key (\leftarrow)
- 7) Pump key
- 8) Backlight key
- 9) Menu key

Rear View:



- 10) Module mounting brackets
- 11) Rear label

Top View:

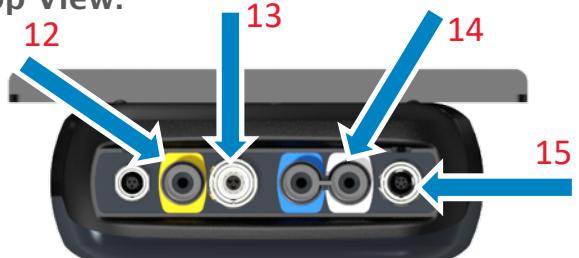

- 12) Gas outlet
- 13) Power supply connector
- 14) Gas inlet
- 15) Communications connector

3.7.2 Definitions

Front View

Reference

- | Reference | Definition |
|-------------------|---|
| 1) Display | Shows information to the user. |
| 2) Soft keys | The function of the three soft keys on the keypad is determined by the screen the operator is in. |
| 3) Help key | Where ‘?’ is shown on the display, the operator can press the help key for on-screen assistance. |
| 4) On/off key | Press the on/off key for two seconds to switch the module on and off. |
| 5) Keypad | Allows numeric entry from 0-9 and letters A-Z.

Keys ‘2’, ‘4’, ‘6’ and ‘8’ allow the operator to navigate ‘up’, ‘right’, ‘left’ and ‘down’ respectively in certain menu items.

Key ‘0’ is also used as the space key when entering text. |
| 6) Return key (←) | The ← accepts/confirms choices made by the operator for various functions and operations. |
| 7) Pump key | Not used in normal operation but is used to aid diagnostics and assist with maintenance. It does not control the pump. |
| 8) Backlight key | Enables the operator to turn the backlight off and on. |
| 9) Menu key | Press the ‘menu’ key to navigate to the ‘menu’. |

Rear View

- 10) Module mounting brackets Securely holds the module to the backplate.
- 11) Rear label The serial number is the unique identification number for the BIOGAS 3000 module. The part number is the unique record for the internal configuration of the BIOGAS 3000 module at time of manufacture or last service.

Top View

- 12) Gas outlet The gas sample exits the BIOGAS 3000 module here.
- 13) Power supply connector Power supplied from the Interface PCB connects here.
- 14) Gas inlet The gas sample enters the BIOGAS 3000 module here.
- 15) Communications connector Connection point for the USB lead from the Interface PCB.

4 Installation

4.1 Pre-Installation Requirements

4.1.1 General

It is LANDTEC's recommendation that the installation of the BIOGAS 3000 is carried out in accordance with this operating manual and the latest edition of IEC 60079-14. Any electrical work should be carried out by a competent electrician and any relevant codes of practice should be followed.

In order to effectively install the BIOGAS 3000 system it is important that the site is ready and in a fit state. In particular, the following points should be noted:

 **Warning**

Power should NOT be applied before all piping and wiring has been completed and tested.

Only a qualified person should make electrical connections to the system.

- This operating manual has been read and fully understood
- A risk assessment has been performed that includes installation, operation, and maintenance of the system and the removal, where practicably possible, of any identified hazards
- Applicable codes of practice identified
- The BIOGAS 3000 system has been received on site, unpacked, packaging contents checked, and checked for obvious damage
- A suitable location is determined for the installation of the instrumentation



Note: Refer to section [Mounting the Enclosure](#) for items that need to be considered.

- A suitable mains supply as detailed in this manual is installed
- All required gas lines are installed

 Note: Inlet pressure to the BIOGAS 3000 system must not exceed 350 mbars (5psi). Where this is exceeded, additional pressure regulation is required.

- Output data cable has been installed (if required) to the BIOGAS 3000 location.

 Note: Failure to comply with any of the above may result in additional time on site and additional costs.

4.1.2 Packaging Contents

Check the product box for the following items:

- BIOGAS 3000 system
- Key for enclosure locks
- Operating manual – found in plastic wallet on the inside of the enclosure door
- Customer wiring diagram – found in plastic wallet on the inside of the enclosure door
- Calibration certificate – found in plastic wallet on the inside of the enclosure door
- Compression fittings – found on the bulkheads on the enclosure base (see annotations 4, 5, and 7-11 on [Figure 3 - BIOGAS 3000 customer connections](#))
- Particulate filter for air purge line (LANDTEC part number 2008277/S, see section [BIOGAS 3000 Consumable Products](#)).

4.1.3 Storage of the System and Module

The BIOGAS 3000 system and module should not be exposed to extremes of temperature. It is the user's responsibility to ensure the system and module are kept within their ambient operating temperature range.

4.1.4 Ventilation Requirements

There is an enclosure breather fitted to the BIOGAS 3000 situated at the base of the enclosure (see annotation 13 on [Figure 3 - BIOGAS 3000 customer connections](#)). It is the user's responsibility to ensure that there is a free circulation of air around the cabinet.

 **Warning**

If the system is being installed indoors, it is our recommendation that a suitable gas leak detector is placed nearby to the system to inform operators of a leak before entering the room. This is not supplied by LANDTEC or QED.

4.2 External Customer Connections

The installation will require the operator to connect a mains cable, output cable, drain and gas pipes to the equipment. [Figure 3 - BIOGAS 3000 customer connections](#) identifies the available connection points on the BIOGAS 3000:

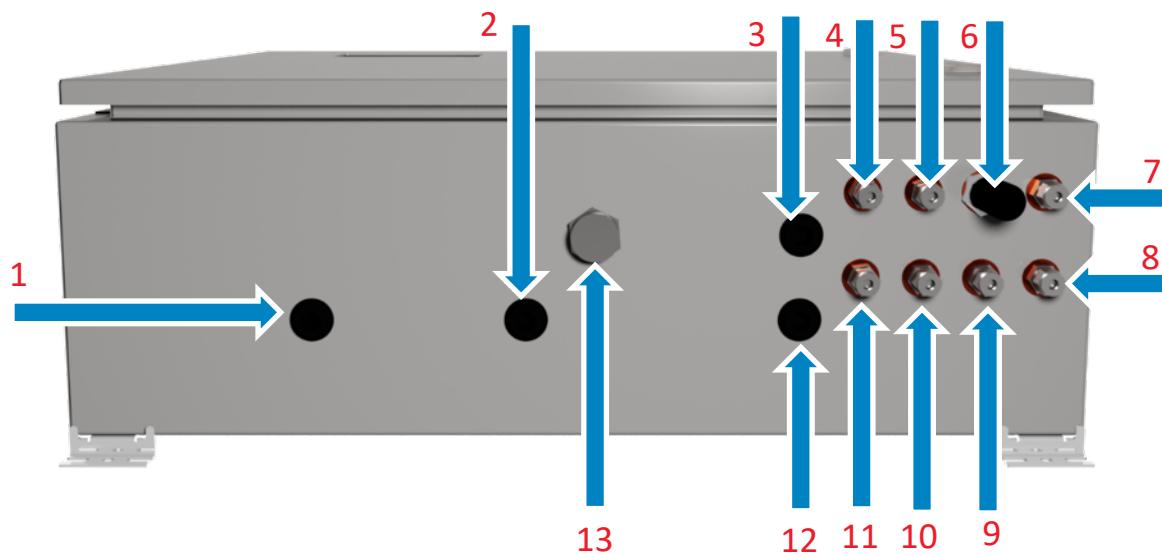


Figure 3 - BIOGAS 3000 customer connections

- | | |
|--|-----------------------------------|
| 1) Customer cable entry – mains supply | 8) Drain |
| 2) Customer cable entry – not used | 9) Vent to Atmosphere |
| 3) Customer cable entry – data outputs | 10) Sample Gas 4 |
| 4) Sample Gas 1 | 11) Sample Gas 2 |
| 5) Sample Gas 3 | 12) Customer cable entry – relays |
| 6) Air In | 13) Breather Drain |
| 7) Process Return | |

 Note: There are four stopping plugs fitted to the enclosure for the customer's cable entry. An M20 stopping plug must be removed from annotations 1-3 and 12 where a cable gland is to be placed. Where a cable entry point is not being used, the M20 stopping plug must remain in place in order to maintain the IP rating of the enclosure.

 **Warning**

The mains and output cables must enter the cabinet via a cable gland (see [Cable Gland Selection and Cord Anchorage](#)) and the mains supply should be isolated (see [Mains Wiring](#)).

4.3 Mounting the Enclosure

The system is contained in one enclosure that is weatherproof and has a rating of IP65.

When considering the location of the equipment, the following must be considered:

- Although the enclosure is IP65, it must be protected from the worst of the weather. For example, maintenance of the system will be made easier and safer if it is not exposed to driving rain
- Allow easy access for routine maintenance to be undertaken
- Allow easy viewing of the display through the viewing window
- Any future changes in the area, for example plantation growth causing damage to pipework
- Ensure there is no risk of damage from vehicles or animals in the area
- Avoid positioning the enclosure in direct sunlight as this may increase the internal temperature of the cabinet to outside of the operating temperature range of the equipment.



Note: If it is difficult to position the BIOGAS 3000 system out of direct sunlight, measures should be taken to protect the system, such as a basic cover to provide shade.

The enclosure is to be mounted to a solid brick wall or framework (preferably stainless steel) capable of holding the weight of the system. The weight of the

enclosure and contents will depend on the options that are fitted, but the maximum weight is 32kg. It is therefore recommended that the installation be undertaken by a minimum of two people.

⚠ Warning

Although the wall mounting brackets are fitted and tested at manufacture, during transit it is possible that they could have worked loose. Prior to installation, ensure the wall mounting brackets are securely fitted to the BIOGAS 3000 system.

Four mounting brackets are supplied and fitted to each corner of the BIOGAS 3000. Suitable nut and bolt or rawl bolt arrangements will have to be defined by the operator for fixing to the wall or framework (it is recommended that these are stainless steel). The enclosure should be mounted as square and level as possible.

Dimensions of the enclosure are provided in [Figure 4 - BIOGAS 3000 enclosure dimensions](#).

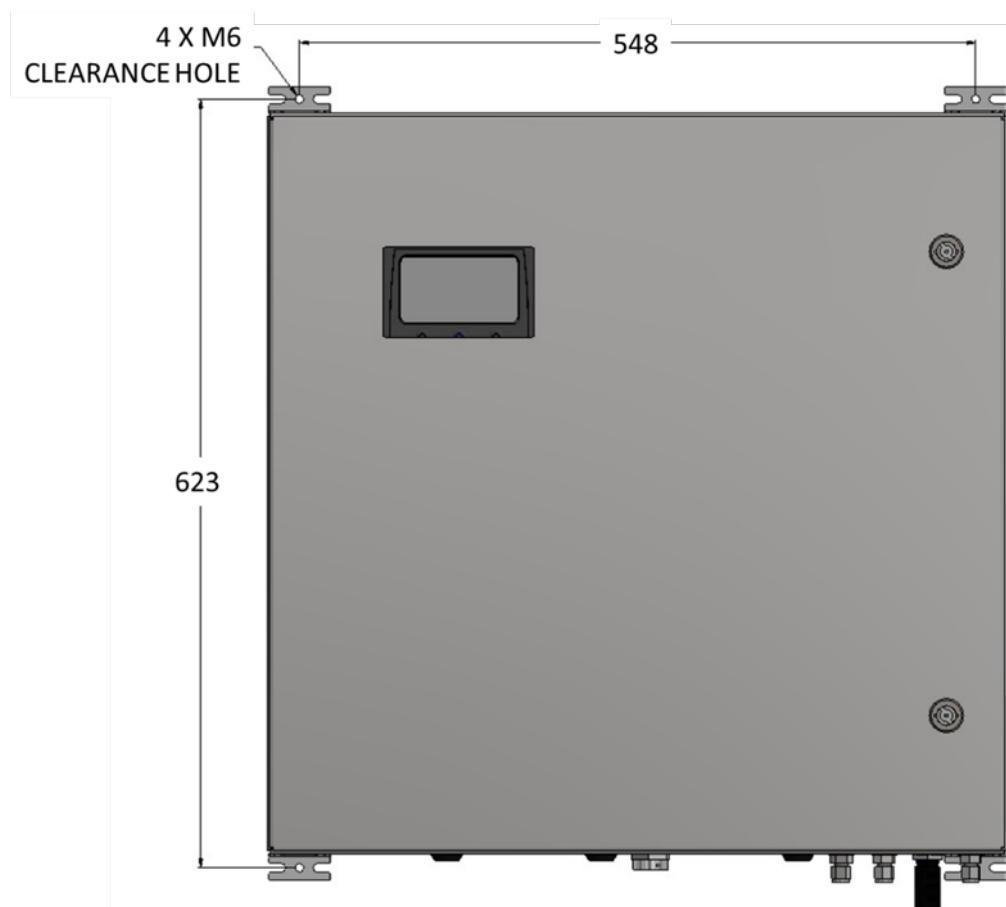


Figure 4 - BIOGAS 3000 enclosure dimensions

4.4 Connecting the Gas Lines to the BIOGAS 3000

-  Note: The gas connections on the system are $\frac{1}{4}$ inch stainless steel bulkhead connectors with a compression fitting suitable for $\frac{1}{4}$ inch outer diameter tubing. It is recommended that stainless steel tubing be used where possible.
-  Note: After installation, ensure all tube connections are tight and free from leaks. See section [Pressure Test](#).

4.4.1 Gas Sample Lines

Care should be taken in routing the sample lines, especially in cold environments. The sample lines may need insulating or even trace heating to prevent freezing of water within the pipe. This is not part of the BIOGAS 3000 system and is the responsibility of the operator.

- The sample should be taken from a suitable location at the required monitoring point. It is recommended that a valve be incorporated in the assembly so that the gas can be shut off if the sample line is removed.



Figure 5 - Ball valve assembly

- The line should connect to the upper surface of a horizontal pipe or on a vertical standing pipe. This will prevent excessive amounts of water entering the sample line.

- An additional ball valve should be incorporated in to each sample line close to the BIOGAS 3000 system. This ball valve will be used to isolate the gas supply to the system as part of pressure testing the system during routine maintenance.
- The sample tube should be connected to the bulkhead connectors labelled 'SAMPLE GAS 1', 'SAMPLE GAS 2', 'SAMPLE GAS 3', and 'SAMPLE GAS 4' where applicable – see annotations 4, 5, 10, and 11 on [Figure 3 - BIOGAS 3000 customer connections](#).



Note: The maximum distance the BIOGAS 3000 can be from the sample point is 164 feet, (50 meters).

4.4.2 Process Return

This is the line where measured gas from the system is exhausted. It can be returned to the process or vented to atmosphere.

Care should be taken in routing the process return line, especially in cold environments. The process return line may need insulating or even trace heating to prevent freezing of water within the pipe. This is not part of the BIOGAS 3000 system and is the responsibility of the operator.

- The gas exhaust line should be returned to a suitable location at the required point. It is recommended that a valve be incorporated in the assembly so that the gas can be shut off if the sample line is removed. See [Figure 5 - Ball valve assembly](#).



Warning

The gas being exhausted at this point of the system will be flowing at approximately 300ml/min. If the sample gas is being vented to atmosphere, it should be routed to a safe and well-ventilated area.

- An additional ball valve should be incorporated in to the piping close to the BIOGAS 3000 system, even when being vented to atmosphere. This ball valve will be used as part of pressure testing the system during routine maintenance.
- The gas exhaust line should be connected to the bulkhead connector labelled 'PROCESS RETURN' – see annotation 7 on [Figure 3 - BIOGAS 3000 customer connections](#).

4.4.3 Air In

The air purge inlet requires uncontaminated air for the purge line. If uncontaminated air is available, the particulate filter should remain in place.

If uncontaminated air cannot be guaranteed at the location of the analyser, the particulate filter should be removed and a pipe should be connected in its place and terminated at a point where uncontaminated air is present.

- The sample tube should be connected to the bulkhead connector labelled 'AIR IN' – see annotations 6 on [Figure 3 - BIOGAS 3000 customer connections](#).

4.4.4 Vent to Atmosphere

Warning

When performing an air purge the gas that was previously sampled will be vented to atmosphere for a short period, typically 10 seconds. This equates to approximately 50ml of gas per air purge. In addition, when performing a user calibration, the calibration gas will be exhausted from this bulkhead. It is therefore recommended that the 'Vent to Atmosphere' line should be routed to a safe and well-ventilated area.

- A ball valve should be incorporated in to the piping close to the BIOGAS 3000 system. This ball valve will be used as part of pressure testing the system during routine maintenance.
- The sample tube should be connected to the bulkhead connector labelled 'VENT TO ATMOSPHERE' – see annotation 9 on [Figure 3 - BIOGAS 3000 customer connections](#).

4.5 Drain

The system incorporates a catchpot and drain for removal of liquid to help prevent water from entering the system (see annotation 6 on

[Figure 2 - BIOGAS 3000 internal components](#)). However, additional water filtering may be required where the sample is heavily contaminated with water (available from LANDTEC, see part number GA3KP.S15 in section [BIOGAS 3000 Consumable Products](#)).

Care should be taken in routing the drain line, especially in cold environments. The drain line may need insulating or even trace heating to prevent freezing of water within the pipe. This is not part of the BIOGAS 3000 system and is the responsibility of the operator.

Alternatively, the contents can be emptied in to a suitable container and disposed of in a safe manner.

If the auto-drain option is fitted, no manual draining of the system is required.

- The drain line should be connected to the bulkhead connector labelled ‘DRAIN’ – see annotation 8 on [Figure 3 - BIOGAS 3000 customer connections](#).
- The drain line should be run to a position where it is safe to discharge the small amount of liquid that is removed from the sample gas.
- The contents of the catchpot are drained under gravity. Therefore, any tubing needs to be lower than the drain compression fitting.
- The drain connection on the system is a 6mm stainless steel bulkhead connector with a compression fitting suitable for 6mm outer diameter tubing. It is recommended that stainless steel tubing be used where possible.
- The catchpot contains a liquid level (reed) switch. When the liquid reaches a certain level, the switch activates and informs the BIOGAS 3000 module. From here, an icon is displayed on screen and if configured triggers a relay (see [Configure Relays](#)).
- Refer to the [Emptying the Catchpot](#) section of this operating manual for how to drain the catchpot.
- When taking a gas sample, ensure the drain ball valve (see annotation 9 on [Figure 2 - BIOGAS 3000 internal](#)) components is in the closed (horizontal) position.



Note: If the auto-drain option is fitted, there will be no drain valve fitted to the equipment.

⚠ Warning

For the hydrolysis tank option chosen at manufacture, additional filtration will be required on sample point 1, as this does not pass through the system's catchpot. See LANDTEC part number GA3KP.S15 in section [BIOGAS 3000 Consumable Products](#)

The catchpot can hold approximately 90ml of liquid. Dependent upon the application the liquid removed may be contaminated and should be discharged to an area where it is safe to do so.

This line may also vent sample gas for a brief period during each draining operation if the sample inlet and gas out valves are not closed.

4.6 Protective Cover

The BIOGAS 3000 has a protective cover fitted inside the main enclosure to cover areas where mains voltages are present. This cover must be removed in order to wire the mains supply to the BIOGAS 3000 system and to replace fuses.

Warning

The cover must only be removed when power to the system has been isolated. Failure to isolate the power before removing the cover could result in an electric shock.

It is vital that after installation and prior to powering the equipment that the protective cover is replaced. Failure to replace the cover could result in an electric shock.

The cover is removed by unscrewing four M6 x 12mm button head screws with a 4mm hexagon tool (see [Figure 6 - Mains cover removal](#)). The cover and screws must be kept safe once removed to ensure that they are not lost and can be refitted once installation is complete.

To fit the cover, simply align the holes in the protective cover with the four pillars fixed to the BIOGAS 3000 back plate and screw in to place using the 4mm hexagon tool.



Note: For clarity, some images of the BIOGAS 3000 system in this operating manual may not include the protective cover.

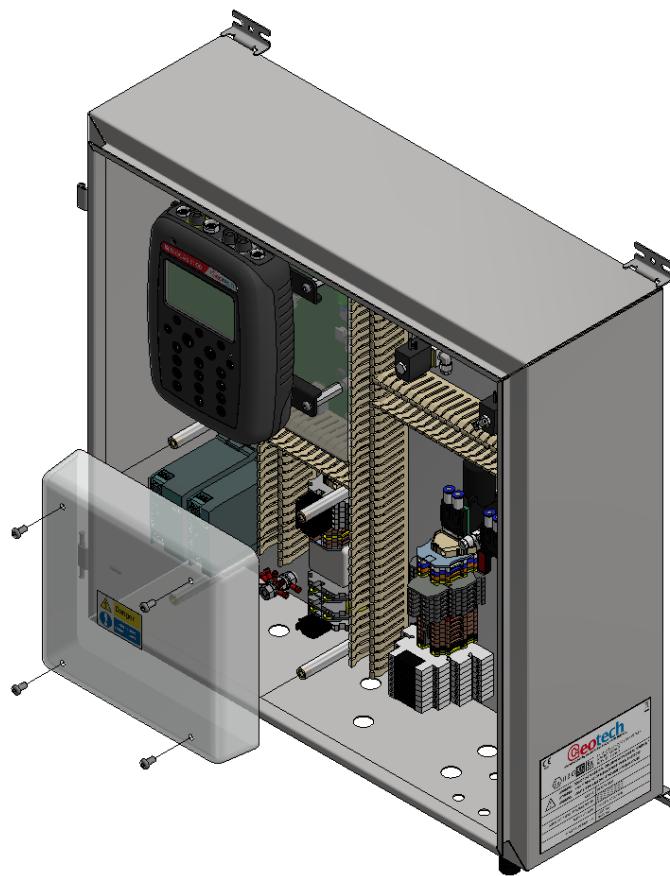


Figure 6 - Mains cover removal

4.7 Cable Gland Selection and Cord Anchorage

To maintain the integrity and certification of the equipment a cable gland must be selected that:

- is suitably certified – see section [ATEX and IECEx Certification](#) in this operating manual for the equipment marking
- has a minimum rating of IP65
- shall be protected against abrasion and sharp bends at the point where the cord enters the equipment, by an inlet or bushing with a smoothly rounded opening
- has been fitted and tightened to the recommended torque set by the manufacturer.

In addition, the cable gland must have a means of anchoring the cable. The cord anchorage shall relieve the conductors of the cord from strain, including

twisting, where they are connected within the equipment, and shall protect the insulation of the conductors from abrasion. The protective earth conductor shall be last to take the strain if the cord slips in its anchorage.

Cord anchorages shall meet the following requirements:

- The cord shall not be clamped by a screw that bears directly on the cord
- Knots in the cord shall not be used
- It shall not be possible to push the cord into the equipment to an extent that could cause a hazard
- Failure of the cord insulation in a cord anchorage that has metal parts shall not cause accessible conductive parts to become hazardous live
- It shall not be possible to loosen the cord anchorage without the use of a tool
- It shall be designed so that cord replacement does not cause a hazard, and it shall be clear how the relief from strain is provided.

 **Warning**

A compression bushing shall not be used as cord anchorage.

Failure to meet the above requirements could make the equipment unsafe resulting in a hazard and invalidate the ATEX/IECEx certification.

4.8 Cable Conductor Sizes and Insulation Requirements

4.8.1 Cable Conductor Sizes

Cable conductors must meet the following requirements, be suitable for the environment, and distance to the supply:

Function	Type	Conductor Size	Voltage Rating	Current Rating
Mains supply	Tri-rated	0.14 – 4.0mm ² solid 0.14 – 2.5mm ² stranded	230Vac	3.15A
4-20mA outputs	Twisted pair	0.14 – 4.0mm ² solid 0.14 – 2.5mm ² stranded	24Vdc	20mA
Modbus outputs	Twisted pair	0.14 – 4.0mm ² solid 0.14 – 2.5mm ² stranded	12Vdc	83.3mA
Relays	Tri-rated	0.2 – 2.5mm ²	24Vdc	6A



Warning Failure to meet the above requirements could make the equipment unsafe resulting in a hazard and invalidate the ATEX/IECEx certification.

4.8.2 Cable Insulation Requirements

In addition to the table below, the cable insulation must comply with a recognised standard and have a flammability rating of V1 or better:

Function	Cable Insulation thickness (min)
Mains supply	0.6mm
4-20mA outputs	0.2mm
Modbus outputs	0.2mm
Relays	0.2mm



Warning Failure to meet the above requirements could make the equipment unsafe resulting in a hazard and invalidate the ATEX/IECEx certification.

4.9 Mains Wiring

4.9.1 Protective Earthing and Mains Supply

The safety of the equipment depends on it being effectively earthed via the mains supply.

The mains requirement for the system can be found on the side of the enclosure and is shown on [Figure 7 - BIOGAS 3000 electrical label](#):

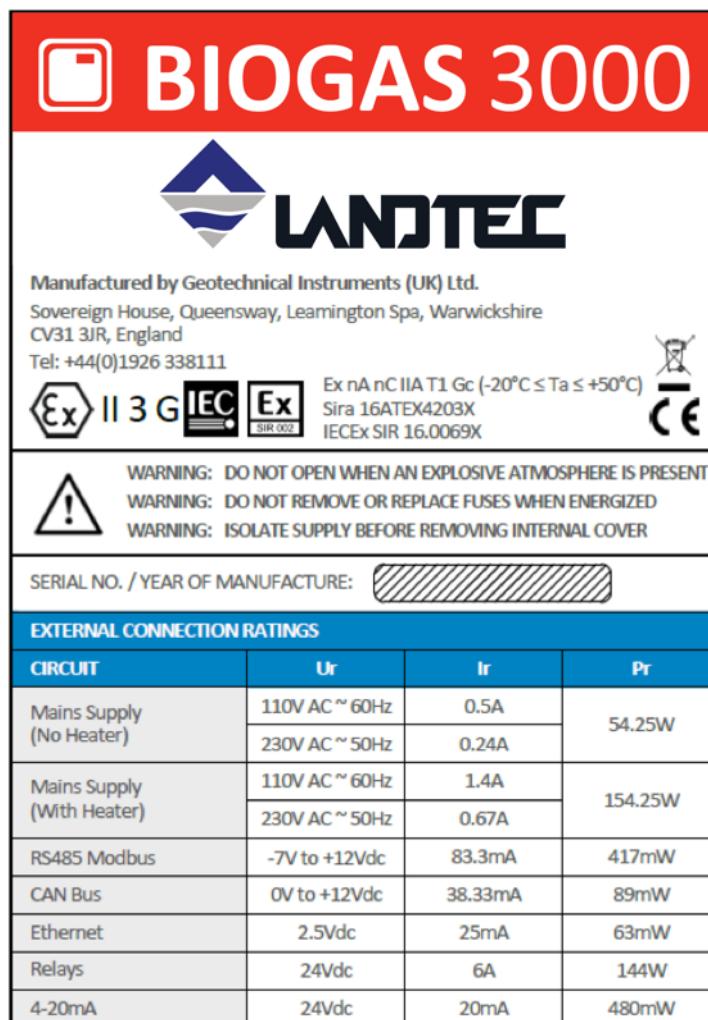


Figure 7 - BIOGAS 3000 electrical label

The mains fuse rating (FS1) of the equipment is 3.15A.

The equipment must be provided with a double-pole switched and fused mains supply. The switch must be mounted as close to the equipment as practicable

possible so that it can be easily reached and clearly identified as the disconnecting device for the system.

The mains cable must be three core cable (live, neutral and earth) and enter the enclosure via a cable gland (see [Cable Gland Selection and Cord Anchorage](#)) through the mains supply customer cable entry point (see annotation 1 on [Figure 3 - BIOGAS 3000 customer connections](#)).

4.9.2 How to Wire the Mains Supply

Warning

Only a qualified person should make electrical connections to the system.

Ensure the power is isolated and the [Protective Cover](#) is removed before wiring to the system.

Failure to connect a suitable earth to the system could result in serious injury.

The equipment must be provided with a double-pole switched and fused mains supply. The switch must be mounted as close to the equipment as practicably possible and clearly identified as the disconnecting device for the system.

Cable glands should meet the requirements of [Cable Gland Selection and Cord Anchorage](#).

Cable insulation and conductor sizes must meet the requirements of [Cable Conductor Sizes and Insulation Requirements](#).

If using armored cable, the armor must not be used as the main earth connection for the BIOGAS 3000. If earthing of the armor is required, this must not be taken from the BIOGAS 3000.

All cables should be crimped with an appropriate insulated ferrule for the size of the cable being used. In addition, the cable insulation must be housed adequately within the protective sheath of the ferrule.


Terminals that are wired should be tightened to a minimum of 0.6N·m. Failure to tighten to this requirement could make the equipment unsafe resulting in a hazard and invalidate the ATEX/IECEx certification.

Refer to annotation 15 on

Figure 2 - BIOGAS 3000 internal components for the location of the mains wiring terminals, and Wiring Diagram 1 - Mains for how to wire the mains cable to the BIOGAS 3000 system. A label within the system identifies the appropriate inputs live (L), earth (E), and neutral (N).



Note: For cable conductor sizes and cable insulation requirements, please refer to section [Cable Conductor Sizes and Insulation Requirements](#).

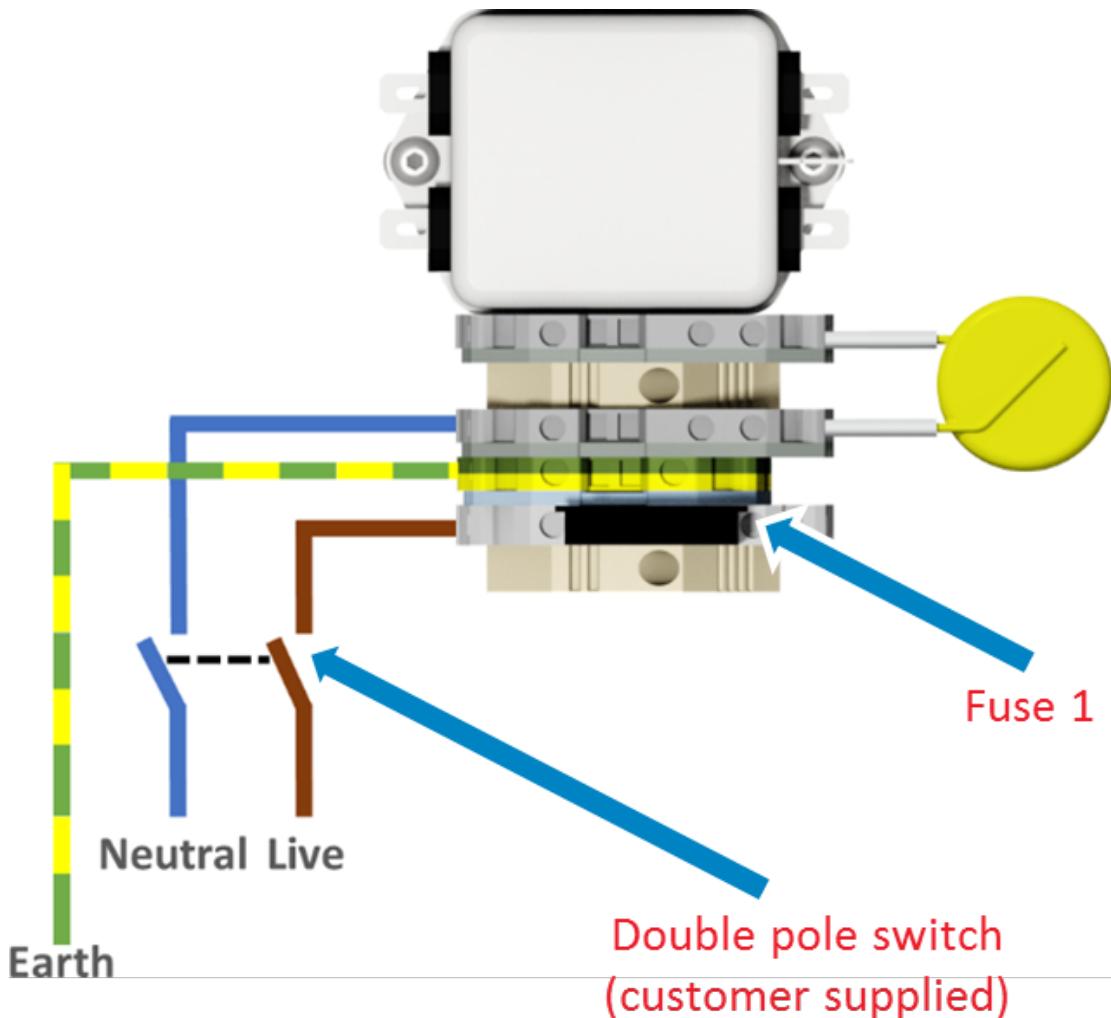

[Wiring Diagram 1 - Mains](#)

4.10 Modbus Digital Output

If Modbus digital outputs are being used, the cable must enter the enclosure via a suitably rated cable gland (see [Cable Gland Selection and Cord Anchorage](#)) and cable (see [Cable Conductor Sizes and Insulation Requirements](#)), through the data outputs customer cable entry point (see annotation 3 on [Figure 3 - BIOGAS 3000 customer connections](#)).

A label within the system identifies the appropriate outputs '+', '−', and 'LG'. Refer to annotation 10 on [Figure 2 - BIOGAS 3000 internal components](#) for the Modbus terminal connections.

 **Warning**

The BIOGAS 3000 Modbus terminals must only be used for standard Modbus communications. No other connections must be made as they could make the equipment unsafe resulting in a hazard and invalidate the ATEX/IECEx certification.

4.10.1 Wiring the BIOGAS 3000 Modbus Outputs

 **Warning**

Only a qualified person should make electrical connections to the system.

Ensure the power is isolated.

Cable glands should meet the requirements of [Cable Gland Selection and Cord Anchorage](#).

Cable insulation and conductor sizes must meet the requirements of [Cable Conductor Sizes and Insulation Requirements](#).

If using armored cable, the armor must not be used as the main earth connection for the BIOGAS 3000. If earthing of the armor is required, this must not be taken from the BIOGAS 3000.

All cables should be crimped with an appropriate insulated ferrule for the size of the cable being used. In addition, the cable insulation must be housed adequately within the protective sheath of the ferrule.

Terminals that are wired should be tightened to a minimum of 0.6N·m. Failure to tighten to this requirement could make the equipment unsafe resulting in a hazard and invalidate the ATEX/IECEx certification.

The input voltage range to the BIOGAS 3000 Modbus terminals must not exceed -7 to +12V and the current must not exceed 83.3mA. Operating outside of this range will invalidate the ATEX/IECEx certification.


Wire the outputs in accordance with [Wiring Diagram 2 – Modbus](#). For optimum performance, it is recommended that screened twisted pair cable be used.



Note: For cable conductor sizes and cable insulation requirements, please refer to section [Cable Conductor Sizes and Insulation Requirements](#).

When wiring the outputs the twisted pairs must be as follows:

Terminal Colour	Wiring Information	Pair
Orange	Signal A (RS485) '+'	Pair one
Blue	Signal B (RS485) '-'	
White	Logic Ground (0V) 'LG'	Pair two

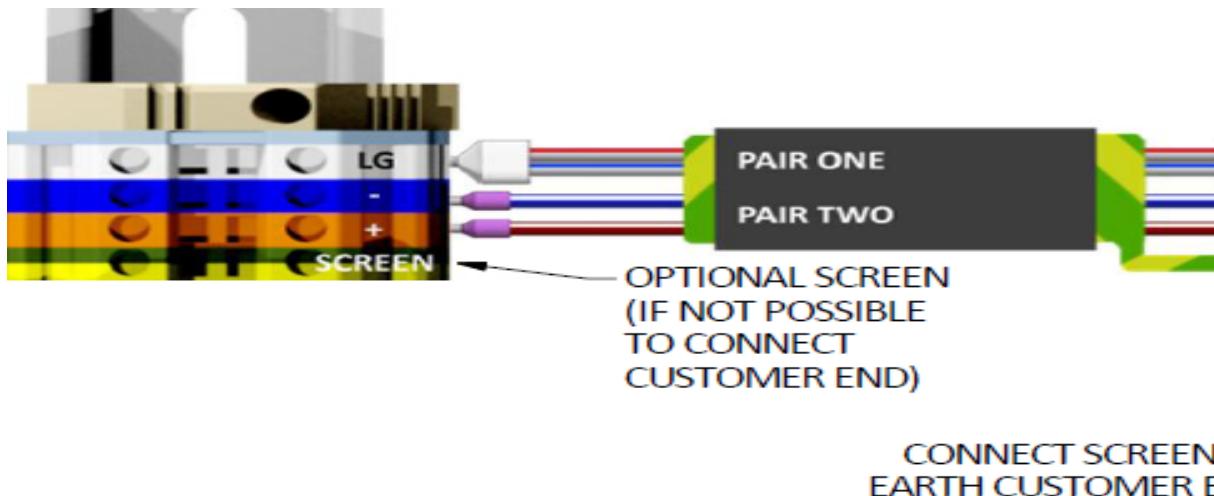

[Wiring Diagram 2 – Modbus](#)

4.10.2 Default Configuration of the BIOGAS 3000 Modbus Port

The BIOGAS 3000 Modbus port has a default configuration of the following:

Node Address	1
Baud Rate	19200
Parity	Even
Stop Bits	1
Termination	Off

The BIOGAS 3000 acts as a slave.
The protocol is MODBUS RTU.

- ☞ Note: A termination resistor of 200 ohms is fitted internally between the positive and negative Modbus signals of the BIOGAS 3000, which must be the last connection on the ‘bus’. The termination resistor can be turned ‘On’ or ‘Off’ via the menu on the BIOGAS 3000 module (see [Configure Modbus Slave](#)). Similarly, the master device on the ‘bus’ should have a termination resistor.
- ☞ Note: The node address, baud rate, parity, and termination are all configurable settings found within the menu of the BIOGAS 3000 module; see section [Configure Modbus Slave](#).

4.10.3 Readable Parameters of the BIOGAS 3000

Below is a table of addresses that can be read from the BIOGAS 3000.

Read-Only Single Bit Registers

Register Address		Parameter	Content Information
(Dec)	(Hex)		
0	0000h	System status	0 – system OK 1 – system fault
1	0001h	Flow status	0 – flow OK 1 – flow fail
2	0010h	Communications status	0 – communications OK 1 – communications error
3	0011h	Catchpot status	0 – catchpot empty 1 – catchpot full

Read-Only 16-Bit Registers

Register Address		Parameter	Content Information
(Dec)	(Hex)		
0	0000h	Run status	0 – running process 1 – running with non-critical fault 2 – stopped by user (outputs frozen) 3 – stopped by user (fixed at safe values) 4 – stopped with critical fault (outputs frozen)
32	0020h	Time and date: year	e.g. 2016
33	0021h	Time and date: Month	1-12
34	0022h	Time and date: day	1-31
35	0023h	Time and date: hour	0-23
36	0024h	Time and date: minute	0-59
37	0025h	Time and date: second	0-59
48	0030h	Current sample point	1-4
128	0080h	Service due: year	e.g. 2016
129	0081h	Service due: month	1-12
130	0082h	Service due: day	1-31
512	0200h	Alarm 1 Status	0 – No alarm 1 – Triggered 2 – Triggered and in recovering zone 4 – Latched 8 – Muted 9 – Triggered alarm and muted 10 – Recovering alarm and muted 12 – Latched and muted
513 to 519	0201h to 0207h	Alarm 2 to alarm 7 Status	Repeated as per alarm 1
768	0300h	Sample point 1 last reading: year	e.g. 2016

769	0301h	Sample point 1 last reading: month	1-12
770	0302h	Sample point 1 last reading: day	1-31
771	0303h	Sample point 1 last reading: hour	0-23
772	0304h	Sample point 1 last reading: minute	0-59
773	0305h	Sample point 1 last reading: second	0-59
1024 to 1029	0400h to 0405h	Sample point 2 last reading time and date	Repeated as per sample point 1
1280 to 1285	0500h to 0505h	Sample point 3 last reading time and date	Repeated as per sample point 1
1536 to 1541	0600h to 0605h	Sample point 4 last reading time and date	Repeated as per sample point 1
832	0340h	Last reading sample point 1: CH ₄	CH ₄ reading x 10 e.g. 61.1% would be 611
833	0341h	Last reading sample point 1: CO ₂	CO ₂ reading x 10 e.g. 38.7% would be 387
834	0342h	Last reading sample point 1: O ₂	O ₂ reading x 10 e.g. 0.5% would be 5
835	0343h	Last reading sample point 1: Internal cell	Internal cell reading e.g. 3500
837	0345h	Last reading sample point 1: External cell	External cell reading e.g. 3500
839	0347h	Last reading sample point 1: Baro	Baro reading e.g. 1025
841	0349h	Last reading sample point 1: Flow	Pump flow reading e.g. 275
1088	0440h	Last reading sample point 2: CH ₄	CH ₄ reading x 10 e.g. 61.1% would be 611
1089	0441h	Last reading sample point 2: CO ₂	CO ₂ reading x 10 e.g. 38.7% would be 387
1090	0442h	Last reading sample point 2: O ₂	O ₂ reading x 10 e.g. 0.5% would be 5

1091	0443h	Last reading sample point 2: Internal cell	Internal cell reading e.g. 3500
1093	0445h	Last reading sample point 2: External cell	External cell reading e.g. 3500
1095	0447h	Last reading sample point 2: Baro	Baro reading e.g. 1025
1097	0449h	Last reading sample point 2: Flow	Pump flow reading e.g. 275
1344	0540h	Last reading sample point 3: CH ₄	CH ₄ reading x 10 e.g. 61.1% would be 611
1345	0541h	Last reading sample point 3: CO ₂	CO ₂ reading x 10 e.g. 38.7% would be 387
1346	0542h	Last reading sample point 3: O ₂	O ₂ reading x 10 e.g. 0.5% would be 5
1347	0543h	Last reading sample point 3: Internal cell	Internal cell reading e.g. 3500
1349	0545h	Last reading sample point 3: External cell	External cell reading e.g. 3500
1351	0547h	Last reading sample point 3: Baro	Baro reading e.g. 1025
1353	0549h	Last reading sample point 3: Flow	Pump flow reading e.g. 275
1600	0640h	Last reading sample point 4: CH ₄	CH ₄ reading x 10 e.g. 61.1% would be 611
1601	0641h	Last reading sample point 4: CO ₂	CO ₂ reading x 10 e.g. 38.7% would be 387
1602	0642h	Last reading sample point 4: O ₂	O ₂ reading x 10 e.g. 0.5% would be 5
1603	0643h	Last reading sample point 4: Internal cell	Internal cell reading e.g. 3500
1605	0645h	Last reading sample point 4: External cell	External cell reading e.g. 3500
1607	0647h	Last reading sample point 4: Baro	Baro reading e.g. 1025
1609	0649h	Last reading sample point 4: Flow	Pump flow reading e.g. 275

Read-Only 32-Bit Registers

Readings stored in two 16-bit read-only registers as a single precision real/floating point number:

Register Address			
(Dec)	(Hex)	Parameter	Content Information
33024	8100h	Last reading sample point 1: CH ₄	CH ₄ reading e.g. 61.1
33026	8102h	Last reading sample point 1: CO ₂	CO ₂ reading e.g. 38.7
33028	8104h	Last reading sample point 1: O ₂	O ₂ reading e.g. 0.5
33030	8106h	Last reading sample point 1: Internal cell	Internal cell reading e.g. 3500
33034	810Ah	Last reading sample point 1: External cell	External cell reading e.g. 3500
33038	810Eh	Last reading sample point 1: Baro	Baro reading e.g. 1025
33042	8112h	Last reading sample point 1: Flow	Pump flow reading e.g. 275
33280	8200h	Last reading sample point 2: CH ₄	CH ₄ reading e.g. 61.1
33282	8202h	Last reading sample point 2: CO ₂	CO ₂ reading e.g. 38.7
33284	8204h	Last reading sample point 2: O ₂	O ₂ reading e.g. 0.5
33286	8206h	Last reading sample point 2: Internal cell	Internal cell reading e.g. 3500
33290	820Ah	Last reading sample point 2: External cell	External cell reading e.g. 3500
33294	820Eh	Last reading sample point 2: Baro	Baro reading e.g. 1025
33298	8212h	Last reading sample point 2: Flow	Pump flow reading e.g. 275
33536	8300h	Last reading sample point 3: CH ₄	CH ₄ reading e.g. 61.1
33538	8302h	Last reading sample point 3: CO ₂	CO ₂ reading e.g. 38.7

33540	8304h	Last reading sample point 3: O ₂	O ₂ reading e.g. 0.5
33542	8306h	Last reading sample point 3: Internal cell	Internal cell reading e.g. 3500
33546	830Ah	Last reading sample point 3: External cell	External cell reading e.g. 3500
33550	830Eh	Last reading sample point 3: Baro	Baro reading e.g. 1025
33554	8312h	Last reading sample point 3: Flow	Pump flow reading e.g. 275
33792	8400h	Last reading sample point 4: CH ₄	CH ₄ reading e.g. 61.1
33794	8402h	Last reading sample point 4: CO ₂	CO ₂ reading e.g. 38.7
33796	8404h	Last reading sample point 4: O ₂	O ₂ reading e.g. 0.5
33798	8406h	Last reading sample point 4: Internal cell	Internal cell reading e.g. 3500
33802	840Ah	Last reading sample point 4: External cell	External cell reading e.g. 3500
33806	840Eh	Last reading sample point 4: Baro	Baro reading e.g. 1025
33810	8412h	Last reading sample point 4: Flow	Pump flow reading e.g. 275



Note: Floating-point numbers consist of two 16-bit words to give a 32-bit single precision floating point number. The first word (e.g. 33802) holds the sign in bit 15, the exponent in bits 14-7, part of the mantissa in bits 6-0. The remaining part of the mantissa is in the next register (e.g. 33803) bits 15 – 0.

4.11 4-20mA Outputs

If analog outputs are being used, the cable must enter the enclosure via a suitably rated cable gland (see [Cable Gland Selection and Cord Anchorage](#)) and cable (see [Cable Conductor Sizes and Insulation Requirements](#)), through the data outputs customer cable entry point (see annotation 3 on [Figure 3 - BIOGAS 3000 customer connections](#)).

The outputs on the BIOGAS 3000 power the loop (24V) to allow the customers system to sink it to ground (0V).

Relays within the equipment can be used to indicate the status of the 4-20mA channel. Refer to section [Configure Relays](#) for more information.



Note: There are various combinations of configuring the system and this operating manual will describe the most common method. If your system does not support this, please contact our technical support team at (800) 968-2026 or email landtec_support@gedenv.com.

4.11.1 General Information

There are two sets of terminals for the 4-20mA signals. One set is a bank of terminals that provide a common 0V or 24V. The other group are double-deck terminals that provide the analogue signal depending on the configuration of the common terminal.

For the common terminals, labels identify the appropriate terminals namely from left to right ('0V', 'T1' through 'T6', '24V'). 'T1' to 'T6' are commoned together using a 3-way bridge connector between either the '0V' or the '24V' terminal.

For the analog channels, labels identify the appropriate terminal on the double-deck namely:

- Top deck: 'CH1A' through 'CH6A'
- Bottom deck: 'CH1B' through 'CH6B'

Refer to annotation 13 in

Figure 2 - BIOGAS 3000 internal components for the terminal location and
Wiring Diagram 3 - 4-20mA circuit for the 4-20mA terminal identification.


4.11.2 Wiring the BIOGAS 3000 to a Current Sinking Input

For this method, the power to the loop is provided by the BIOGAS 3000. The BIOGAS 3000 sources the current.

⚠ Warning	<p>Only a qualified person should make electrical connections to the system.</p> <p>Ensure the power is isolated.</p> <p>Cable glands should meet the requirements of Cable Gland Selection and Cord Anchorage.</p> <p>Cable insulation and conductor sizes must meet the requirements of Cable Conductor Sizes and Insulation Requirements.</p> <p>If using armored cable, the armor must not be used as the main earth connection for the BIOGAS 3000. If earthing of the armor is required, this must not be taken from the BIOGAS 3000.</p> <p>All cables should be crimped with an appropriate insulated ferrule for the size of the cable being used. In addition, the cable insulation must be housed adequately within the protective sheath of the ferrule.</p> <p>Terminals that are wired should be tightened to a minimum of 0.6N·m. Failure to tighten to this requirement could make the equipment unsafe resulting in a hazard and invalidate the ATEX/IECEx certification.</p>
------------------	--

Wire the outputs in accordance with [Wiring Diagram 3 - 4-20mA circuit](#). For optimum performance, it is recommended that screened twisted pair cable be used.

 Note: For cable conductor sizes and cable insulation requirements, please refer to section [Cable Conductor Sizes and Insulation Requirements](#).

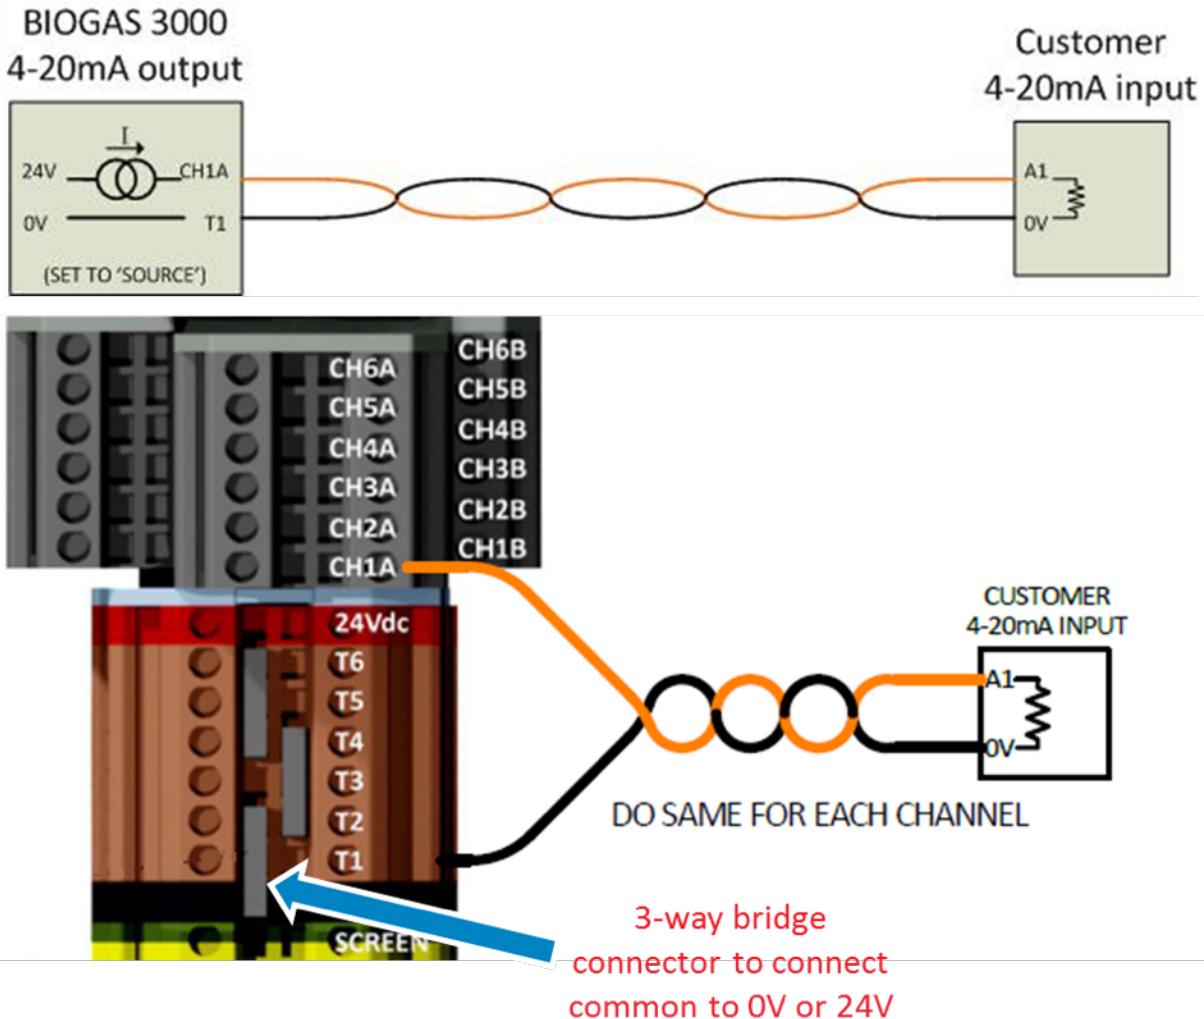

Wiring Diagram 3 - 4-20mA circuit

4.11.3 4-20mA Scaling

The following table details the scaling on the 4-20mA channels:

Gas	4mA Reading	20mA Reading
CH ₄	0.0%	100.0%
CO ₂	0.0%	100.0%
O ₂	0.0%	25.0%
H ₂ S 0-50ppm	Oppm	50ppm
H ₂ S 0-200ppm	Oppm	200ppm
H ₂ S 0-500ppm	Oppm	500ppm
H ₂ S 0-1,000ppm	Oppm	1,000ppm
H ₂ S 0-5,000ppm	Oppm	5,000ppm
H ₂ S 0-10,000ppm	Oppm	10,000ppm
H ₂ 0-1,000ppm	Oppm	1,000ppm
CO 0-1,000ppm	Oppm	1,000ppm

4.12 Relays



Note: The relays are configurable for alarm notifications, sample point monitoring notifications, air purge notifications, catchpot full notifications, and 4-20mA signal notifications. The configuration is set-up via the menu (see section [Configure Relays](#)).

Warning

Only a qualified person should make electrical connections to the system.

Ensure the power is isolated.

Cable glands should meet the requirements of [Cable Gland Selection and Cord Anchorage](#).

Cable insulation and conductor sizes must meet the requirements of [Cable Conductor Sizes and Insulation Requirements](#).

If using armored cable, the armor must not be used as the main earth connection for the BIOGAS 3000. If earthing of the armor is required, this must not be taken from the BIOGAS 3000.

All cables should be crimped with an appropriate insulated ferrule for the size of the cable being used. In addition, the cable insulation must be housed adequately within the protective sheath of the ferrule.


The maximum rated voltage of the relays to 24Vdc. Exceeding this voltage will invalidate the ATEX/IECEx certification.

Terminals that are wired should be tightened to a minimum of 0.6N·m. Failure to tighten to this requirement could make the equipment unsafe resulting in a hazard and invalidate the ATEX/IECEx certification.

The system comes equipped with eight available relays. The relays are volt free changeover contacts. The maximum rated voltage is 24Vdc.

When being used for alarms and fault notifications the relays are normally energized (i.e. will de-energize when an alarm condition is triggered). This means wiring across connections 11 and 12 during a notification will complete the circuit and de-energize the relay. Refer to [Wiring Diagram 4 - Relays](#) for further information.

When being used for sample point indication, catchpot notifications and air purge notifications, the relays are normally de-energized (i.e. will energize when the condition is active). This means wiring across connections 11 and 14 during a notification will complete the circuit and energize the relay. Refer to [Wiring Diagram 4 - Relays](#) for further information.

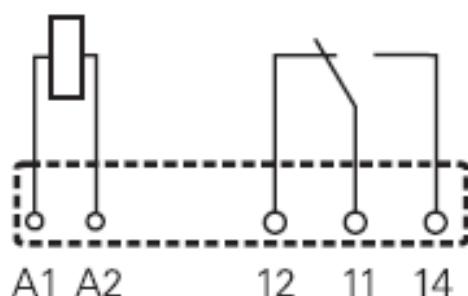

[Wiring Diagram 4 - Relays](#)

-  Note: For terminal conductor sizes and cable insulation requirements, please refer to section [Cable Conductor Sizes and Insulation Requirements](#).

4.13 Profibus Digital Output

The Profibus option for the BIOGAS 3000 is via a Modbus to Profibus converter module. The converter is a Profibus slave module and acts as an interface between the Modbus output of the BIOGAS 3000 and Profibus network.

 **Warning**

The Modbus to Profibus converter module for the BIOGAS 3000 is not ATEX or IECEx certified and must be housed in a non-hazardous location or within a flameproof enclosure. This is the responsibility of the owner of the equipment.

The BIOGAS 3000 Modbus terminals must only be used for standard Modbus communications; no other connections must be made. Connections outside of this could make the equipment unsafe resulting in a hazard and invalidate the ATEX/IECEx certification.



Note: The Profibus module can be purchased as a post-sale accessory and upgraded on site by the user; see LANDTEC part number BG3K.S3 in [BIOGAS 3000 Consumable Products](#).

For wiring to the Modbus terminals from the Profibus module, see section [Modbus Digital Output](#).

4.13.1 Configuration of the Profibus Module

The Profibus module node address is currently set to '02'. This can be adjusted, if required, by using the small rotary switches underneath a cap found on the front face of the module (see [Figure 8 - Profibus module switch location](#)). The '0' is set using switch 'A' and the '2' is set using switch 'B' (see [Figure 9 - Profibus module switch identification](#)).



Note: The Profibus configuration GSD file required for setting up the master Profibus communications is enclosed on the supplied CD.



Figure 8 - Profibus module switch location



Figure 9 - Profibus module switch identification

In addition, the Modbus port on the BIOGAS 3000 must be configured as followed:

Node Address	1
Baud Rate	9600
Parity	Even
Stop Bits	1
Termination	On
The BIOGAS 3000 acts as a slave.	

To configure the Modbus port on the BIOGAS 3000, refer to section [Configure Modbus Slave](#) in this operating manual.

4.13.2 Wiring the Profibus Module

Warning

Only a qualified person should make electrical connections to the system.

Ensure the power is isolated.

Cable glands should meet the requirements of [Cable Gland Selection and Cord Anchorage](#).

Cable insulation and conductor sizes must meet the requirements of [Cable Conductor Sizes and Insulation Requirements](#).

If using armored cable, the armor must not be used as the main earth connection for the BIOGAS 3000. If earthing of the armor is required, this must not be taken from the BIOGAS 3000.

The power supply for the Modbus to Profibus converter module must not be taken from the BIOGAS 3000. Using the supply from the BIOGAS 3000 could make the equipment unsafe resulting in a hazard and invalidate the ATEX/IECEx certification.

All cables should be crimped with an appropriate insulated ferrule for the size of the cable being used. In addition, the cable insulation must be housed adequately within the protective sheath of the ferrule.

Terminals that are wired should be tightened to a minimum of 0.6N·m. Failure to tighten to this requirement could make the equipment unsafe resulting in a hazard and invalidate the ATEX/IECEx certification.

The input voltage range to the BIOGAS 3000 Modbus terminals must not exceed -7 to +12V and the current must not exceed 83.3mA. Operating outside of this range will invalidate the ATEX/IECEx certification.

Wire the outputs in accordance with [Wiring Diagram 5 – Modbus to Profibus converter module wiring](#). In addition, [Wiring Diagram 2 – Modbus](#) may also be useful for wiring to the BIOGAS 3000 Modbus outputs.





For optimum performance, it is recommended that screened twisted pair cable be used.

- ☞ Note: For cable conductor sizes and cable insulation requirements, please refer to section [Cable Conductor Sizes and Insulation Requirements](#).
- ☞ Note: If the distance between the BIOGAS 3000 and the Profibus converter module is greater than 200m, it may be necessary to add a termination resistor at the Profibus end to ensure noise-free communications. In this case, place a 200ohms (0.25W) resistor across the two data line terminals pins one and two on the Furse ESP SL06/I.
- ☞ Note: For further information please contact our technical support team at (800) 968-2026 or email landtec_support@qedenv.com.

When wiring the Modbus connections the twisted pairs must be as follows:

Terminal Colour	Wiring Information	Pair
Orange	Signal A (RS485) '+'	Pair one
Blue	Signal B (RS485) '-'	
White	Logic Ground (0V) 'LG'	Pair two

Installation

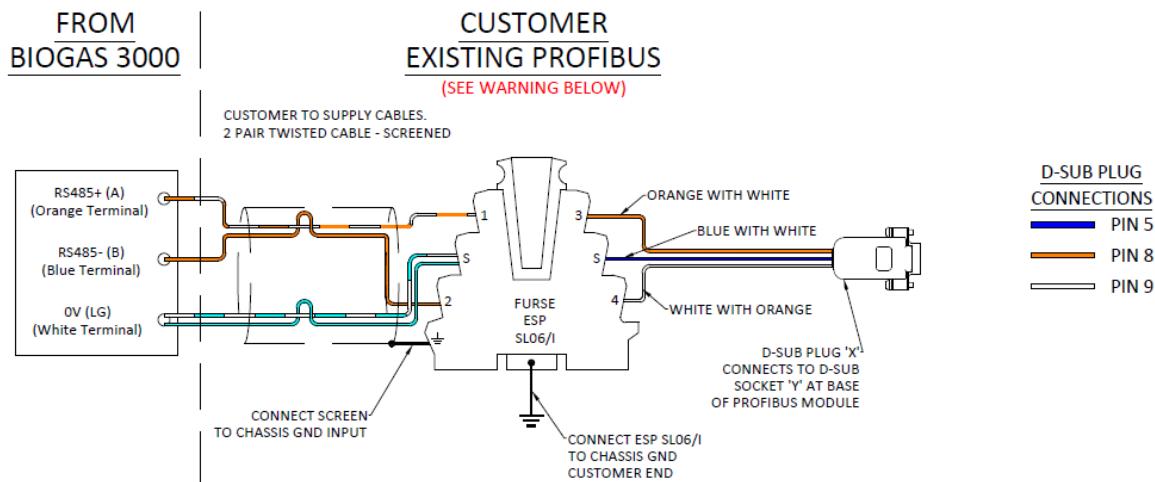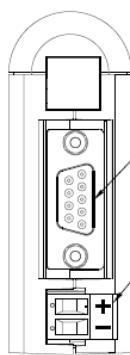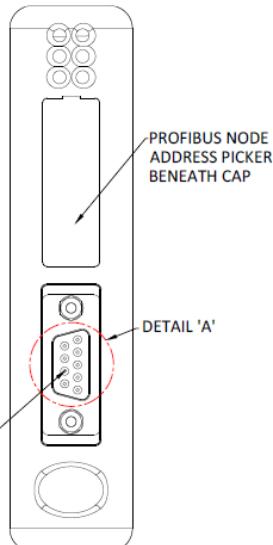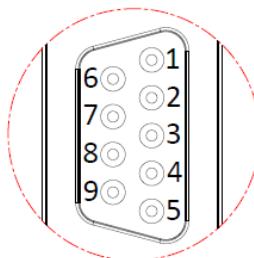**BASE OF PROFIBUS MODULE****FRONT OF PROFIBUS MODULE****VIEW OF DETAIL 'A'**

Profibus Module Pin Details	
Pin No	Input/Output
1	N/A
2	N/A
3	B-Line Rx/Tx
4	RTS
5	GND Bus (Output)
6	+5 Bus (Output)
7	N/A
8	A-Line Rx/Tx
9	N/A

**WARNING:**

The 24Vdc supply must not be from the BIOGAS 3000 system. Taking this supply voltage from the BIOGAS 3000 will invalidate the ATEX & IECEx certification.

The Modbus to PROFIBUS converter module is not ATEX or IECEx Certified and must be housed in a non-hazardous location or within a flameproof enclosure.

NOTE:

D-SUB PLUG 'X' AND CABLE ASSEMBLY CONTAINS AN EMBEDDED RESISTOR NETWORK AND IS SUPPLIED WITH THE PROFIBUS MODULE KIT

PROFIBUS CONNECTOR FROM EXISTING NETWORK TO BE SUPPLIED BY CUSTOMER

Wiring Diagram 5 – Modbus to Profibus converter module wiring

4.13.3 Readable Parameters of the Profibus Module

The data available to the Profibus network is two (16-bit) words, each word occupying two hex address locations as follows:

Module Internal Name	Parameter	Example
0x0000	Sample Point 1 Last Reading: Year	e.g. 0x07E0 (2016 dec) is 2016 or High Byte 7x256 +Low Byte 0x224
0x0002	Sample Point 1 Last Reading: Month	
0x0004	Sample Point 1 Last Reading: Day	
0x0006	Sample Point 1 Last Reading:	
0x0008	Sample Point 1 Last Reading:	
0x000A	Sample Point 1 Last Reading: Second	
0x000C	Sample Point 1 Last Reading: CH4 x 10	e.g. 0x0259 (601 dec) is 60.1% or High Byte 2x256 +Low Byte 0x89
0x000E	Sample Point 1 Last Reading: CO2 x 10	
0x0010	Sample Point 1 Last Reading: O2 x 10	
0x0012	Sample Point 1 Last Reading: Internal Cell	e.g. 0x03E8 (1000 dec) is 1000ppm or High Byte 3x256 +Low Byte 0x232
0x0014	Sample Point 1 Last Reading:	
0x0016	Sample Point 1 Last Reading: Gas Flow	e.g. 0x0122 (290 dec) is 290ml/min or High Byte 1x256 +Low Byte 0x34
0x0018	Barometric Pressure	e.g. 0x03E1 (993 dec) is 993mbar or High Byte 3x256 +Low Byte 0x225
0x001A	Sample Point 2 Last Reading: Year	e.g. 0x07E0 (2016 dec) is 2016 or High Byte 7x256 +Low Byte 0x224
0x001C	Sample Point 2 Last	

	Reading: Month	
0x001E	Sample Point 2 Last Reading: Day	
0x0020	Sample Point 2 Last Reading: Hour	
0x0022	Sample Point 2 Last Reading: Minute	
0x0024	Sample Point 2 Last Reading: Second	
0x0026	Sample Point 2 Last Reading: CH4 x 10	e.g. 0x0259 (601 dec) is 60.1% or High Byte 2x256 +Low Byte 0x89
0x0028	Sample Point 2 Last Reading: CO2 x 10	
0x002A	Sample Point 2 Last Reading: O2 x 10	
0x002C	Sample Point 2 Last Reading: Internal Cell	e.g. 0x03E8 (1000 dec) is 1000ppm or High Byte 3x256 +Low Byte 0x232
0x002E	Sample Point 2 Last Reading: External cell	
0x0030	Sample Point 2 Last Reading: Gas Flow	e.g. 0x0122 (290 dec) is 290ml/min or High Byte 1x256 +Low Byte 0x34
0x0032	Sample Point 3 Last Reading: Year	e.g. 0x07E0 (2016 dec) is 2016 or High Byte 7x256 +Low Byte 0x224
0x0034	Sample Point 3 Last Reading: Month	
0x0036	Sample Point 3 Last Reading: Day	
0x0038	Sample Point 3 Last Reading: Hour	
0x003A	Sample Point 3 Last Reading: Minute	
0x003C	Sample Point 3 Last Reading: Second	
0x003E	Sample Point 3 Last Reading: CH4 x 10	e.g. 0x0259 (601 dec) is 60.1% or High Byte 2x256 +Low Byte 0x89
0x0040	Sample Point 3 Last	

	Reading: CO2 x 10	
0x0042	Sample Point 3 Last Reading: O2 x 10	
0x0044	Sample Point 3 Last Reading: Internal Cell	e.g. 0x03E8 (1000 dec) is 1000ppm or High Byte 3x256 +Low Byte 0x232
0x0046	Sample Point 3 Last Reading: External cell	
0x0048	Sample Point 3 Last Reading: Gas Flow	e.g. 0x0122 (290 dec) is 290ml/min or High Byte 1x256 +Low Byte 0x34
0x004A	Sample Point 4 Last Reading: Year	e.g. 0x07E0 (2016 dec) is 2016 or High Byte 7x256 +Low Byte 0x224
0x004C	Sample Point 4 Last Reading: Month	
0x004E	Sample Point 4 Last Reading: Day	
0x0050	Sample Point 4 Last Reading: Hour	
0x0052	Sample Point 4 Last Reading: Minute	
0x0054	Sample Point 4 Last Reading: Second	
0x0056	Sample Point 4 Last Reading: CH4 x 10	e.g. 0x0259 (601 dec) is 60.1% or High Byte 2x256 +Low Byte 0x89
0x0058	Sample Point 4 Last Reading: CO2 x 10	
0x005A	Sample Point 4 Last Reading: O2 x 10	
0x005C	Sample Point 4 Last Reading: Internal Cell	e.g. 0x03E8 (1000 dec) is 1000ppm or High Byte 3x256 +Low Byte 0x232
0x005E	Sample Point 4 Last Reading: External cell	
0x0060	Sample Point 4 Last Reading: Gas Flow	e.g. 0x0122 (290 dec) is 290ml/min or High Byte 1x256 +Low Byte 0x34
0x0062	Alarm 1	0= No Alarm,

0x0064	Alarm 2	1=Triggered, 2=Triggered and in recovery zone
0x0066	Alarm 3	4 = Latched
0x0068	Alarm 4	8 = Muted
0x006A	Alarm 5	9 = Triggered alarm and muted
0x006C	Alarm 6	A = Recovering alarm and muted
0x006E	Alarm 7	
0x0080	Current sample Point	1 to 4

The Profibus module updates the readings from the BIOGAS 3000 every 2.5 seconds.

Successful communication between the Modbus output and the Profibus module is indicated by the subnet status light '5' on the module showing green. If for any reason the communications is intermittent or fails, the light flashes red or is permanently red, and the value being read is cleared to zero and not frozen with a previous value. Monitoring for an example the year, month and day for non-zero values will gain confidence that communications is ongoing.

4.14 Profinet Digital Output

The Profinet option for the BIOGAS 3000 is via a Modbus to Profinet converter module. The converter is a Profinet slave module and acts as an interface between the Modbus output of the BIOGAS 3000 and Profinet network.

 **Warning**

The Modbus to Profinet converter module for the BIOGAS 3000 is not ATEX or IECEx certified and must be housed in a non-hazardous location or within a flameproof enclosure. This is the responsibility of the owner of the equipment.

The BIOGAS 3000 Modbus terminals must only be used for standard Modbus communications; no other connections must be made. Connections outside of this could make the equipment unsafe resulting in a hazard and invalidate the ATEX/IECEx certification.



Note: The Profinet module can be purchased as a post-sale accessory and upgraded on site by the user, see LANDTEC part number BG3K.S4 in [BIOGAS 3000 Consumable Products](#).

For wiring to the Modbus terminals from the Profibus module, see section [Modbus Digital Output](#).

4.14.1 Configuration of the Profinet Module

The Profinet module can be configured using the GSDML file supplied on the enclosed CD. Follow the instructions on the supplied installation sheet to configure the module for the Profinet sub-network.

In addition, the Modbus port on the BIOGAS 3000 must be configured as followed:

Node Address	1
Baud Rate	9600
Parity	Even
Stop Bits	1
Termination	On
The BIOGAS 3000 acts as a slave.	

To configure the Modbus port on the BIOGAS 3000, refer to section [Configure Modbus Slave](#) in this operating manual.

4.14.2 Wiring the Profinet Module

Warning

Only a qualified person should make electrical connections to the system.

Ensure the power is isolated.

Cable glands should meet the requirements of [Cable Gland Selection and Cord Anchorage](#).

Cable insulation and conductor sizes must meet the requirements of [Cable Conductor Sizes and Insulation Requirements](#).

If using armored cable, the armor must not be used as the main earth connection for the BIOGAS 3000. If earthing of the armor is required, this must not be taken from the BIOGAS 3000.

The power supply for the Modbus to Profinet converter module must not be taken from the BIOGAS 3000. Using the supply from the BIOGAS 3000 could make the equipment unsafe resulting in a hazard and invalidate the ATEX/IECEx certification.

All cables should be crimped with an appropriate insulated ferrule for the size of the cable being used. In addition, the cable insulation must be housed adequately within the protective sheath of the ferrule.

Terminals that are wired should be tightened to a minimum of 0.6N·m. Failure to tighten to this requirement could make the equipment unsafe resulting in a hazard and invalidate the ATEX/IECEx certification.

The input voltage range to the BIOGAS 3000 Modbus terminals must not exceed -7 to +12V and the current must not exceed 83.3mA. Operating outside of this

range will invalidate the ATEX/IECEx certification.

Wire the outputs in accordance with [Wiring Diagram 6 - Modbus to Profinet converter module wiring](#). In addition, [Wiring Diagram 2 – Modbus](#) may also be useful for wiring to the BIOGAS 3000 Modbus outputs.

For optimum performance, it is recommended that screened twisted pair cable be used.


- ☞ Note: For cable conductor sizes and cable insulation requirements, please refer to section [Cable Conductor Sizes and Insulation Requirements](#).
- ☞ Note: If the distance between the BIOGAS 3000 and the Profinet converter module is greater than 200m, it may be necessary to add a termination resistor at the Profinet end to ensure noise-free communications. In this case, place a 200ohms (0.25W) resistor across the two data line terminals pins one and two on the Furse ESP SL06/I.
- ☞ Note: For further information please contact our technical support team at (800) 968-2026 or email landtec_support@qedenv.com.

When wiring the Modbus connections the twisted pairs must be as follows:


Terminal Colour	Wiring Information	Pair
Orange	Signal A (RS485) '+'	Pair one
Blue	Signal B (RS485) '-'	
White	Logic Ground (0V) 'LG'	Pair two

72 BIOGAS 3000 Operating Manual


Installation

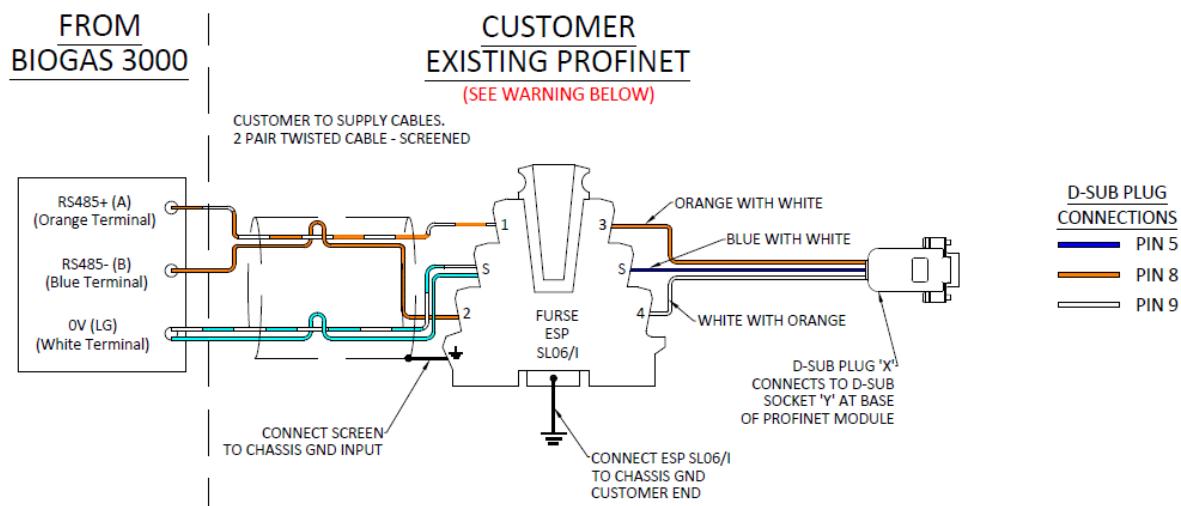

BASE OF PROFINET MODULE

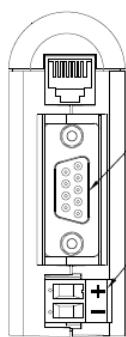


 D-SUB SOCKET 'Y' CONNECTS TO D-SUB PLUG 'X'
24V POWER SUPPLY SUPPLIED BY CUSTOMER (SEE WARNING BELOW)




The 24Vdc supply must not be from the BIOGAS 3000 system. Taking this supply voltage from the BIOGAS 3000 will invalidate the ATEX & IECEx certification.
The Modbus to Profibus converter module is not ATEX or IECEx Certified and must be housed in a non-hazardous location or within a flameproof enclosure.

FRONT OF PROFINET MODULE

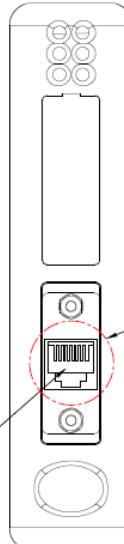

CUSTOMER CONNECTION TO EXISTING PROFINET NETWORK

VIEW OF DETAIL 'A'

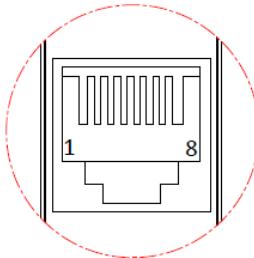

Profibus Module Pin Details	
Pin No	Input/Output
1	TD+
2	TD-
3	RD+
6	RD-
4 , 5, 7, 9	Termination

NOTE:

D-SUB PLUG 'X' AND CABLE ASSEMBLY IS SUPPLIED WITH THE PROFINET MODULE KIT

PROFINET CONNECTOR FROM EXISTING NETWORK TO BE SUPPLIED BY CUSTOMER

Wiring Diagram 6 - Modbus to Profinet converter module wiring

4.14.3 Readable Parameters of the Profinet Module

The data available to the Profinet network is two (16-bit) words, each word occupying two hex address locations as follows:

Module Internal Name	Parameter	Example
0x0000	Sample Point 1 Last Reading: Year	e.g. 0x07E0 (2016 dec) is 2016 or High Byte 7x256 +Low Byte 0x224
0x0002	Sample Point 1 Last Reading: Month	
0x0004	Sample Point 1 Last Reading: Day	
0x0006	Sample Point 1 Last Reading:	
0x0008	Sample Point 1 Last Reading:	
0x000A	Sample Point 1 Last Reading: Second	
0x000C	Sample Point 1 Last Reading: CH4 x 10	e.g. 0x0259 (601 dec) is 60.1% or High Byte 2x256 +Low Byte 0x89
0x000E	Sample Point 1 Last Reading: CO2 x 10	
0x0010	Sample Point 1 Last Reading: O2 x 10	
0x0012	Sample Point 1 Last Reading: Internal Cell	e.g. 0x03E8 (1000 dec) is 1000ppm or High Byte 3x256 +Low Byte 0x232
0x0014	Sample Point 1 Last Reading:	
0x0016	Sample Point 1 Last Reading: Gas Flow	e.g. 0x0122 (290 dec) is 290ml/min or High Byte 1x256 +Low Byte 0x34
0x0018	Barometric Pressure	e.g. 0x03E1 (993 dec) is 993mbar or High Byte 3x256 +Low Byte 0x225
0x001A	Sample Point 2 Last Reading: Year	e.g. 0x07E0 (2016 dec) is 2016 or High Byte 7x256 +Low Byte 0x224
0x001C	Sample Point 2 Last	

	Reading: Month	
0x001E	Sample Point 2 Last Reading: Day	
0x0020	Sample Point 2 Last Reading: Hour	
0x0022	Sample Point 2 Last Reading: Minute	
0x0024	Sample Point 2 Last Reading: Second	
0x0026	Sample Point 2 Last Reading: CH4 x 10	e.g. 0x0259 (601 dec) is 60.1% or High Byte 2x256 +Low Byte 0x89
0x0028	Sample Point 2 Last Reading: CO2 x 10	
0x002A	Sample Point 2 Last Reading: O2 x 10	
0x002C	Sample Point 2 Last Reading: Internal Cell	e.g. 0x03E8 (1000 dec) is 1000ppm or High Byte 3x256 +Low Byte 0x232
0x002E	Sample Point 2 Last Reading: External cell	
0x0030	Sample Point 2 Last Reading: Gas Flow	e.g. 0x0122 (290 dec) is 290ml/min or High Byte 1x256 +Low Byte 0x34
0x0032	Sample Point 3 Last Reading: Year	e.g. 0x07E0 (2016 dec) is 2016 or High Byte 7x256 +Low Byte 0x224
0x0034	Sample Point 3 Last Reading: Month	
0x0036	Sample Point 3 Last Reading: Day	
0x0038	Sample Point 3 Last Reading: Hour	
0x003A	Sample Point 3 Last Reading: Minute	
0x003C	Sample Point 3 Last Reading: Second	
0x003E	Sample Point 3 Last Reading: CH4 x 10	e.g. 0x0259 (601 dec) is 60.1% or High Byte 2x256 +Low Byte 0x89
0x0040	Sample Point 3 Last	

	Reading: CO2 x 10	
0x0042	Sample Point 3 Last Reading: O2 x 10	
0x0044	Sample Point 3 Last Reading: Internal Cell	e.g. 0x03E8 (1000 dec) is 1000ppm or High Byte 3x256 +Low Byte 0x232
0x0046	Sample Point 3 Last Reading: External cell	
0x0048	Sample Point 3 Last Reading: Gas Flow	e.g. 0x0122 (290 dec) is 290ml/min or High Byte 1x256 +Low Byte 0x34
0x004A	Sample Point 4 Last Reading: Year	e.g. 0x07E0 (2016 dec) is 2016 or High Byte 7x256 +Low Byte 0x224
0x004C	Sample Point 4 Last Reading: Month	
0x004E	Sample Point 4 Last Reading: Day	
0x0050	Sample Point 4 Last Reading: Hour	
0x0052	Sample Point 4 Last Reading: Minute	
0x0054	Sample Point 4 Last Reading: Second	
0x0056	Sample Point 4 Last Reading: CH4 x 10	e.g. 0x0259 (601 dec) is 60.1% or High Byte 2x256 +Low Byte 0x89
0x0058	Sample Point 4 Last Reading: CO2 x 10	
0x005A	Sample Point 4 Last Reading: O2 x 10	
0x005C	Sample Point 4 Last Reading: Internal Cell	e.g. 0x03E8 (1000 dec) is 1000ppm or High Byte 3x256 +Low Byte 0x232
0x005E	Sample Point 4 Last Reading: External cell	
0x0060	Sample Point 4 Last Reading: Gas Flow	e.g. 0x0122 (290 dec) is 290ml/min or High Byte 1x256 +Low Byte 0x34
0x0062	Alarm 1	0= No Alarm,

0x0064	Alarm 2	1=Triggered, 2=Triggered and in recovery zone
0x0066	Alarm 3	4 = Latched
0x0068	Alarm 4	8 = Muted
0x006A	Alarm 5	9 = Triggered alarm and muted
0x006C	Alarm 6	A = Recovering alarm and muted
0x006E	Alarm 7	
0x0080	Current sample Point	1 to 4

The Profinet module updates the readings from the BIOGAS 3000 every 2.5 seconds.

Successful communication between the Modbus output and the Profinet module is indicated by the subnet status light '5' on the module showing green. If for any reason the communications is intermittent or fails, the light flashes red or is permanently red, and the value being read is cleared to zero and not frozen with a previous value. Monitoring for an example the year, month and day for non-zero values will gain confidence that communications is ongoing.

4.15 Heater Option

If purchased at the point of sale, the equipment will be fitted with a 100W heater (suitable for the relevant mains input voltage), control thermostat, and enclosure insulation. The thermostat is pre-set to 15°C (59°F) and cannot be adjusted.

4.16 Final Checks

- Ensure all gas connections to the system are leak free – refer to section [Pressure Test](#) of this operating manual for instructions on how to perform this.
- Ensure the gas inlet and gas outlet ball valves are open (refer to annotation 12 on
- [Figure 2 - BIOGAS 3000 internal](#) components) these must be in the vertical position.
- Ensure the drain ball valve, if fitted, is closed (see annotation 9 on
- [Figure 2 - BIOGAS 3000 internal](#) components), this must be in the horizontal position.
- Ensure the calibration ball valve is closed (see annotation 10 on
- [Figure 2 - BIOGAS 3000 internal](#) components), this must be in the vertical position.
- Turn the power on to the system. Within one minute of power being applied, the module will turn on and display the BIOGAS 3000 logo, shortly followed by the ‘system self-test’ screen (see [Screen 2 - System Self-Test](#)).
- The first time the module is started after the self-test has successfully completed, the ‘first time run set-up wizard’ will begin – please refer to section [First Time Run Set-up](#) in this manual for details of this process.
- It is strongly recommended that a known concentration of gas be passed through the system to ensure that it still reading correctly following installation. Refer to the [Gas Check and Calibration](#) section of this operating manual for further information on this process.

Note: For further information please contact our technical support team at (800) 968-2026 or email landtec_support@qedenv.com.

5 General Operating Instructions

 **Warning** Do not open when an explosive atmosphere is present.

5.1 Switching the BIOGAS 3000 System On

- 1) The module will automatically turn on when power to the system is switched on. If this does not happen, refer to the [Problem Solving](#) section of this operating manual.

 Note: It can take up to one minute for the BIOGAS 3000 module to power on. If it does not turn on at the point power to the system is applied, please wait one minute before pressing any keys on the module.

- 2) If the power on is successful, the 'LANDTEC BIOGAS 3000' logo will appear on screen and then the 'System Self-Test' will commence.




Screen 1 - Power on

5.2 Self-Test

 Note: If the system has an invalid time and date setting, the operator will be prompted to correct this before a self-test commences.

When switched on the module will perform a pre-determined self-test sequence taking approximately sixty seconds. During the self-test, the percentage complete is shown and remains on screen until the self-test is completed.

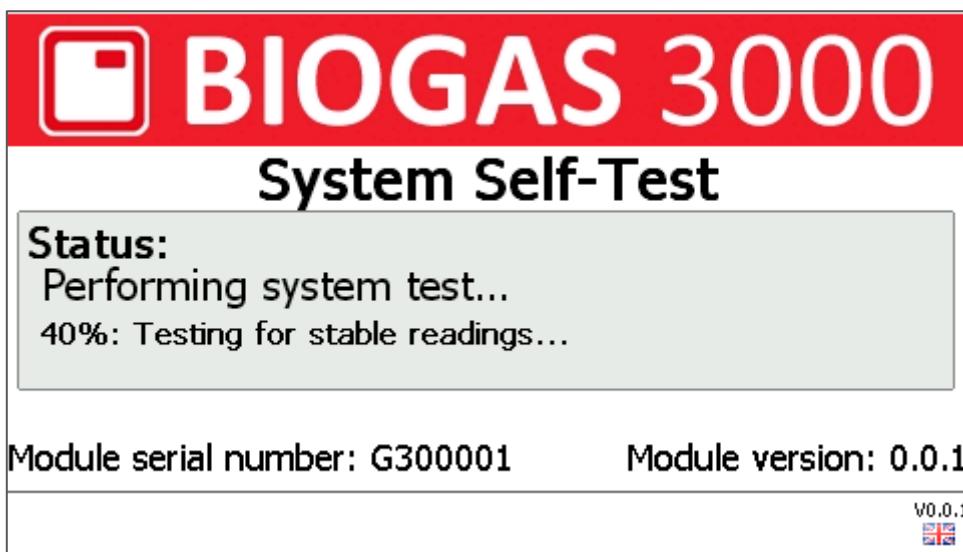


Screen 2 - System Self-Test

During this time, many of the system's functions are tested, including:

- Testing of the CH4, CO2, O2, reference, barometer, internal cell, external cell, and transducers is performed continuously over a short period to check for faults and instability
- The pump is switched on and the system checked for blockages
- The next service due date is checked
- Valid communications to the Interface PCB is checked
- Test whether the 'first time run set-up' is required.


If no faults are found, then the first time set-up or monitoring will begin.

- ☞ Note: After completion, if any non-critical failures occur then [Screen 3 - Self-test finished with warnings](#) screen is shown.
- ☞ Note: If the fault is 'service overdue' or a channel warning (non-critical) then the user can continue to the next stage by pressing the right soft key 'Continue'. The BIOGAS 3000 will continue automatically after thirty seconds if continue is not pressed.
- ☞ Note: If any critical faults occur, refer to section [Critical Faults](#).

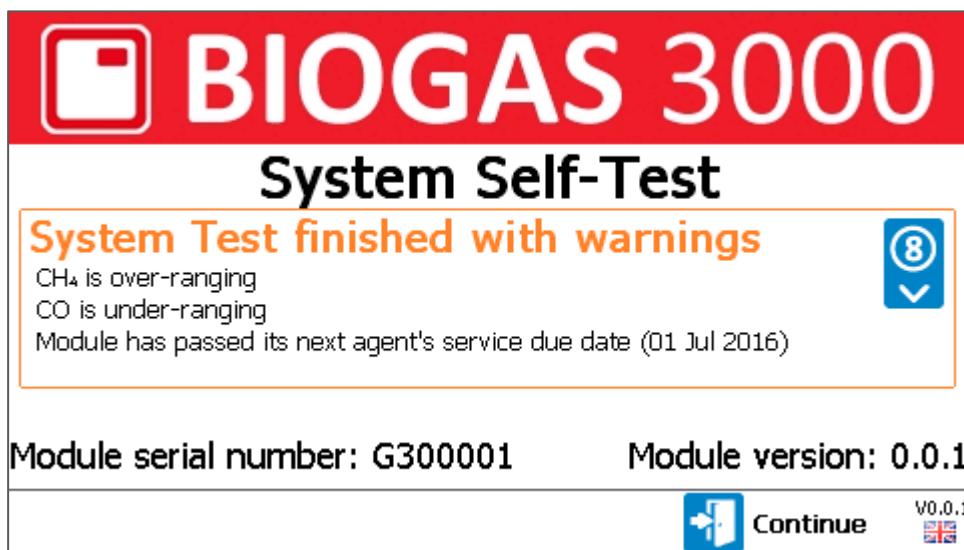*Screen 3 - Self-test finished with warnings*

5.3 First Time Run Set-up

- When switching on the module for the first time the system will detect the first time run conditions and run set-up mode. The BIOGAS 3000 is designed to be fully configurable by the end-user without LANDTEC support or configuration.

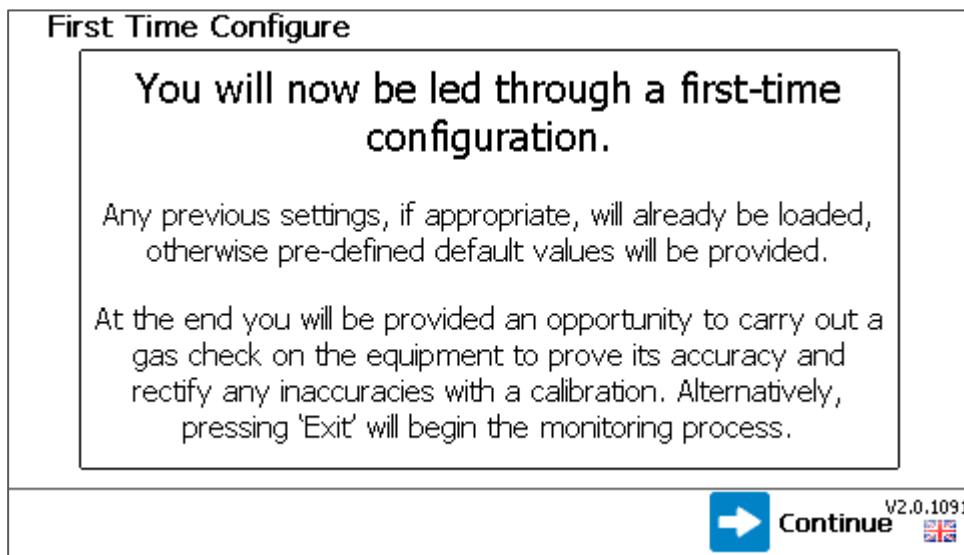*Screen 4 - First time run set-up*

- Press the right soft key to 'Continue'.
- Configure the time that the daily air purge will commence. For more information on how to do this, refer to section [Daily Air Purge](#).

 Note: This option will only be present on BG3KE variants.

- 4) Configure the sampling options for the various sample points. For more information on how to do this, refer to section [Sample Times](#).


 Note: On a BG3KE variant without an external sensor, this option is not present.

 Note: On a BG3KE variant with an external sensor, this screen will be specifically for the external sensor sampling option only as the rest of the system will measure continuously.

- 5) Customise the relay configuration. For more information on how to do this, refer to section [Configure Relays](#).
- 6) Configure alarms (if set during the relay configuration option). For more information on how to do this, refer to section [Configure Alarms](#).
- 7) Configure Modbus slave (if being used). For more information on how to do this, refer to section [Configure Modbus Slave](#).
- 8) Configure analogue outputs (if being used). For more information on how to do this, refer to section [Configure Analog Outputs](#).
- 9) Define whether an administrator passcode is required on the system. For more information on how to do this, refer to section [Admin Passcode](#).
- 10) Once the first time run set-up is complete, you will arrive at [Screen 28 - Gas Check](#). To perform this, refer to section [Gas Check and Calibration](#). To skip and begin monitoring, press the right soft key to 'Exit' (not recommended).

5.4 Gas Readings Screen

Screen 5 - Gas readings is considered the normal operating screen and all options are carried out from this starting point:

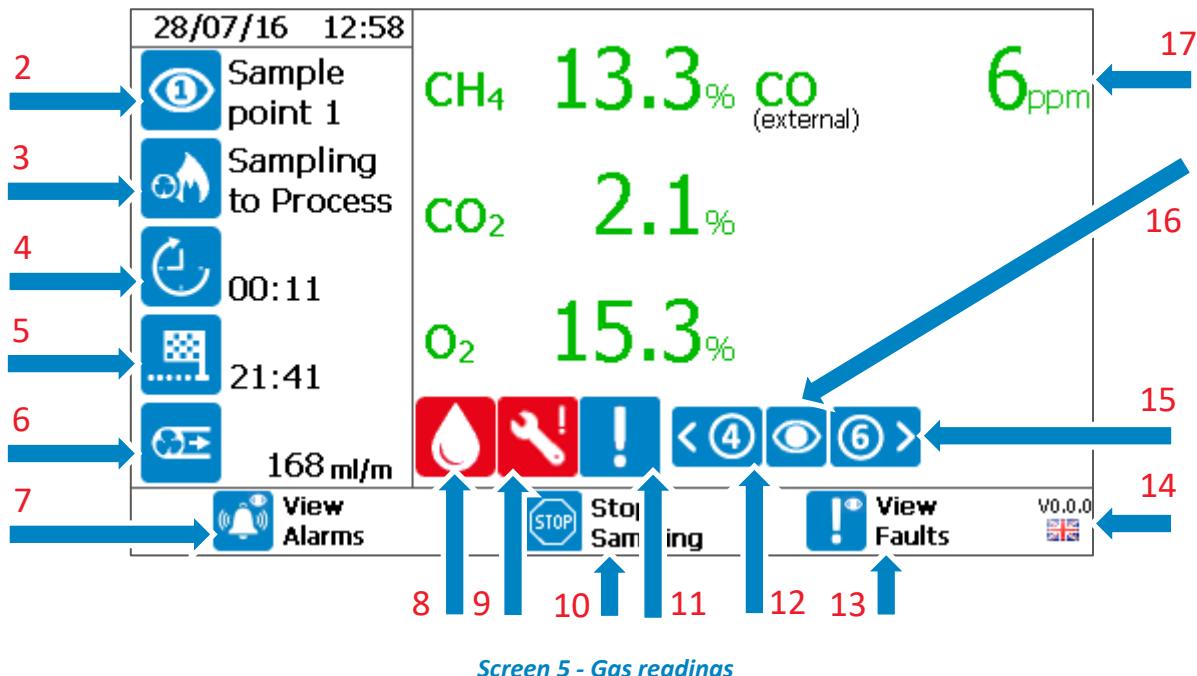

Note: The data shown on this display will be dependent on the system variant and the option(s) that was selected at the point of sale.

1. Time and date

Displays the time and date and is continuously updated.

2. Sample point status

This indicates to the user the current sample point being monitored.



Sample point 1



Sample point 2



Sample point 3



Sample point 4



Idle – waiting for next cycle to begin.

3. Current operation

Details the current operation for the sample point and cycle:



Sampling from sample point



System air purge following sample



Idle – waiting for next cycle to begin

4. Operation time remaining

This is the time remaining for the current operation.



5. Cycle time remaining

This is the time remaining for the complete cycle. When it counts to zero, the next cycle will commence, thus starting at sample point 1 again.



6. Pump flow rate

This is the pump flow rate in ml/min. If this drops below 75ml/min, the reading will have an amber background and the system will flow fail and stop sampling after fifteen seconds – see [Low Flow / Flow Fail](#) for more information.



7. View alarms

Accessed using the left soft key, it takes the user to the alarm summary screen. See [Alarms](#) section.



8. Catchpot full icon

Indicates to the user that there is liquid in the catchpot and it needs emptying.



9. Service icon

An indication to the user that the module is due for service. See [Service](#) section.



10. Stop sampling

Press the middle soft key to stop the sample process and freeze the outputs at their last known value. This can be useful when maintenance on site may be required. See [Stop Sampling](#) section.



11. Non-critical fault warning

This icon displays when there is a non-critical fault present on the system. A non-critical fault is a fault that will not stop the system from functioning. See [Fault Detection](#) for more information.



12. Scroll left

Use key '4' to scroll through the previously stored gas readings. This will display the readings in memory for the data being output for the particular sample point shown.



13. View faults

Press the right soft key to view the faults summary screen.



14. Module firmware/language

Displays the firmware version of the module and current language setting.

15. Scroll right

Use key '6' to scroll through previously stored gas readings. This will display the readings in memory for the data being output for the particular sample point shown.



16. Current view

Indicates which sample point the data on screen is representing with a number in the eye. These icons are the same as the sample point status icons. An eye without a number represents live readings for the current sample point being monitored.

17. Gas readings

Displays the readings for the gases available. Green text indicates the reading is live. Blue text indicates the reading is a stored reading against the sample point. If the gas channel is an external cell, "(external)" will be shown below the gas name.


5.5 Alarms

5.5.1 Notification



Note: For information on how to set alarms, please refer to section [Configure Alarms](#).

When an alarm condition has been met, the alarming channel will become highlighted with a bell icon and the 'View Alarm' soft key becomes red. An example screen is shown below of a channel with an active alarm.

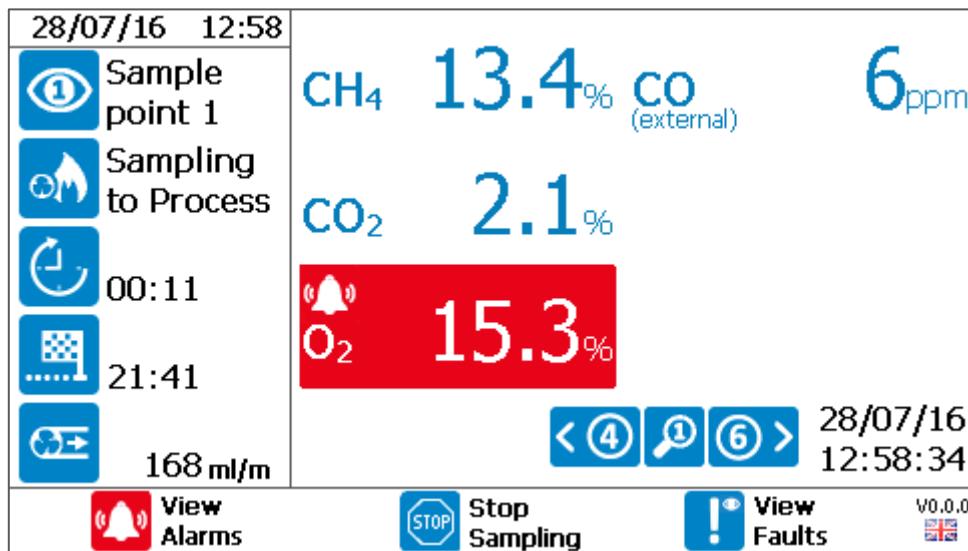

Screen 6 - Alarm notification

The following notifications are available on the BIOGAS 3000:

Icon	Definition
	The alarm is active and the associated relay has been de-energized.
	The alarm is active but the channel is within its recovery zone. The associated relay remains de-energized until the recovery value is met.
	This is the latched alarm indicator. This indicates a channel has alarmed and recovered. During this notification, the relay remains de-energized until the alarm notification has been acknowledged by the operator.
	The alarm has been silenced by the operator and the associated relay is energized. The alarm condition on the system remains active in the background until the recovery condition is met.

5.5.2 Viewing Alarms

To view an alarm, from the 'Gas Readings Screen' press the left soft key to go to [Screen 7 - Alarms summary](#):

Alarms Summary

< ④ Relay 2 ⑥ >

Condition O₂ > 4.0% on SP 1
Status Triggered
Details SP 1 Triggered at 08:48.16 26/07/2016

 **Mute**  **Exit** V0.0.1 

Screen 7 - Alarms summary

This screen will detail all alarm conditions set by the operator. It will detail the condition for the alarm to trigger, the status (inactive, triggered, latched, or recovering), the time and date of the alarm, and the associated relay.


Pressing key '4' and key '6' scrolls the user through the relays available for alarms. This will also summarize inactive alarms.

Pressing the left soft key ('Mute') on an active alarm will disable the alarm and re-energizes the associated relay until the condition is cleared.

Pressing the left soft key ('Clear Latch') on a latched alarm will unlatch the alarm, clearing its status and re-energizes the associated relay.

5.6 Stop Sampling

From the 'Gas Readings Screen', pressing the middle soft key will 'Stop Sampling'. At this point, the sampling process is stopped, all solenoid valves are closed, and the outputs are frozen at their last known value. The following screen will be presented to the user:

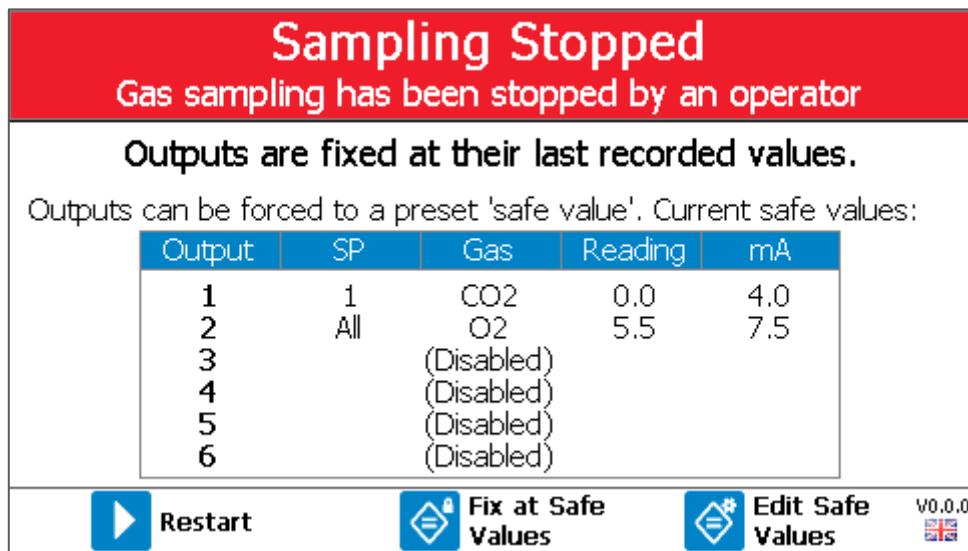

Screen 8 - Sampling Stopped

Pressing the left soft key will ‘Restart’ the sampling process and return the user to the ‘Gas Readings Screen’.

Pressing the middle soft key will fix the outputs to the pre-determined safe values. These are shown in the table onscreen.

Pressing the right soft key allows the user to edit the safe values. For more information on this, please see [Configure Analog Outputs](#).

5.7 Menu

The menu enables the operator to select options to set-up specific parameters and perform operational tasks.

The menu is divided in to three areas:

- 1) Settings – this menu appears from the ‘Gas Readings Screen’ when pressing the ‘Menu’ key
- 2) Calibration – this menu is accessed from either the ‘Settings’ menu or the ‘Device Info’ menu by pressing the middle soft key
- 3) Device Info – the device information menu is accessed from either the ‘Settings’ menu by pressing the left soft key.

5.7.1 Settings Menu

Depending on the option chosen at manufacture, the following options are available from the settings menu:

1) Sample Times

- ☞ Note: On a BG3KE with an external cell, this option will be for the external cell sample options as the rest of the system runs continuously.
- ☞ Note: On a BG3KE without an external cell, this option will be the daily air purge.

2) Configure Alarms

3) Configure Interface

4) Adjust Backlight


5) Set Time and Date

6) Admin Passcode

7) Daily Air Purge


- ☞ Note: This option is only available on BG3KE variants.

An example of the 'Settings' menu is shown below.

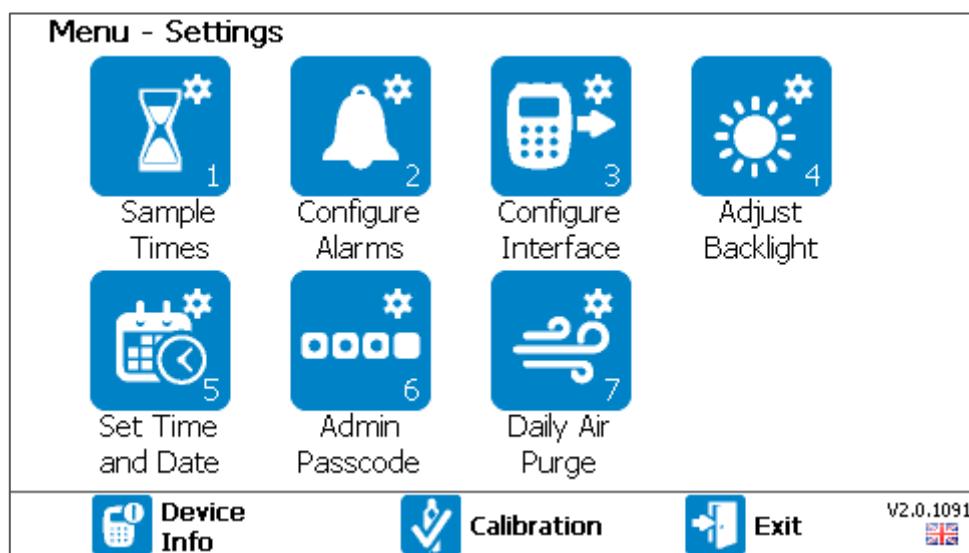

Screen 9 - Settings Menu

Following a change to ‘Sample Times’, ‘Configure Interface’, or ‘Daily Air Purge’, when returning to the ‘Gas Readings Screen’, the system will apply the new configuration once ‘Confirm’ is pressed using the left soft key.

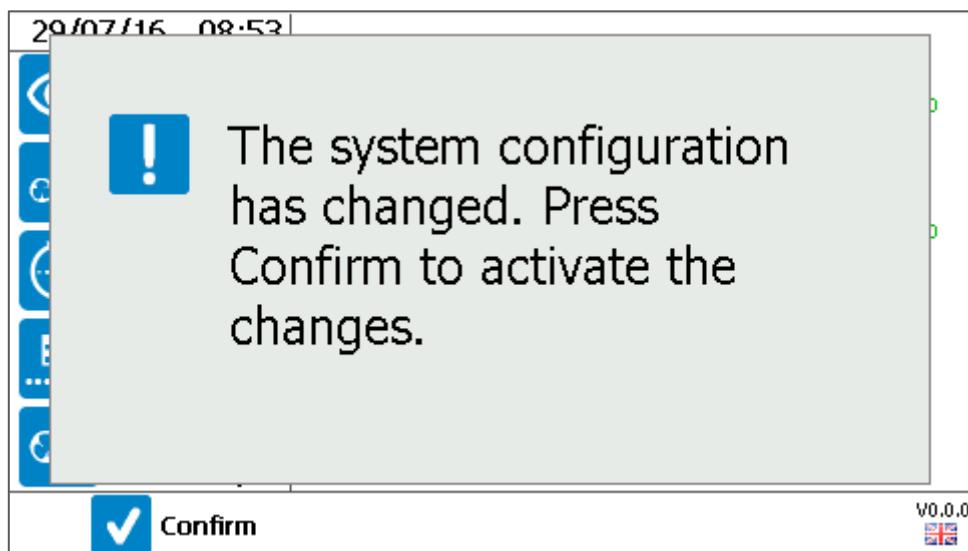

Screen 10 - Confirm new configuration

5.7.1.1 Sample Times

This option allows the operator to define the duration of each sample point (or the external sensor if the system is a BG3KE).

- 1) From the ‘Settings’ menu press key ‘1’ to select the ‘Sample Times’ option. A summary screen will be shown.

Configure Sample Times		
SP	Duration	Air Purge
1	11:00	00:03:00
2	01:30	00:03:00
3	01:30	00:03:00
4	01:30	00:03:00
Total	00:27:30	
Cycle	00:46:30	

At the bottom of the screen are two buttons: 'Edit' (with a pencil icon) and 'Exit' (with a right-pointing arrow icon). To the right of the buttons is the version number 'V0.0.0' and the UK flag.

Screen 11 - Configure Sample Times (Non-E variant)

Configure Sample Times

SP	Duration	Air Purge
External Cell	01:30	00:03:00
Total	00:11:00	
Sample	00:30:00	



Edit



Exit

V0.0.1
EN

Screen 12 - Configure Sample Times (E variant)

- 2) Press the right soft key to 'Exit' without saving any changes.
- 3) To edit a parameter, press the middle soft key to enter 'Edit' mode.
- 4) Using the scroll keys, select a sample point to edit (highlighted in the table) and select the field with the \leftarrow key.



Note: In addition to each sample point being editable, the 'Sample' time is also an editable parameter. This is the total time of the cycle before sample point 1 (or external cell) is monitored again.

Edit Sample Point Times

1
Duration01:30
mm:ss2
Air Purge00:03:00
hh:mm:ss

Exit

V0.0.0
EN

Screen 13 - Edit Sample Point Times

- 5) Press key '1' to edit the sample duration or key '2' to edit the air purge duration.
- 6) Key in a suitable time for the system and store using the \leftarrow key.

 Note: Both parameters have minimum and maximum values that can be entered. If a time is outside of this range, the user will be prompted to enter a more suitable time.

- 7) Once a parameter has been changed, the left soft key becomes available to 'Save and Exit'. Once pressed, the user will be returned to the summary screen.
- 8) Press the right soft key to 'Exit' back to the 'Settings' menu.

5.7.1.2 Configure Alarms

This option allows the operator to define alarm conditions for a gas on any given sample point.

The relays operate in fail-safe mode. This means the relay is normally energized. When an alarm condition is met, the relay de-energizes.

 Note: The quantity of available alarms will be dependent on the relay configuration, see [Configure Relays](#) section. The relay configuration should be determined before configuring the alarms.

- 1) From the 'Settings' menu press key '2' to select the 'Configure Alarms' option.

Configure Alarms							
Relay	Channel	SP	Type	Mode	Value	Recovery	
1	CH4	1	>	Normal	60.0	50.0	
2	O2	1	>	Normal	4.0	0.0	
3		1	Disabled	Normal	0.0	0.0	
4		1	Disabled	Normal	0.0	0.0	
6		1	Disabled	Normal	0.0	0.0	

 Edit
  Exit
 V0.0.1

Screen 14 - Configure Alarms

- 2) Press the right soft key to 'Exit' without saving any changes.
- 3) To 'Edit' a parameter, press the middle soft key to enter edit mode. Using the scroll keys, select a parameter to edit (highlighted in the table) and select the field with the ↲ key.

Definitions

Term	Definition
SP	The sample point (1, 2, 3, 4, or All) for which the alarm condition is to be monitored.
>	Alarm to trigger above the value.
<	Alarm to trigger below the value.
Disabled	Alarm is disabled and will not activate.
Normal	When an alarm has occurred and the gas concentration reaches its recovery value, the alarm will deactivate.
Latched	When an alarm has occurred and the gas concentration reaches its recovery value, the alarm will remain activate until cleared by the operator.
Value	The gas concentration for which the alarm condition will become active.
Recovery	The gas concentration for which the alarm condition will recover.

- 4) Use the scroll keys to select the chosen parameter and select using the ↲ key, or use the keypad to enter the gas concentration for the value followed by the ↲ key to confirm.

- 5) Once a parameter has been changed, the left soft key becomes available to 'Save and Exit'. Once pressed, the user will be returned to the 'Settings' menu.

 Note: Alarm settings become active immediately.

 Note: When any alarm setting is updated all active alarms will reset.

5.7.1.3 Configure Interface

This option allows the operator to configure the various interface options with the system to the client's side. There are three options in this sub-menu:

- 1) Configure Analog Outputs
- 2) Configure Modbus Slave
- 3) Configure Relays

To 'Exit' this screen press the right soft key to return to the 'Settings' menu.

Configure Analog Outputs

This option allows the user to configure the six 4-20mA analog outputs. The user can define a gas on any given sample point and set the safe-value that is output should the customer select this option via the [Stop Sampling](#) feature.

 Note: The safe value is a gas concentration that will force the 4-20mA and Modbus registers to pre-fixed values. This is to prevent erroneous errors or alarm conditions in the user's remote system whilst maintenance is being performed on the BIOGAS 3000 or any other plant equipment.

- 1) From the 'Configure Interface' menu press key '1' to select the 'Configure Analog Outputs' option.

Configure Analogue Outputs					
Output	Sample Point	Gas	Safe Value	mA	
1	1	CH4	55.0	12.8	
2	1	CO2	40.0	10.4	
3	1	O2	0.0	0.0	
4	Disabled		0.0	0.0	
5	Disabled		0.0	0.0	
6	Disabled		0.0	0.0	

Edit Exit v0.0.1

Screen 15 - Configure Analogue Outputs

- 2) Press the right soft key to ‘Exit’ without saving any changes.

Note: If the user has accessed the ‘Configure Analogue Outputs’ screen via the ‘Stop Sampling’ screen, the user will be returned to the ‘Stop Sampling’ screen.


- 3) To ‘Edit’ a parameter, press the middle soft key to enter edit mode. Using the scroll keys, select a parameter to edit (highlighted in the table) and select the field with the key.
- 4) Use the scroll keys to select the chosen parameter and select using the key, or use the keypad to enter the gas concentration for the safe value followed by the key to confirm.
- 5) Once a parameter has been changed, the left soft key becomes available to ‘Save and Exit’. Once pressed, the user will be returned to the ‘Configure Interface’ menu.

Configure Modbus Slave

This option allows the user to configure the Modbus digital output of the BIOGAS 3000. The user can change the following parameters:

- Slave Address – this is the address of the BIOGAS 3000 on the bus
- Baud Rate – Information is transferred in a communication channel at this rate. Modbus is typically 9600 or 19200

- Data Bits – the number of bits used to represent one character of data. This parameter cannot be changed
 - Parity – the parity bit is used as a simple error detection algorithm. Setting parity to odd will result in an odd number of 1 bits
 - Stop Bits – this is the number of bits to identify the end of a byte. This is typically set to 1
 - Termination – this is used to enable/disable the termination resistor within the system. This is typically enabled for systems that are the first or last connection on the bus.
- 1) From the ‘Configure Interface’ menu press key ‘2’ to select the ‘Configure Modbus Slave’ option.

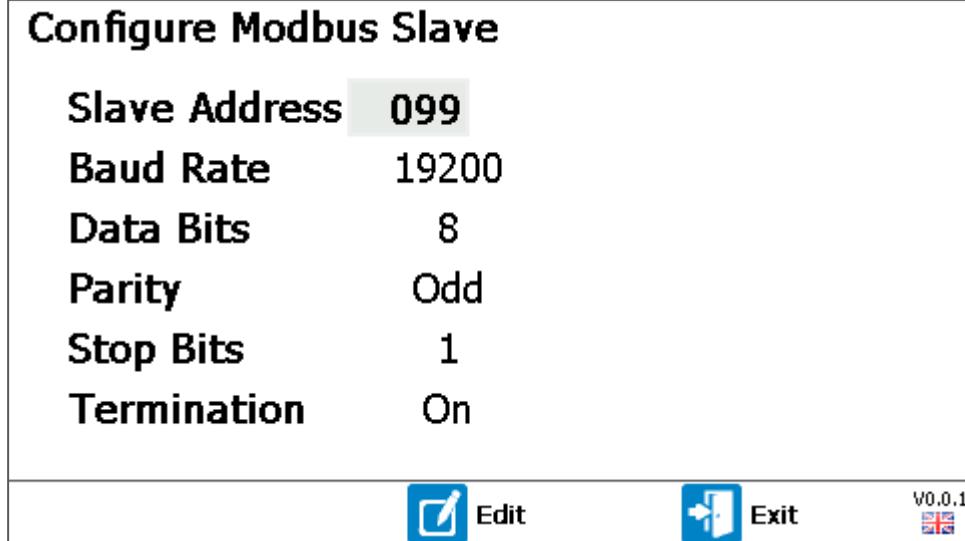

Screen 16 - Configure Modbus Slave


- 2) Press the right soft key to ‘Exit’ without saving any changes.
- 3) To ‘Edit’ a parameter, press the middle soft key to enter edit mode. Using the scroll keys, select a parameter to edit (option will be highlighted) and select the field with the \leftarrow key.
- 4) Use the scroll keys to select the chosen parameter and select using the \leftarrow key, or use the keypad to enter the numeric required followed by the \leftarrow key to confirm.

- 5) Once a parameter has been changed, the left soft key becomes available to 'Save and Exit'. Once pressed, the user will be returned to the 'Configure Interface' menu.

Configure Relays

This option allows the user to configure the eight relays in the system. 'Relay 8' is the fault relay and cannot be changed.

- 1) From the 'Configure Interface' menu press key '3' to select the 'Configure Relays' option.

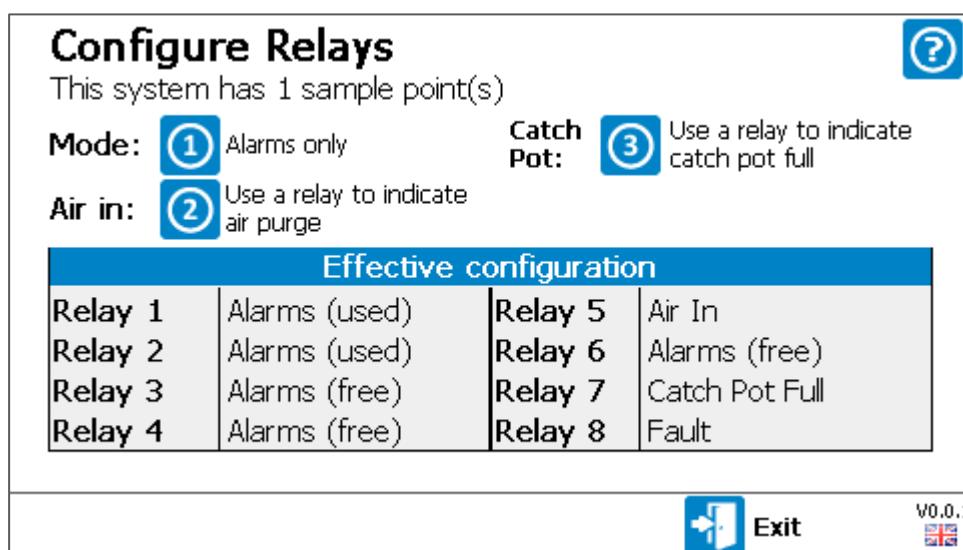

Screen 17 - Configure Relays

- 2) Press the right soft key to 'Exit' without saving any changes.
- 3) Press key '1' to change the 'Mode' of the relays. Available options are:
- Alarms only – Relays are only used to indicate an alarm status (refer to [Configure Alarms](#) for information on how to define alarm settings)
 - Indicate 4-20mA outputs sample point – This mode enables a relay for when the 4-20mA signal is valid for a given sample point. This is useful if a 4-20mA output is being used to obtain the gas reading for a single gas channel across all sample points

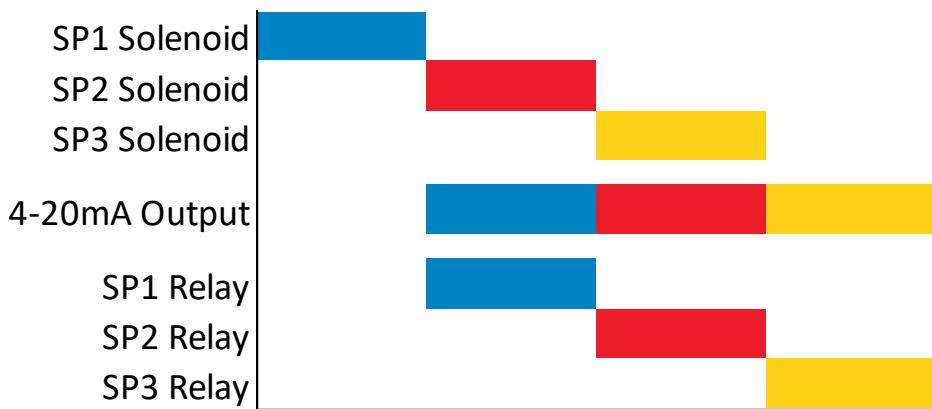


Figure 10 - 4-20mA notification

- Indicates current sample point solenoid – This mode enables a relay for when a sample point is being monitored. This is useful if the operator needs to know when a sample point is being monitored

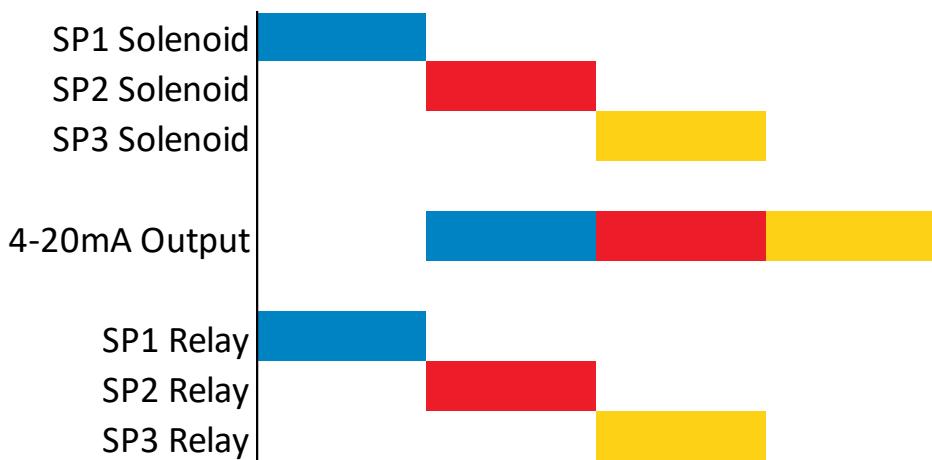


Figure 11 - Sample point notification



Note: When enabling the relays for 4-20mA or sample point notification, the remaining available relays will automatically be defaulted to 'Alarms'.

- 4) Press key '2' to define whether a relay is used to indicate when an air purge is occurring. If this option is selected, this will automatically be defaulted to 'Relay 5'.
- 5) Press key '3' to define whether a relay is used to indicate when the catchpot contains liquid and needs emptying. If this option is selected, this will automatically be defaulted to 'Relay 7'.


 Note: If the system was fitted with the auto-drain option at point of manufacture, this option will not be available in the 'Configure Relays' screen.

- 6) Once a parameter has been changed, the left soft key becomes available to 'Save and Exit'. Once pressed, the user will be returned to the 'Configure Interface' menu.

5.7.1.4 Adjust Backlight

This option allows the operator to set the brightness of the backlight and the timer for when it will auto dim. In addition, the backlight can also be controlled using the 'backlight' key at any time. Having a brighter backlight will improve the readability of the display in bright sunlight.

- 1) From the 'Settings' menu press key '4' to select the 'Adjust Backlight' option.

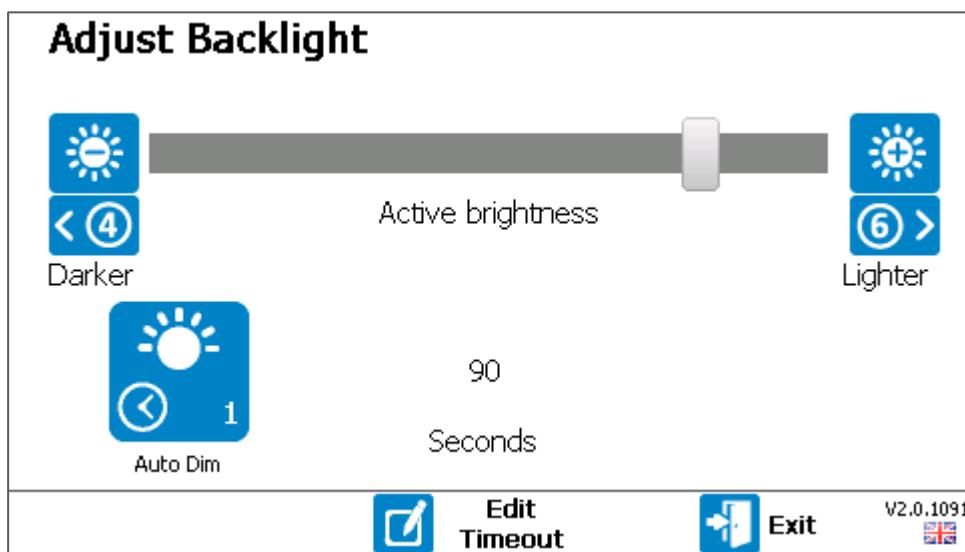

Screen 18 - Adjust Backlight


- 2) Press the right soft key to 'Exit' without saving any changes.
- 3) Press key '6' to increase the brightness of the display or use key '4' to reduce the brightness.
- 4) Press key '1' to set whether the backlight auto-dims after a timeout or is always on and controlled manually by the 'Backlight' key.

- 5) If 'Auto Dim' is enabled, press the middle soft key to edit the auto dim timeout. Use the keypad to enter a value and store using the \leftarrow key.
- 6) Once the settings have been changed, the left soft key becomes available to 'Save and Exit'. Once pressed, the user will be returned to the 'Configure Interface' menu.

5.7.1.5 Set Time and Date

This option allows the user to set the time and date on the system. The time and date is recorded alongside the reading taken for each sample point.

- 1) From the 'Settings' menu press key '5' to select the 'Set Time and Date' option.

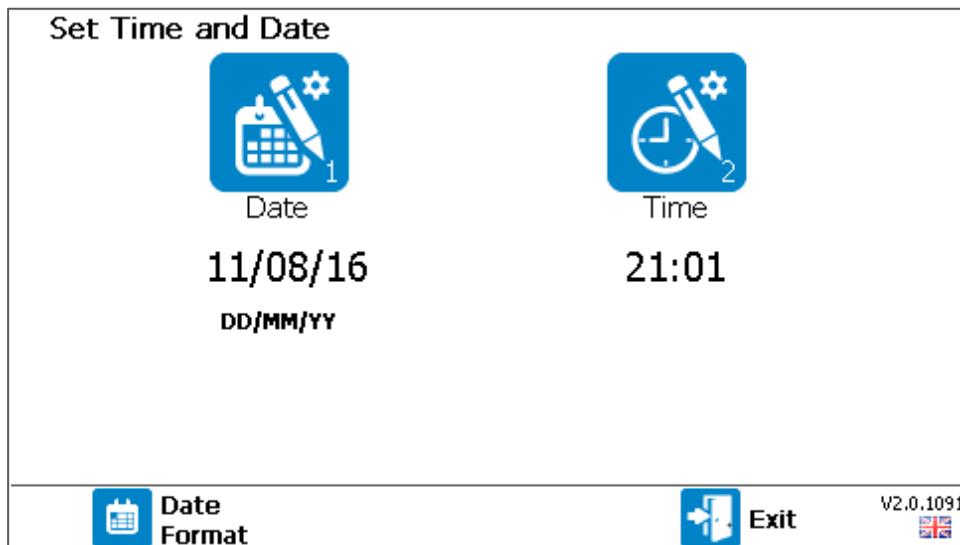

Screen 19 - Set Time and Date

- 2) Press the right soft key to 'Exit' without saving any changes.
- 3) Press the left soft key to toggle the date format. Available options are DD/MM/YY, MM/DD/YY, and YY/MM/DD.
- 4) Press key '1' to edit the date or key '2' to edit the time.
- 5) Key in a suitable date or time for the system and store using the \leftarrow key.



Note: Invalid time or date entries will not be accepted.

- 6) Once the setting has been changed, it is stored immediately.

 Note: At this point, the new setting is written to the Interface PCB. If this is not successful, an error message is displayed and the setting will need to be entered again.

- 7) Press the right soft key to 'Exit'. Once pressed, the user will be returned to the 'Settings' menu.

5.7.1.6 Admin Passcode

The administrator passcode protects against unauthorised changes to the system's set-up. The following screens are passcode protected:

- Sample Times
- Daily Air Purge (if enabled)
- Configure Alarms
- Configure Analog Outputs
- Configure Modbus Slave
- Configure Relays
- Admin Passcode
- Calibration menu

- 1) From the 'Settings' menu press key '6' to select the 'Admin Passcode' option.

Set Administrator Passcode

The administrator passcode protects against unauthorised changes to the system's set-up.

Passcode: **1234**

① Administrator code is disabled



Edit



Save and
Exit


v0.0.0

Screen 20 - Set Administrator Passcode

- 2) Press the right soft key to 'Exit' without saving any changes.
- 3) Press key '1' to enable or disable the administrator passcode.
- 4) To 'Edit' the current passcode, press the middle soft key to enter edit mode. Using the keypad, enter a four-digit passcode and press the \leftarrow key to commit the passcode.
- 5) Once committed, the right soft key becomes available to 'Save and Exit'. Once pressed, the user will be returned to the 'Settings' menu.
- 6) Alternatively, the operator can press the left soft key to 'Cancel' their changes. This option will also return the user to the 'Settings' menu.

Administrator Passcode Required Prompt

When trying to edit a parameter that is passcode protected, the user will be prompted with [Screen 21 - Administrator Passcode Required prompt](#).

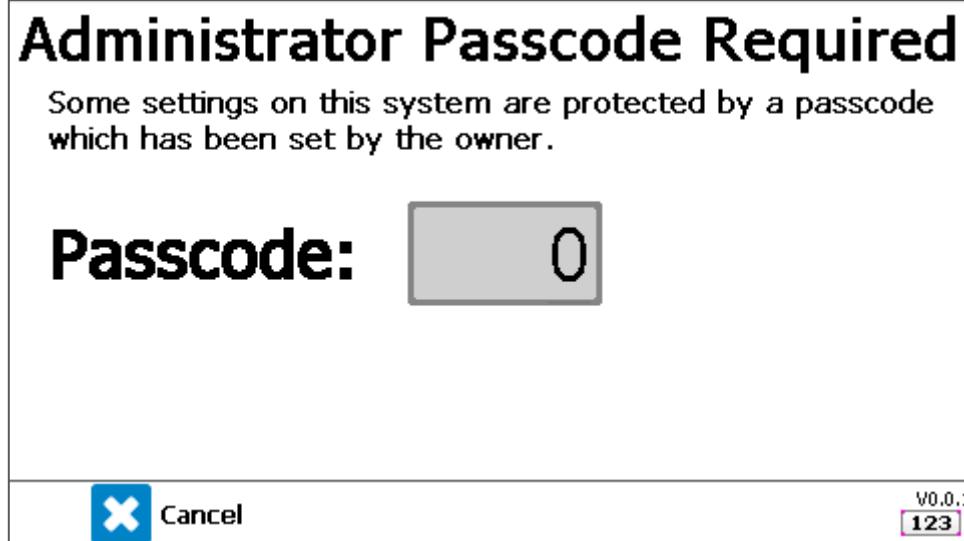

Screen 21 - Administrator Passcode Required prompt

For the user to edit the setting, they must enter the correct passcode followed by the ↵ key. Once the passcode has been entered once, it will not need entering again whilst remaining in the menus.


Once the user has returned to the 'Gas Readings Screen', any further changes to the passcode-protected settings will require the administrator passcode to be entered again.

5.7.1.7 Daily Air Purge

This screen allows the operator to define the settings for the daily air purge. The daily air purge is only available on the continuous BG3KE variants to prolong the life of the O₂ sensor. All other variants receive an air purge after each sample point is monitored.

- 1) From the 'Settings' menu press key '7' to select the 'Daily Air Purge' option.

 Note: For a BG3KE without an external sensor, the daily air purge will be option '1' in the 'Settings' menu.

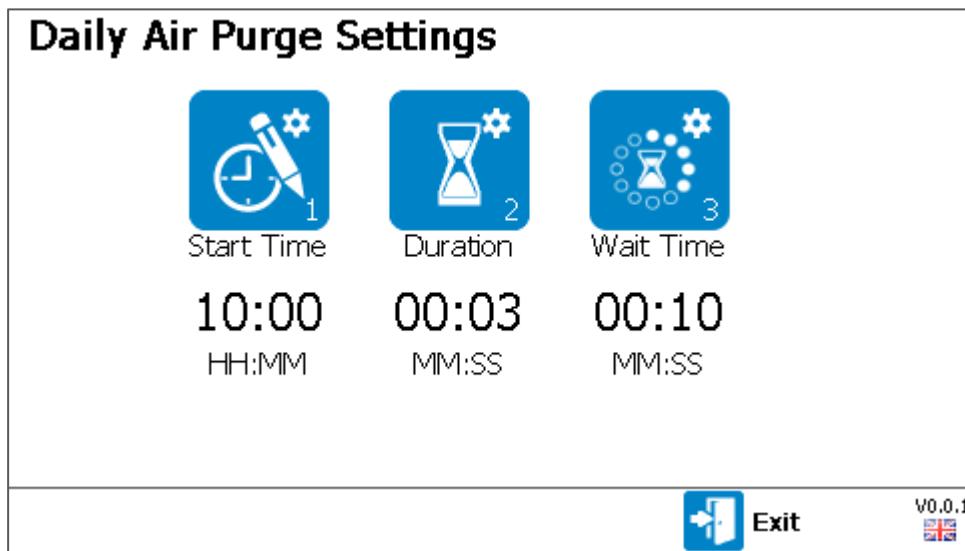

Screen 22 - Daily Air Purge settings

- 2) Press the right soft key to 'Exit' without saving any changes.
- 3) Press key '1' to edit the start time, key '2' to edit the air purge duration, or key '3' to edit the wait time.

 Note: The 'Wait Time' is the time the system waits before updating the outputs when sampling is recommenced after a daily air purge, gas check, calibration, or stopping the sampling process. It is important that a suitable time be entered to ensure the system readings have stabilized to avoid false alarms.

 All parameters have minimum and maximum values that can be entered. If a time is outside of this range, the user will be prompted to enter a more suitable time.


- 4) Key in a suitable time for the system and store using the \leftarrow key.
- 5) Once a parameter has been changed, the left soft key becomes available to 'Save and Exit'. Once pressed, the user will be returned to the 'Settings' menu.

5.7.2 Device Information Menu

The device information menu contains information relating to the system. The following options are available from the 'Device Info' menu:

- 1) System Information
- 2) Event Log
- 3) Diagnostics

An example of the 'Device Info' menu is shown below.

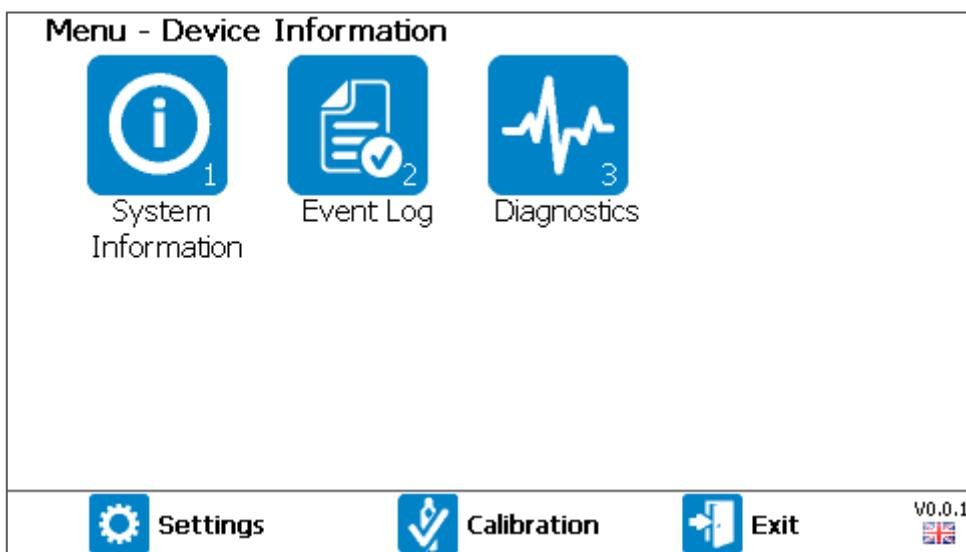

Screen 23 - Device Information menu

5.7.2.1 System Information

This option allows the operator to view important information about their system, such as the serial number of the module, next service due date, and firmware version. This information may be required when contacting your local distributor or our technical support team for assistance.

- 1) From the 'Device Info' menu press key '1' to select the 'System Information' option.

System Information	
System Part Number:	BG3KE-0070-X1-G
System Serial Number:	BG300001
Manufacture Service:	01/01/70
Last User Calibration:	
Main Board:	G300001 0.0.1
Sensor Board:	HW:1.0 FW: V1.20.157
Interface Board:	HW:0 FW: V1.2
Num of Sample points:	1
 Page Down	 Exit
	V0.0.1 

Screen 24 - System Information


- 2) Press the right soft key to 'Exit' back to the 'Device Info' menu.
- 3) Use the left soft key to scroll the page down and the middle soft key to scroll the page up.

5.7.2.2 View Event Log

The BIOGAS 3000 incorporates the facility to log significant events performed on the system via the event log. This can be used as an aid to monitoring the use of the system and used as a diagnostic tool if there is a problem.

The system stores ten logs each able to store 10kb of memory made up of events; 10kb is approximately 80-100 single event entries. Applicable events are stored in the event log automatically and no user intervention is required. When the tenth log file is full, the events of log file one are deleted and replaced with log file eleven.

- 1) From the 'Device Info' menu press key '2' to select the 'View Event Log' option.

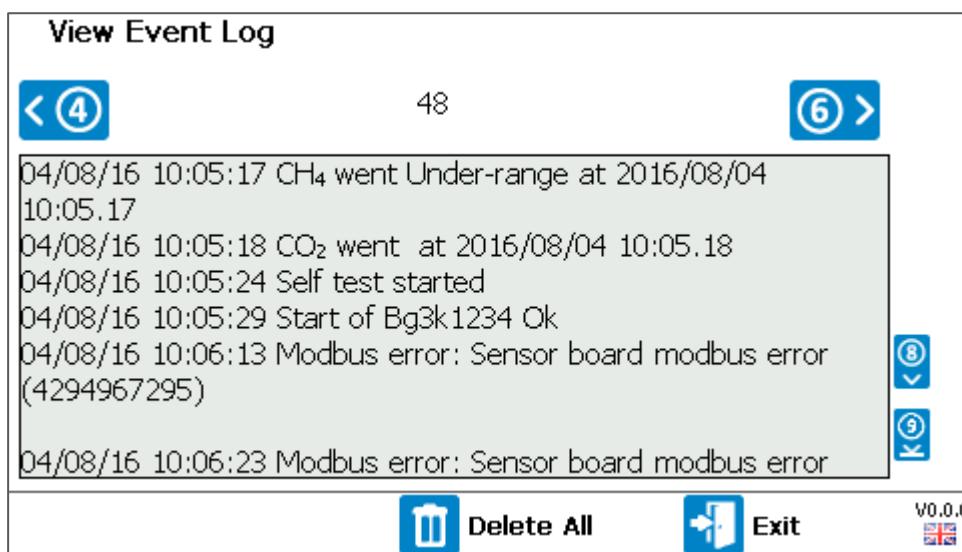

Screen 25 - View Event Log

- 2) Press the right soft key to 'Exit' back to the 'Device Info' menu.
- 3) Use keys '4' and '6' to scroll through the available logs.
- 4) Use keys '2' and '8' to navigate up and down through the log page.
- 5) Press the middle soft key to 'Delete All' logs.

5.7.2.3 Diagnostics

This option allows the operator to view the diagnostics screen. The operator may be requested to view this screen if they contact their local distributor or our technical support team for assistance.

- 1) From the 'Device Info' menu press key '3' to select the 'Diagnostics' option.

Diagnostics						G300001
Channel	ADC	Filt	Lin	Linz	Status	
CH ₄ %	8142	8144	16.7	>>>	<input checked="" type="checkbox"/>	
CO ₂ %	7334	7331	0.6	0.6	<input checked="" type="checkbox"/>	
O ₂ %	46195	46197	14.9	14.9	<input checked="" type="checkbox"/>	
Ref	10062	10067	10067	10067	<input checked="" type="checkbox"/>	
Tbench °C	30024	30024	28.9	28.9	<input checked="" type="checkbox"/>	

 **Next Page**  **Previous Page**  **Exit** V0.0.1 

Screen 26 - Diagnostics


- 2) Press the right soft key to 'Exit' back to the 'Device Info' menu.
- 3) Use the left soft key to scroll the page down and the middle soft key to scroll the page up.

5.7.3 Calibration Menu

The following options are available in the calibration menu:

- 1) Gas check
- 2) Restore to Factory
- 3) Fit New Cell

An example of the 'Calibration' menu is shown below.

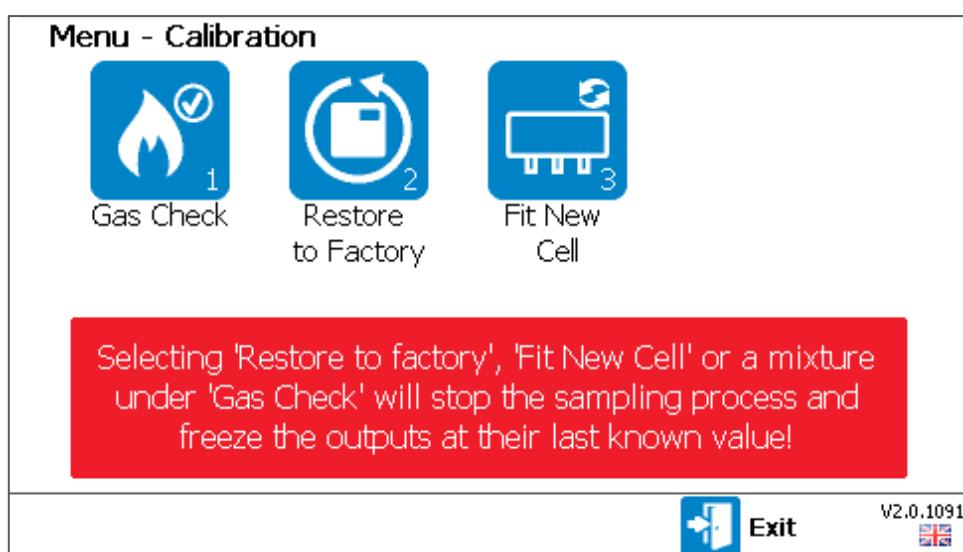

Screen 27 - Calibration menu


5.7.3.1 Gas Check

The ability has been provided to perform a gas check and calibration on the gas channels of the system. This ensures the accuracy of the system in its current operating condition. To ensure optimum performance please ensure your BIOGAS 3000 module is returned for service and calibration on time.



Note: Selecting a mixture within this option will stop the sampling process and freeze the outputs at their last known value.

- 1) From the 'Calibration' menu press key '1' to select the 'Gas Check' option.

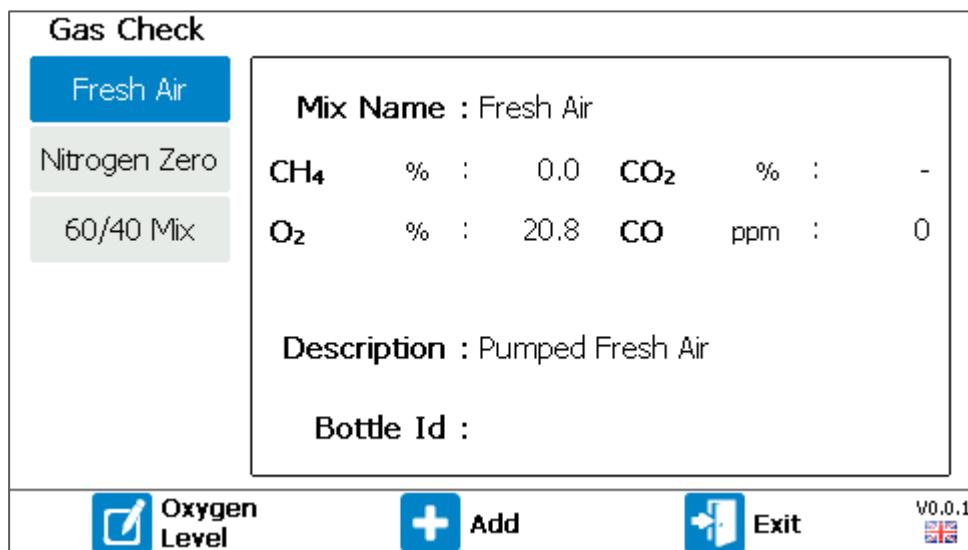

Screen 28 - Gas Check

- 2) Press the right soft key to 'Exit' back to the 'Calibration' menu.


 Note: For more information on calibration, please refer to section [Gas Check and Calibration](#) in this operating manual.

5.7.3.2 Restore to Factory

This option will reset the gas analyser to all of its factory programmed settings and will clear all user defined calibration points.

 Note: Selecting this option will stop the sampling process and freeze the outputs at their last known value.

- 1) From the 'Calibration' menu press key '2' to select the 'Restore to Factory' option.

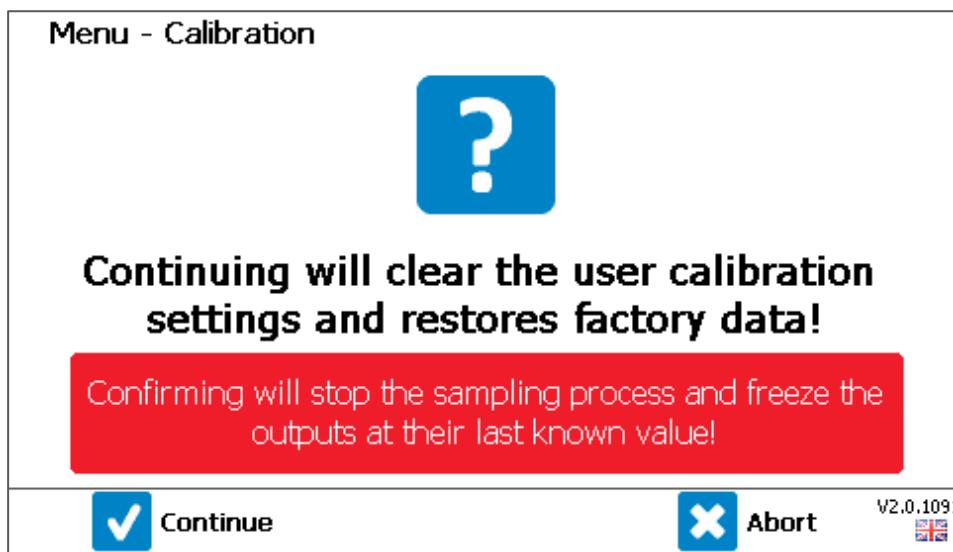

Screen 29 - Restore to Factory settings

- 2) Press the right soft key to 'Abort' which does not reset the calibration data and will return the operator to the calibration menu.
- 3) Press the left soft key to 'Continue', which resets the calibration data and will return the operator to the calibration menu.



Note: Restoring the system to factory settings will stop the sampling process and freeze the outputs at their last known value.

5.7.3.3 Fit New Cell

This option should be selected when the user has installed a new pre-calibrated external cell or external sensor module (cell complete with PCB). It over-writes the current factory calibration values with the data provided with the cell.



Note: Selecting this option will stop the sampling process and freeze the outputs at their last known value.

- 1) From the 'Calibration' menu press key '3' to select the 'Fit New Cell' option.

Fit New External Cell

The external cell must be a CO 1000.0 ppm
Press Continue to confirm the type of cell being fitted.



Continue



Exit

V0.0.1
Screen 30 - Fit New External Cell confirmation

- 2) Press the right soft key to 'Exit' and return to the 'Calibration' menu.
- 3) If fitting a new cell or complete module, confirm the cell type and range, and press the left soft key to 'Continue'.

Fit New External Cell

The external cell must be a CO 1000.0 ppm
Press Continue to confirm the type of cell being fitted.

Slope ① 0.02259Offset ② 243

Save




Exit

V0.0.1
Screen 31 - Input new Slope and Offset

Note: Alongside the new cell or complete module there will be a calibration certificate containing the new slope and offset figures. Both of these values need entering in to the appropriate fields in the above screen.

- 4) Press key '1' to edit the 'Slope' or key '2' to edit the 'Offset'. Use the keypad to enter the numeric value and confirm with the \leftarrow key.
- 5) Press the left soft key to 'Save' the new configuration to memory. Following this, a prompt will appear advising the user to perform a calibration.

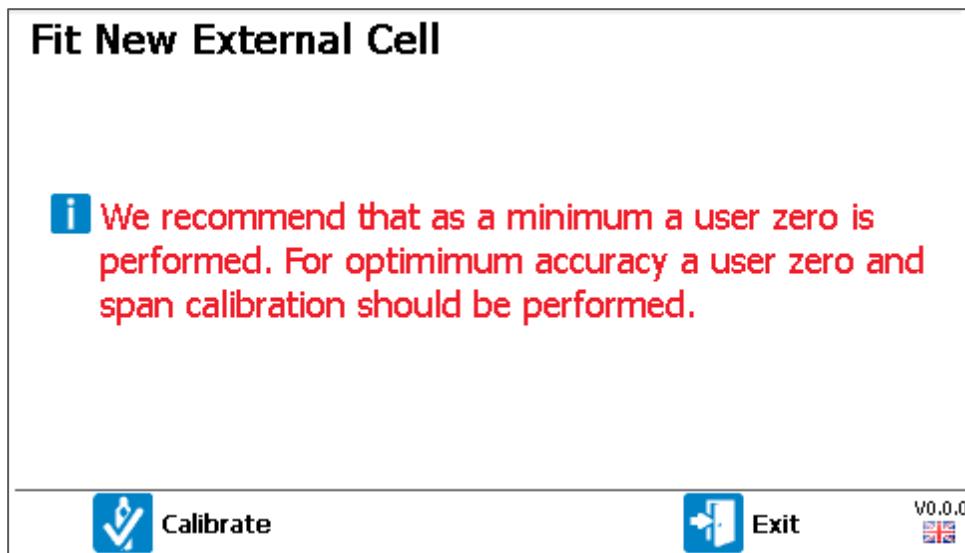


Screen 32 - User calibration recommendation

 Note: After a new cell or complete module is fitted, it is recommended that as a minimum a user zero be performed. For optimum accuracy, a span calibration should be performed in addition to a zero.

- 6) Pressing the left soft key for 'Calibrate' will take the user to the 'Gas Check' screen. Pressing the right soft key to 'Exit' will return the user to the 'Calibration' menu.


5.8 Help Function

In some screens, there is a help screen available. An available help screen is indicated by a '?' in the top right hand corner of the screen:

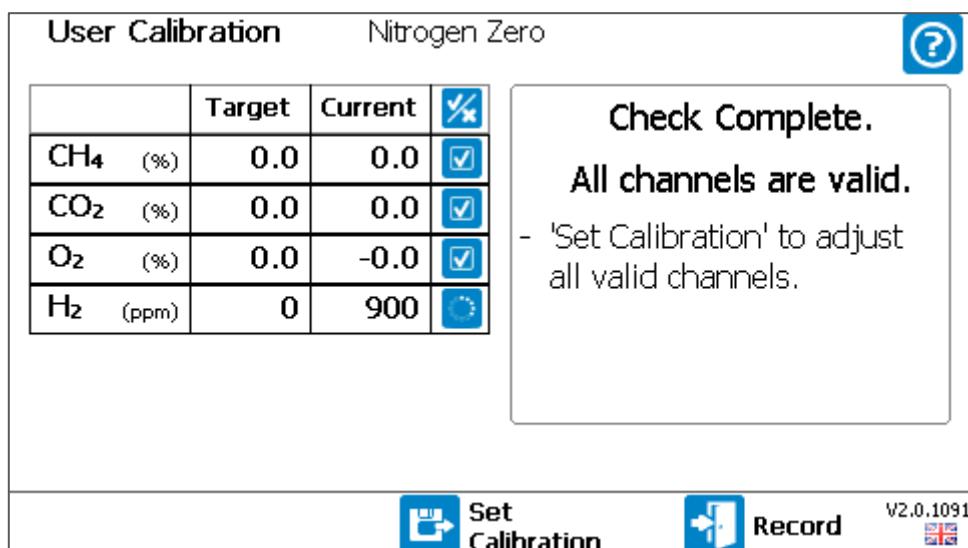

Screen 33 - Help screen available


To access the help screen, press the '?' key on the keypad. The user can scroll through pages using key the left and middle soft keys. To exit, press the right soft key.

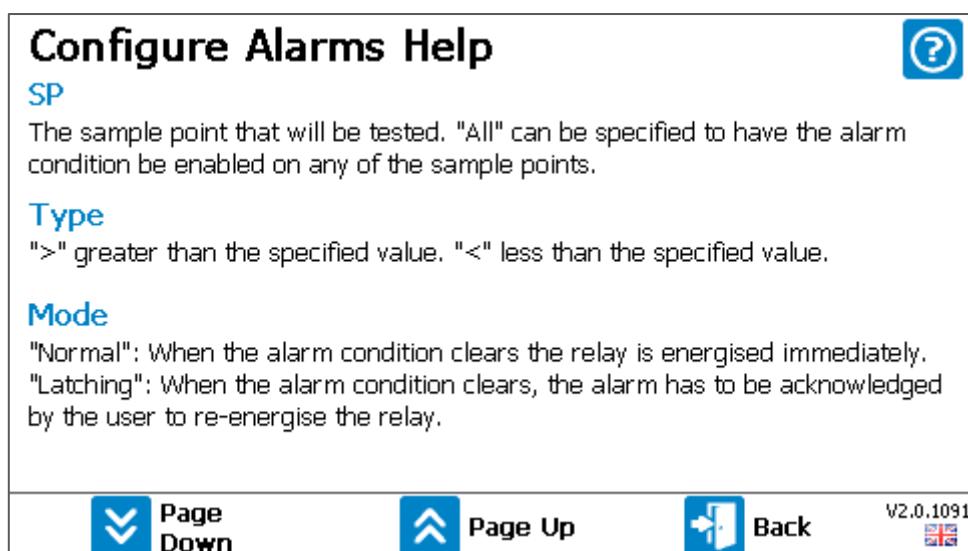


Screen 34 - Help screen example

5.9 BIOGAS 3000 Sampling Process

5.9.1 BG3K1, 2, 3, 4, and D Variants

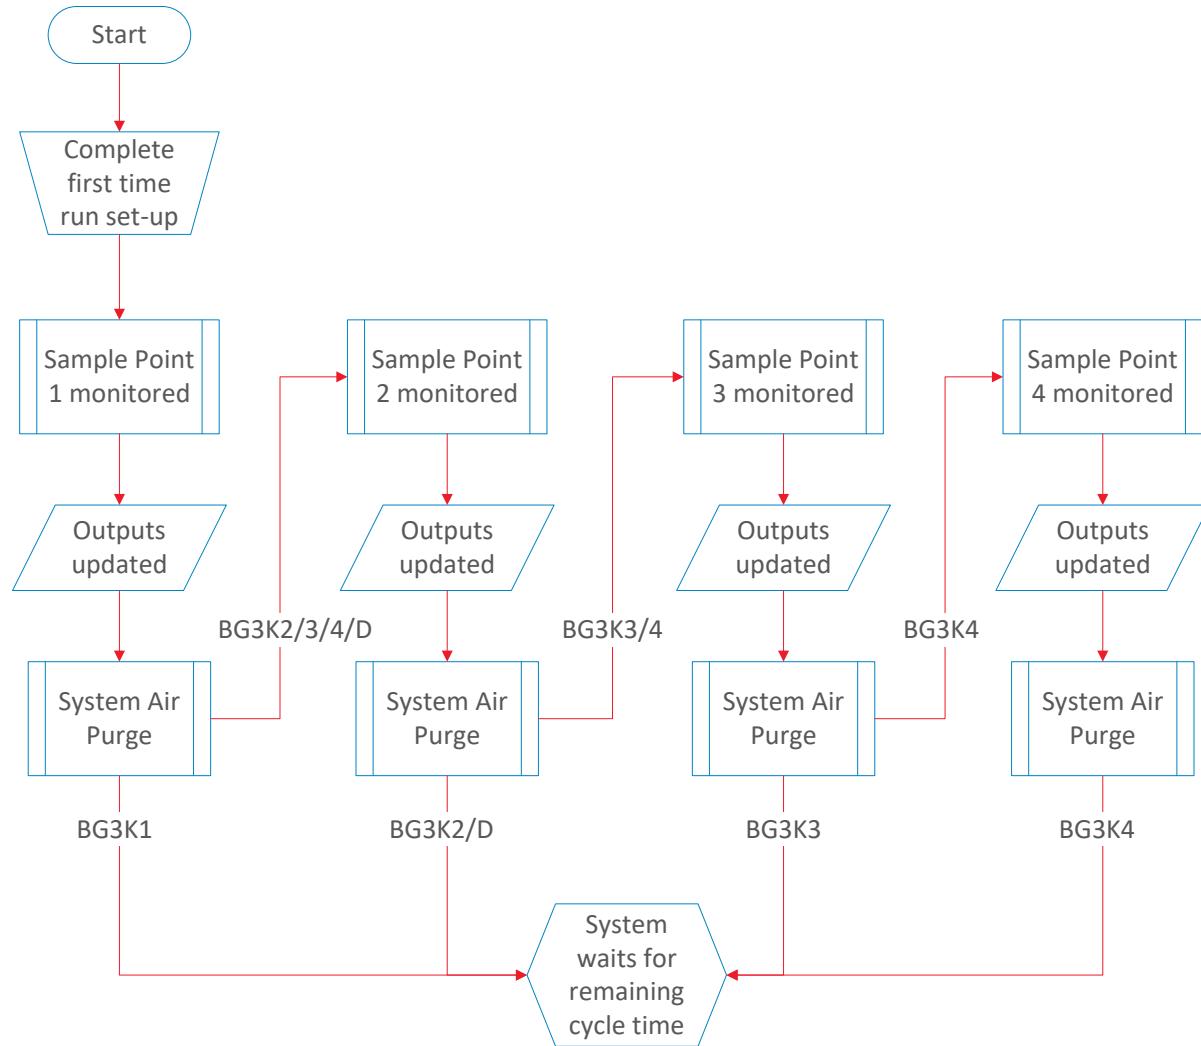

5.9.2 BG3KE Variants

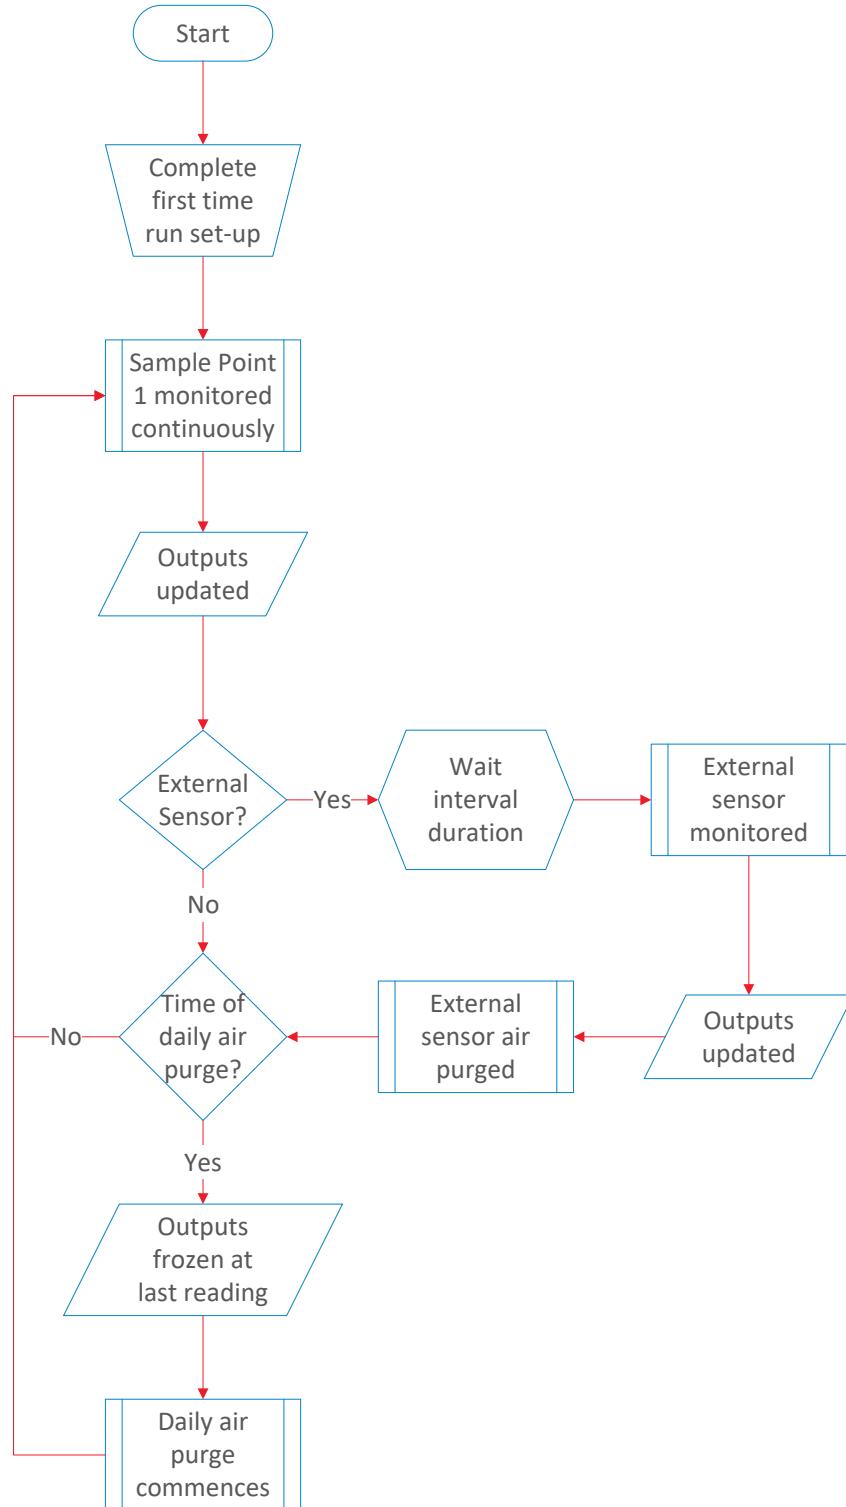

Flow Chart 2 - BG3KE

5.10 Switching the BIOGAS 3000 System Off

The BIOGAS 3000 system can only be turned off at the switched mains supply that is installed in section [Mains Wiring](#).

The BIOGAS 3000 module can be turned off independently to the system. To do this, press and hold the on/off key for approximately two seconds. This will close all solenoids, switch off all pumps, trigger the fault relay, and freeze the outputs at their last known value. Power will remain to the system.



Screen 35 - Power off

6 Gas Check and Calibration



Warning Do not open when an explosive atmosphere is present.

6.1 Introduction

The BIOGAS 3000 system is carefully calibrated at manufacture and when returned for service using a number of gas concentrations and temperature points. However, it is sometimes desirable to carry out a gas check on the equipment to prove its accuracy and rectify any inaccuracies with a calibration process between services.

The BIOGAS 3000 measures CH₄, CO₂, and O₂ as standard with optional additional gases and these channels can be user calibrated. This section will describe in detail the correct procedure to gas check and calibrate these gas channels.

Note: This does not replace the factory service and calibration.

Note: If this calibration is completed incorrectly, it may decrease the accuracy of the system.

Four important terms that are used within this section are:

Gas check: This is where a known concentration of gas is applied to the system and its responses are checked with no adjustment being made.

Calibration: This is when an adjustment is made to the modules readings after a gas check has been performed, by either a zero, span, or both.

Zero: The point at which the system is calibrated when there is none of the target gas present.

Span: The point at which the system is calibrated when there is a known concentration of the target gas present.

Note: A more detailed explanation of user calibration can be found in section [User Calibration Explained](#).

6.2 Required Equipment

6.2.1 Gas

User calibration of the system will greatly improve the data accuracy in the range of the calibration gas used and the environmental conditions for which the BIOGAS 3000 is calibrated. This may cause less accurate readings of concentrations outside of this calibrated range.

Users should select the correct calibration gas for the expected gas levels on their particular application. In addition, nitrogen (N_2) can be used for a zero calibration. If this is not available, then clean ambient air can be used.

 **Warning**

Calibration gases can be dangerous. For each gas used, the appropriate material safety data sheet must be read and fully understood before proceeding.

6.2.2 Flow Regulator

It is recommended that the regulator available via LANDTEC be used as it has been configured to deliver a fixed flow of 300ml/min and correct pressure relief to avoid damage to the system (see LANDTEC part number GA6.8 in [BIOGAS 3000 Consumable Products](#)). As the regulator's flow is factory set it only requires a few turns to open, no adjustment will be necessary.



Note: If using a regulator that was not supplied by LANDTEC, please ensure that the flow rate is adjusted to a maximum of 300ml/min. Suitable pressure relief should be ensured to protect the system from damage because of over-pressurization – typically 3-5psi (200-350mbar).

 **Warning**

When the system is being calibrated, in cases of over-pressurization, the 1/16" port on the red pressure relief valve (supplied with the LANDTEC pressure regulator) will release gas to protect the BIOGAS 3000 module.

It is recommended that the exhaust tubing from the pressure relief valve emerge in a well-ventilated area.

Ensure there are no leaks in the tubing and connections before carrying out a user calibration.

The calibration of the BIOGAS 3000 should be carried out by trained personnel taking all necessary precautions when using dangerous, explosive, or toxic gases.

6.3 Gas Mixtures

The BIOGAS 3000 provides the user with the ability to add, edit, or delete gas mixtures that can be used for the gas check and calibration process. There are three default mixtures:

- Fresh Air – assumed values of fresh air are CH₄ 0.0%, O₂ 20.8, and all other optional gasses 0ppm. CO₂ is not available to calibrate in air.



Note: The oxygen concentration is editable between 20.8% and 21.0% - see [Edit O₂ in Fresh Air Mix](#).

- Nitrogen Zero – known values of CH₄ 0.0%, O₂ 0.0%, and all other optional gasses 0ppm. CO₂ is not available to calibrate in nitrogen.




Note: A new mixture can be created which will allow the CO₂ channel to be zeroed if required.

- 60/40 Mix – default values of CH₄ 60.0%, O₂ 40.0%, with O₂ 0.0% and all other optional gasses 0ppm.




Note: The CH₄ and CO₂ values should be edited with the true bottle concentration.

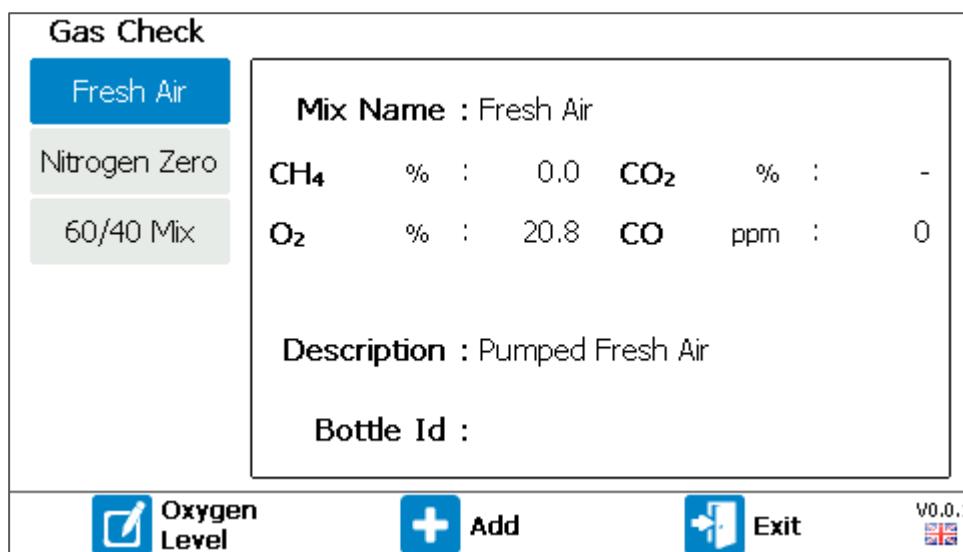*Screen 36 - Gas Check*

6.3.1 Adding a Mixture

In addition to the three default mixtures, the BIOGAS 3000 also supports the addition of three user definable mixtures. To add a mix:

- 1) In the 'Gas Check' screen, press the middle soft key to 'Add' a mix.

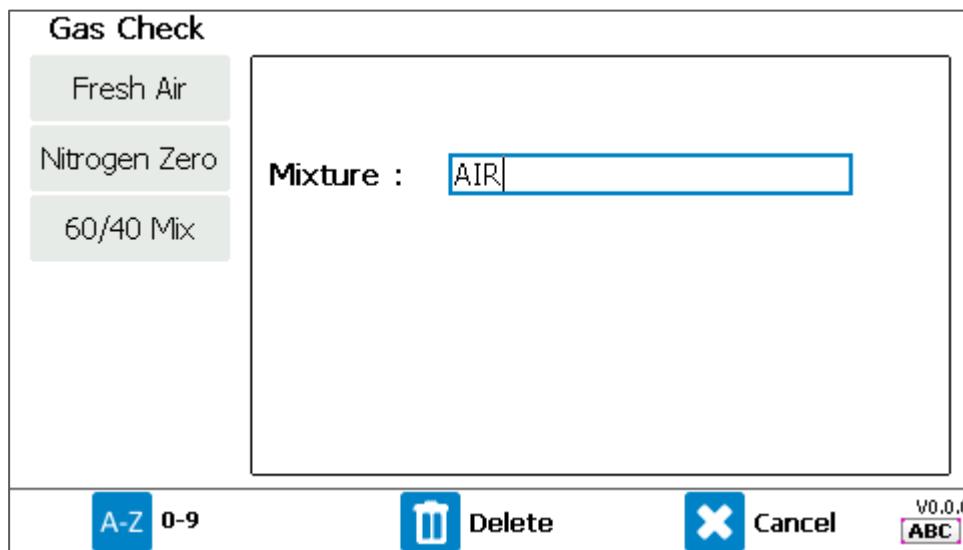*Screen 37 - Add gas mixture*

- 2) Using the keypad, enter a name for the mixture. Pressing the left soft key toggles between letter and number entry. Press \leftarrow when complete.

Edit Gas Mix

Name:	AIR		
Description:	Mixture 6 description		
Bottle Id:	(bottle-id)		
CH ₄ (%) :	-	CO ₂ (%) :	-
O ₂ (%) :	-	H ₂ (ppm) :	-

V0.0.0

Screen 38 - Edit gas mix details

- 3) Using the scroll keys, select an editable field and press \leftarrow the key to edit:
 - Name, Description and Bottle ID are text and number fields
 - Gas channels are number fields. Enter the gas concentration of the bottle in percent or ppm. A '-' will not perform an action on the channel. Entering a gas concentration will span the channel, entering a '0' will zero the channel.
- 4) Press the middle soft key to 'Save and Exit'.



Note: The gas concentrations for the 60/40 Mix and the three customer definable mixtures are editable using the left soft key when highlighting the mix in the 'Gas Check' screen.

6.3.2 Deleting a Mix



Note: The three default mixtures cannot be deleted.

To delete a gas mix in the 'Gas Check' screen:

- 1) Use the scroll keys to highlight the mix to be deleted.
- 2) Press the middle soft key to 'Add/Delete'.


*Screen 39 - Add or delete mix*

- 3) Press the middle soft key to 'Delete'.
- 4) Press the left soft key (Yes) to confirm deletion.

6.3.3 Edit O₂ in Fresh Air Mix

The concentration of oxygen in the fresh air mix is editable between 20.8 and 21.0%. To change the concentration used:

- 1) Highlight the 'Fresh Air' mix.
- 2) Press the left soft key to edit the 'Oxygen Level'.

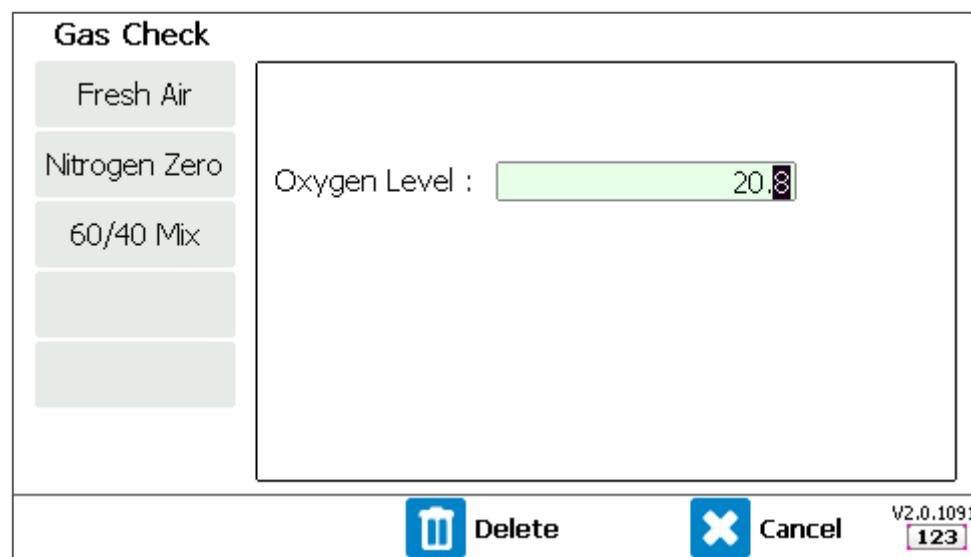*Screen 40 - Edit oxygen concentration*

- 3) Pressing the right soft key will 'Cancel' the edit.
- 4) Key in the concentration you wish to span the oxygen channel to in fresh air, followed by the \leftarrow key to confirm. The operator will be returned to the 'Gas Check' screen.

6.4 Connecting a Gas Bottle to the BIOGAS 3000

This section explains how to connect a gas bottle to the BIOGAS 3000 system in preparation for a gas check or calibration.

Warning

Do not open when an explosive atmosphere is present.

Mains voltages are present within the BIOGAS 3000 system and great care needs to be observed. If there is any uncertainty, seek advice from a professional.

Pressurized gas bottles can be dangerous and great care needs to be taken when in use.

Alternatively, contact our technical support team at (800) 968-2026 or email landtec_support@qedenv.com to arrange a site visit. (Please note a charge may be applicable.)

Op.	Image	Instruction
1		<p>Ensure the drain valve is closed.</p> <div style="border: 1px solid #0070C0; padding: 5px; margin-top: 10px;">  Note: Auto-drain systems will not have a drain valve. </div>
2		<p>Ensure the gas inlet and gas outlet valves are closed.</p>

3		<p>Disconnect the QRC from the top of the catchpot.</p>
4		<p> Note: Ensure the pressure regulator is turned off.</p> <p>Attach the pressure regulator to the gas bottle and ensure it is adequately tightened.</p>
⚠ Warning	<p>Ensure that the regulator is fitted to the bottle at arm's length in case of a gas leak.</p> <p>Ensure that no cross threading occurs during tightening of the regulator.</p> <p>During the rare occasion that gas does leak from the seal, place the bottle and regulator on the floor and leave the area until the leak has stopped. DO NOT attempt to solve the leak as this could be dangerous.</p>	
5		<p>Ensure that the gas bottle has adequate pressure (i.e. is not empty).</p>

6		Attach the tubing from the gas bottle and regulator to the QRC.
---	---	---

6.5 Gas Check and Calibration

After the BIOGAS 3000 system has been installed and pressure tested, it is recommended that a gas check be performed to ensure it is still accurate, as damage could have occurred during installation and/or transit.


In addition, a gas check can be performed as part of regular maintenance to validate the accuracy of the system and determine whether a user calibration is required.

The gas used for a check or calibration should be representative of the gas within the application, for example, 60% CH₄ balanced with 40% CO₂.

The BIOGAS 3000 performs a gas check before providing the user with a decision. If the result of the check is that the instruments accuracy is good, a calibration may not need to be performed. At this point, the user can decide to record the results and exit. Alternatively, the accuracy may need improving and at this point, the user can decide to correct the errors by way of a user calibration. This will adjust the figures and record the calibration to memory.

The [Flow Chart 3 - Gas Check and Calibration](#) is a simple overview of the process:

- ☞ Note: It is LANDTEC's recommendation that a zero check and calibration is carried out before a span check and calibration.
- ☞ Note: When selecting a mixture in the 'Gas Check' screen, the sampling process will be stopped.

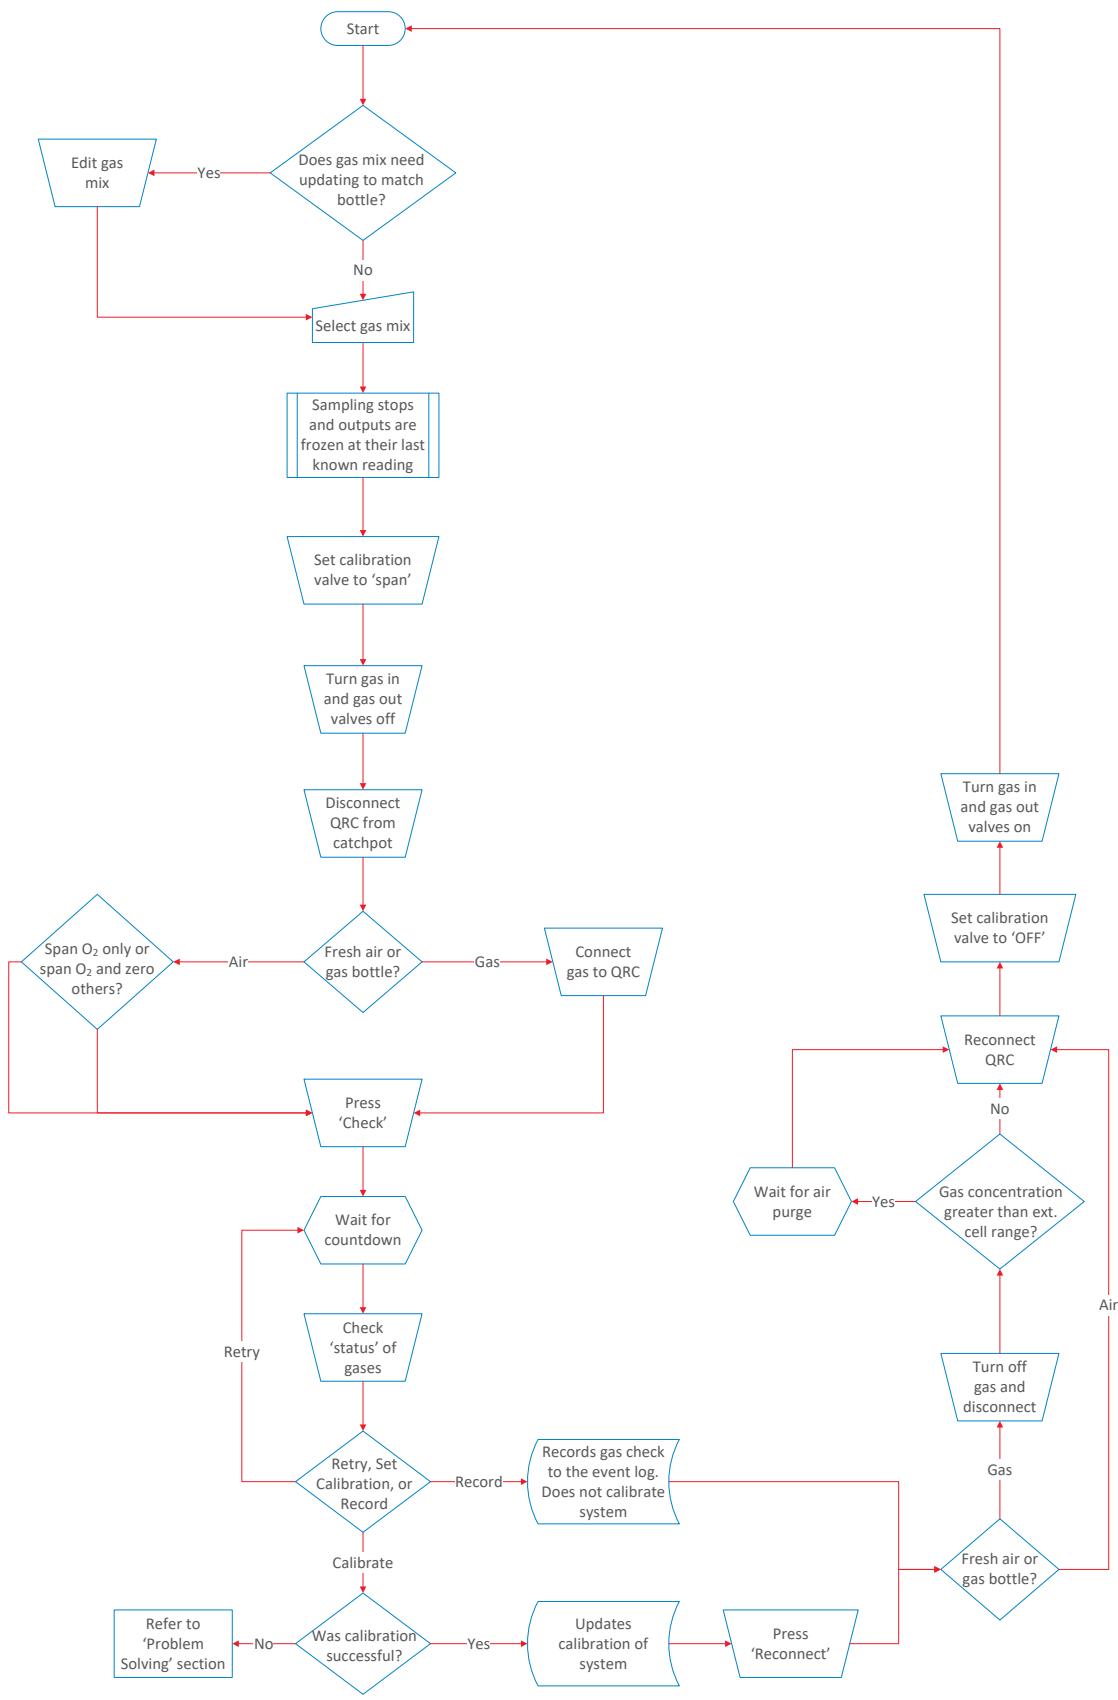

6.6 Status Icons

Below are a list of status icons used after the gas check and calibration processes and their definition:

6.6.1 Post Gas Check

Icon	Definition
	Channel has not been checked
	Recommends a calibration be performed
	Channel is outside of limits – see User Calibration Explained
	Channel is within limits and may not need adjusting

6.6.2 Post Calibration

Icon	Definition
	Channel has not been checked
	Channel was not calibrated due to an error – see User Calibration Explained
	Channel was calibrated OK

6.7 Disconnecting a Gas Bottle from the BIOGAS 3000

This section explains how to disconnect a gas bottle from the BIOGAS 3000 system following a gas check or calibration.

⚠ Warning	<p>Do not open when an explosive atmosphere is present.</p> <p>Mains voltages are present within the BIOGAS 3000 system and great care needs to be observed. If there is any uncertainty, seek advice from a professional.</p> <p>Pressurized gas bottles can be dangerous and great care needs to be taken when in use.</p> <p>Alternatively, contact our technical support team at (800) 968-2026 or email landtec_support@qedenv.com to arrange a site visit. (Please note a charge may be applicable.)</p>
--	--

Op.	Image	Instruction
1	No image	Ensure the pressure regulator is turned off.
2	 	Ensure the drain, gas inlet and gas outlet valves are still closed.
3		Ensure the gas bottle supply is turned off and disconnect the tubing of the gas bottle and regulator from the QRC.

4		<p>Reconnect the system tubing by connecting the QRC to the top of the catchpot.</p> <p> Note: Ensure that the coupling 'clicks' in to place.</p>
5	No image	<p>Remove the regulator from the gas bottle and store both appropriately to avoid damage.</p>
6		<p>Open the gas inlet and gas outlet valves.</p> <p> Note: The drain valve is to remain closed.</p>
⚠ Warning		<p>It is critical that the connections are fully secured to ensure that no gas leaks in to the main enclosure.</p> <p>Once the BIOGAS 3000 tubing has been reconnected, it is recommended that a Pressure Test be completed to ensure that the system is leak free.</p>

7 Maintenance

This section outlines the maintenance requirements which the operator needs to perform on the system and instructions for user replaceable components.

 Note: For further information please contact our technical support team at (800) 968-2026 or email landtec_support@qedenv.com.

Warning

Do not open when an explosive atmosphere is present.

The use of non-LANDTEC approved parts being fitted to the equipment may cause a hazard and will invalidate the ATEX/IECEx certification.

The system should not be altered in any way other than described in this operating manual. Alterations outside of this operating manual could cause a hazard, make the equipment unsafe voiding the warranty and ATEX/IECEx certification.

7.1 Maintenance Schedule

 Note: This maintenance schedule is a minimum guide and dependent upon the application and usage of the BIOGAS 3000 system, may need to be adapted accordingly.

As a minimum, LANDTEC recommends that each month the following be undertaken to ensure the BIOGAS 3000 system is in its optimum working and safe condition:

- Inspect the BIOGAS 3000 system for damage
- Review the installation location for continued suitability (i.e. physical and environmental conditions)
- Check the main enclosure gasket for damage to ensure the IP rating can be maintained
- Ensure terminals have remained tightened to the recommended torque setting and there are no visible signs of corrosion
- Empty the catchpot (see [Emptying the Catchpot](#))

13 **BIOGAS 3000 Operating Manual**

Maintenance

- Inspect, and replace if required, the coalescing catchpot filter (see [Replacing the Catchpot Filter](#))
- Inspect, and replace if required, the inline PTFE filter (see [Replacing the Inline PTFE Filter](#))
- Perform a pressure test to ensure there are no leaks (see [Pressure Test](#))
- Perform a gas check to determine the accuracy of the system and if required a calibration (see [Gas Check and Calibration](#)).

-  Note: It is the operator's responsibility to keep a record of when and what maintenance has been performed.
-  Note: If you suspect the BIOGAS 3000 system to have been damaged and are unsure of the consequences of this, please contact our technical support team at (800) 968-2026 or email landtec_support@qedenv.com.
-  Note: Inspection of the catchpot and inline filter may be required more frequently depending upon the application and the likelihood of liquid in the sample gas.
-  Note: After performing a gas check or calibration, it may be necessary to perform a further pressure test on the equipment to ensure it has remained leak free.

 **Warning**

Dependent upon the application, the equipment can come in to contact with unsafe contaminants. It is therefore recommended that suitable PPE is identified and worn (such as gloves) and hands are washed thoroughly after maintenance is completed.

7.2 BIOGAS 3000 Consumable Products

Optional replacement parts may be purchased for the BIOGAS 3000 from your local distributor or LANDTEC directly:



Ref	Description	Part Number
A	Catchpot with coalescing filter and built-in valve for systems without auto-drain	BG3K.S1
B	Catchpot with coalescing filter and drainage tubing for systems with auto-drain	BG3K.S2
C	BIOGAS 3000 Profibus option	BG3K.S3
D	BIOGAS 3000 Profinet option	BG3K.S4
E	Filter, Exhaust 1/4 MNPT (used as air purge filter)	2008277/S
F	Inline PTFE filters (pack of 10) Inline PTFE filters (pack of 30)	GA4.2 GA4.2(30)
G	Pre-calibrated external sensor module	Please contact us
H	Check gas regulator used in conjunction with calibration gas canister. This valve controls the flow of gas – c/w safety valve.	GA6.8
I	Pre-calibrated external sensor	Please contact us
J	5m length 4mm I.D tubing	GA3K.S6
K	Calibration gas	Please contact us
L	Coalescing filter for catchpot x 5	GA3K.S1
M	Fuses	Please contact us
N	External catchpot option	GA3KP.S15

7.3 Emptying the Catchpot



Warning

Do not open when an explosive atmosphere is present.

Mains voltages are present within the BIOGAS 3000 system and great care needs to be observed. If there is any uncertainty, seek advice from a professional or isolate the supply. Alternatively, contact your local distributor, or our technical support team at LANDTEC on (800) 968-2026 or email landtec_support@gedenv.com to arrange a site visit. (Please note a charge may be applicable.)




Note: This process is only applicable for systems without auto-drain.

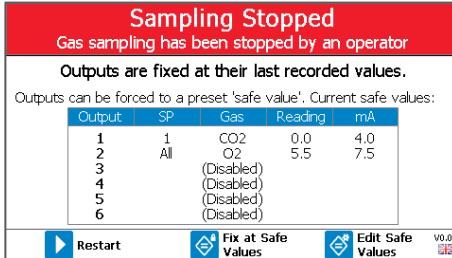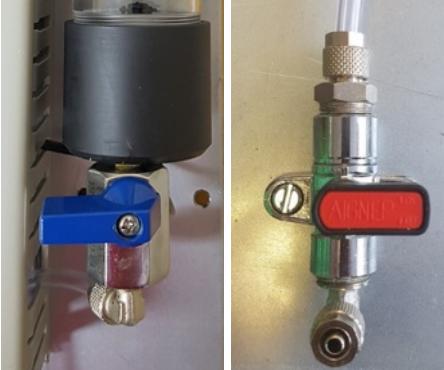Op.	Image	Instruction																																			
1	 <p>Sampling Stopped Gas sampling has been stopped by an operator Outputs are fixed at their last recorded values. Outputs can be forced to a preset 'safe value'. Current safe values:</p> <table border="1"> <thead> <tr> <th>Output</th> <th>SP</th> <th>Gas</th> <th>Reading</th> <th>mA</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>1</td> <td>CO₂</td> <td>0.0</td> <td>4.0</td> </tr> <tr> <td>2</td> <td>All</td> <td>O₂</td> <td>5.5</td> <td>7.5</td> </tr> <tr> <td>3</td> <td></td> <td>(Disabled)</td> <td></td> <td></td> </tr> <tr> <td>4</td> <td></td> <td>(Disabled)</td> <td></td> <td></td> </tr> <tr> <td>5</td> <td></td> <td>(Disabled)</td> <td></td> <td></td> </tr> <tr> <td>6</td> <td></td> <td>(Disabled)</td> <td></td> <td></td> </tr> </tbody> </table> <p> Restart  Fix at Safe Values  Edit Safe Values 100.0 </p>	Output	SP	Gas	Reading	mA	1	1	CO ₂	0.0	4.0	2	All	O ₂	5.5	7.5	3		(Disabled)			4		(Disabled)			5		(Disabled)			6		(Disabled)			<p>From the 'Gas Readings Screen', press the middle soft key to 'Stop Sampling'.</p> <p> Note: If required, press the middle soft key once more to fix the outputs at their safe values.</p>
Output	SP	Gas	Reading	mA																																	
1	1	CO ₂	0.0	4.0																																	
2	All	O ₂	5.5	7.5																																	
3		(Disabled)																																			
4		(Disabled)																																			
5		(Disabled)																																			
6		(Disabled)																																			
2		<p>Ensure the drain, gas inlet, and gas outlet valves are closed.</p>																																			

13 BIOGAS 3000 Operating Manual

Maintenance

3		Disconnect the QRC from the top of the catchpot.
4		Open the drain valve to allow liquid to empty from the catchpot.
⚠ Warning		<p>The catchpot can hold approximately 90ml of liquid. Dependent upon the application the liquid removed may be contaminated and should be discharged to an area where it is safe to do so.</p> <p>This line may also vent sample gas for a brief period during each draining operation if the sample inlet and gas out valves are not closed.</p>
5		Once the catchpot has emptied, close the drain valve.

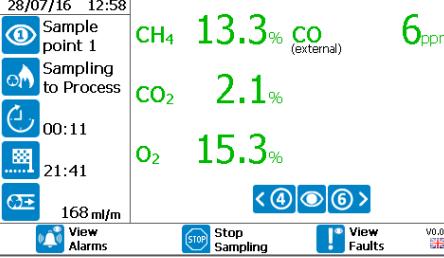6		<p>Reconnect the system tubing by connecting the QRC to the top of the catchpot.</p> <p> Note: Ensure that the coupling 'clicks' in to place.</p>																					
⚠ Warning	<p>It is critical that the connections are fully secured to ensure that no gas leaks in to the main enclosure.</p>																						
7		<p>Open the gas inlet and gas outlet valves.</p>																					
8	 <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td>28/07/16 12:58</td> <td>CH₄ 13.3% co_(external)</td> <td>6 ppm</td> </tr> <tr> <td>Sample point 1</td> <td>CO₂ 2.1%</td> <td></td> </tr> <tr> <td>Sampling to Process</td> <td>O₂ 15.3%</td> <td></td> </tr> <tr> <td>00:11</td> <td></td> <td></td> </tr> <tr> <td>21:41</td> <td></td> <td></td> </tr> <tr> <td>168 ml/m</td> <td></td> <td></td> </tr> <tr> <td> View Alarms</td> <td> Stop Sampling</td> <td> View Faults</td> </tr> </table>	28/07/16 12:58	CH ₄ 13.3% co _(external)	6 ppm	Sample point 1	CO ₂ 2.1%		Sampling to Process	O ₂ 15.3%		00:11			21:41			168 ml/m			 View Alarms	 Stop Sampling	 View Faults	<p>From the sampling stopped screen, press the left soft key to 'Restart' the monitoring process and return to the 'Gas Readings Screen'.</p>
28/07/16 12:58	CH ₄ 13.3% co _(external)	6 ppm																					
Sample point 1	CO ₂ 2.1%																						
Sampling to Process	O ₂ 15.3%																						
00:11																							
21:41																							
168 ml/m																							
 View Alarms	 Stop Sampling	 View Faults																					
⚠ Warning	<p>Once all maintenance is completed, it is recommended that a Pressure Test Pressure Test be completed to ensure that the system is leak free.</p>																						

7.4 Replacing the Catchpot Filter



Warning

Do not open when an explosive atmosphere is present.

Mains voltages are present within the BIOGAS 3000 system and great care needs to be observed. If there is any uncertainty, seek advice from a professional or isolate the supply. Alternatively, contact our technical support team at (800) 968-2026 or email landtec_support@gedenv.com to arrange a site visit.



(Please note a charge may be applicable.)

The coalescing catchpot filter should be replaced if showing signs of contamination. Failure to replace the filter will result in the gas flow being restricted or blocked to the BIOGAS 3000 module. In addition, it will cause a flow fail error.

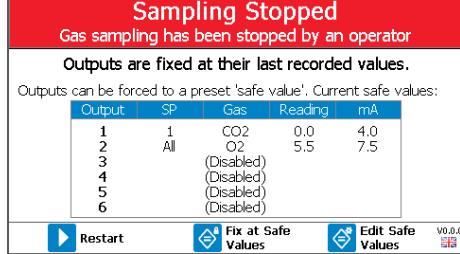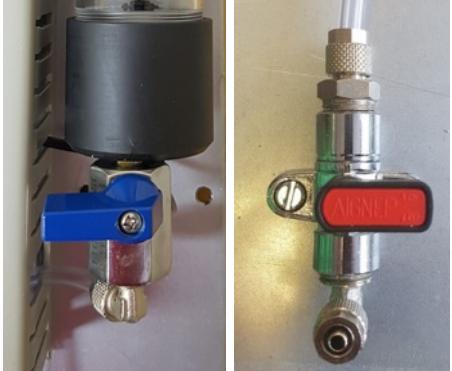Op.	Image	Instruction																																		
1	No image	<p>Drain the catchpot of any contents. Refer to Emptying the Catchpot.</p>																																		
2	 <p>Sampling Stopped Gas sampling has been stopped by an operator</p> <p>Outputs are fixed at their last recorded values.</p> <p>Outputs can be forced to a preset 'safe value'. Current safe values:</p> <table border="1"> <thead> <tr> <th>Output</th> <th>SP</th> <th>Gas</th> <th>Reading</th> <th>mA</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>1</td> <td>CO2</td> <td>0.0</td> <td>4.0</td> </tr> <tr> <td>2</td> <td>All</td> <td>O2</td> <td>5.5</td> <td>7.5</td> </tr> <tr> <td>3</td> <td></td> <td>(Disabled)</td> <td></td> <td></td> </tr> <tr> <td>4</td> <td></td> <td>(Disabled)</td> <td></td> <td></td> </tr> <tr> <td>5</td> <td></td> <td>(Disabled)</td> <td></td> <td></td> </tr> <tr> <td>6</td> <td></td> <td>(Disabled)</td> <td></td> <td></td> </tr> </tbody> </table> <p> Restart  Fix at Safe Values  Edit Safe Values V0.0.0 </p>	Output	SP	Gas	Reading	mA	1	1	CO2	0.0	4.0	2	All	O2	5.5	7.5	3		(Disabled)			4		(Disabled)			5		(Disabled)			6		(Disabled)		
Output	SP	Gas	Reading	mA																																
1	1	CO2	0.0	4.0																																
2	All	O2	5.5	7.5																																
3		(Disabled)																																		
4		(Disabled)																																		
5		(Disabled)																																		
6		(Disabled)																																		
3		<p>Ensure the drain, gas inlet, and gas outlet valves are closed.</p>																																		

4		Disconnect the gas in and gas out tubes from the catchpot assembly.
5		Remove the catchpot from its clip.
6		<ol style="list-style-type: none">1) Unscrew the catchpot top by turning a quarter turn anti-clockwise.2) Lift the top from the body.
7		Unscrew the filter stop from underneath the filter. <div style="border: 1px solid #0070C0; padding: 5px; width: fit-content;"> Note: Keep the filter stop safe.</div>

8		Remove the coalescing filter from the threaded bar and replace with new.
9		Replace the filter stop and tighten into place.
10		<ol style="list-style-type: none">1) Align and fit the catchpot top to the body.2) Tighten the catchpot top by turning a quarter turn clockwise.
11		Fit the catchpot back in to its clip.

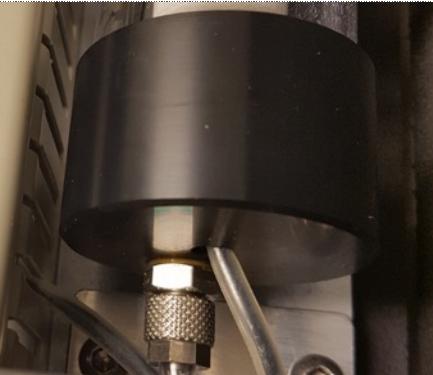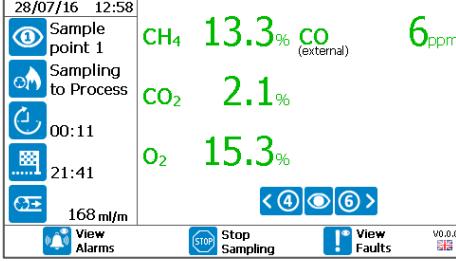12		Gently position the catchpot so that the drain tube is closest to the backplate and the female QRC is facing the front.															
13		Once secure, reconnect the couplings to the catchpot top, ensuring the tubing is not trapped or kinked.  Note: Ensure that the couplings 'clicks' in to place.															
14		Open the gas inlet and gas outlet valves.															
15	 <p>28/07/16 12:58 Sample point 1 Sampling to Process 00:11 21:41 168 ml/m View Alarms Stop Sampling View Faults 0.0.0</p> <table border="1"> <thead> <tr> <th></th> <th>CH₄</th> <th>CO₂</th> <th>O₂</th> <th></th> </tr> </thead> <tbody> <tr> <td>13.3%</td> <td>co_(external)</td> <td>6 ppm</td> <td>15.3%</td> <td></td> </tr> <tr> <td>2.1%</td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table>		CH ₄	CO ₂	O ₂		13.3%	co _(external)	6 ppm	15.3%		2.1%					From the sampling stopped screen, press the left soft key to 'Restart' the monitoring process and return to the 'Gas Readings Screen'.
	CH ₄	CO ₂	O ₂														
13.3%	co _(external)	6 ppm	15.3%														
2.1%																	
	 Warning	Once all maintenance is completed, it is recommended that a <u>Pressure Test</u> be completed to ensure that the system is leak free.															

7.5 Replacing the Inline PTFE Filter



Warning

Do not open when an explosive atmosphere is present.

Mains voltages are present within the BIOGAS 3000 system and great care needs to be observed. If there is any uncertainty, seek advice from a professional or isolate the supply. Alternatively, contact our technical support team at (800) 968-2026 or email landtec_support@gedenv.com to arrange a site visit.

(Please note a charge may be applicable.)


The inline PTFE filter should be replaced if showing signs of contamination or saturated with liquid. Failure to replace the filter will result in the gas flow being restricted or blocked to the BIOGAS 3000 module. In addition, it will cause a flow fail error.

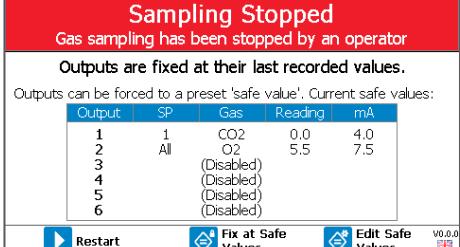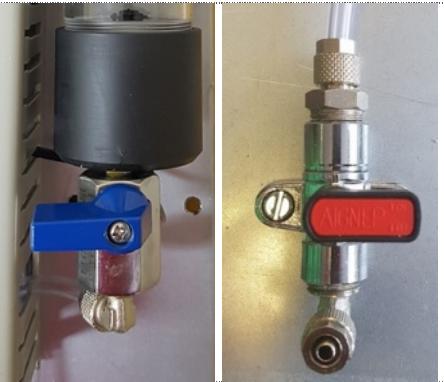Op.	Image	Instruction																																			
1	 <p>Sampling Stopped Gas sampling has been stopped by an operator</p> <p>Outputs are fixed at their last recorded values.</p> <p>Outputs can be forced to a preset 'safe value'. Current safe values:</p> <table border="1"> <thead> <tr> <th>Output</th><th>SP</th><th>Gas</th><th>Reading</th><th>mA</th></tr> </thead> <tbody> <tr> <td>1</td><td>1</td><td>CO2</td><td>0.0</td><td>4.0</td></tr> <tr> <td>2</td><td>All</td><td>O2</td><td>5.5</td><td>7.5</td></tr> <tr> <td>3</td><td></td><td>(Disabled)</td><td></td><td></td></tr> <tr> <td>4</td><td></td><td>(Disabled)</td><td></td><td></td></tr> <tr> <td>5</td><td></td><td>(Disabled)</td><td></td><td></td></tr> <tr> <td>6</td><td></td><td>(Disabled)</td><td></td><td></td></tr> </tbody> </table> <p> Restart  Fix at Safe Values  Edit Safe Values v0.0.0 </p>	Output	SP	Gas	Reading	mA	1	1	CO2	0.0	4.0	2	All	O2	5.5	7.5	3		(Disabled)			4		(Disabled)			5		(Disabled)			6		(Disabled)			<p>From the 'Gas Readings Screen', press the middle soft key to 'Stop Sampling'.</p> <p> Note: If required, press the middle soft key once more to fix the outputs at their safe values.</p>
Output	SP	Gas	Reading	mA																																	
1	1	CO2	0.0	4.0																																	
2	All	O2	5.5	7.5																																	
3		(Disabled)																																			
4		(Disabled)																																			
5		(Disabled)																																			
6		(Disabled)																																			
2		<p>Ensure the drain, gas inlet, and gas outlet valves are closed.</p>																																			

3		The inline PTFE filter is located above the catchpot.
4		Disconnect one side of the tubing from the filter by turning counter-clockwise.
5		Disconnect the remaining tubing length from the filter by turning counter-clockwise.
6		Connect the new filter to the tubing by turning clockwise.

14 BIOGAS 3000 Operating Manual

Maintenance

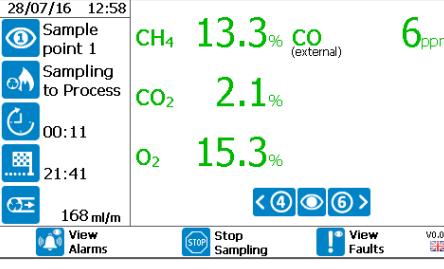7		Connect the remaining tube to the filter by turning clockwise.
8		Position the tubing assembly above the catchpot ensuring the tubing is not trapped or kinked.
⚠ Warning		It is critical that the connections are fully secured to ensure that no gas leaks in to the main enclosure.
9		Open the gas inlet and gas outlet valves.
10	28/07/16 12:58 	From the sampling stopped screen, press the left soft key to 'Restart' the monitoring process and return to the 'Gas Readings Screen'.
⚠ Warning		Once all maintenance is completed, it is recommended that a <u>Pressure Test</u> be completed to ensure that the system is leak free.

7.6 Pressure Test

After any maintenance operations in this section are performed, the system must be pressure tested to ensure it is leak free. In addition, a pressure test should be performed as part of routine maintenance. The following sections outline the required equipment, the set-up, and the procedure for the pressure test on the different systems available.

 **Warning**

Do not open when an explosive atmosphere is present.

Failure to pressure test the system could result in gas leaking in to the enclosure causing a hazard.

7.6.1 Required Equipment

To perform the test procedure, the following equipment will be required:

- 0-200mbar pressure gauge with minimum of 10mbar increments
- T-piece fitting suitable for tubing
- A ball valve
- Pressure application device, such as a manual pump
- Fittings and tubing to connect to the system bulkheads



Note: An additional two ball valves will be required if not installed on the 'process return' and 'vent to atmosphere' outlets as recommended during the installation.

7.6.2 Diagnostics Control Mode

The BIOGAS 3000 includes a feature that allows the user to toggle the condition of the solenoids, relays, and pumps in the system. During the pressure systems tests, the user will need to control the position of the solenoid valves in order to complete a comprehensive test. To enable diagnostics control mode:

- 1) From the 'Gas Readings Screen' press the 'Menu' key.
- 2) Press the left soft key for the 'Device Info' menu.

- 3) Press key '3' for 'Diagnostics'.
- 4) Press the 'pump' key to display 'Diagnostics Control Mode'.



Note: Entering this mode of operation will stop the sampling process.

Diagnostics				G300001	
ID	Pump	Relay	Solenoid	4-20mA Out	4-20mA In
1	<input type="button" value="OFF"/>	<input type="button" value="OFF"/>	<input type="button" value="OFF"/>	0.00	4.50
2	<input checked="" type="button" value="ON"/>	<input type="button" value="ON"/>	<input type="button" value="OFF"/>	0.00	
3	<input type="button" value="OFF"/>	<input type="button" value="ON"/>	<input type="button" value="OFF"/>	0.00	
4	<input type="button" value="OFF"/>	<input type="button" value="OFF"/>	<input type="button" value="OFF"/>	0.00	
5	<input type="button" value="OFF"/>	<input type="button" value="OFF"/>	<input type="button" value="OFF"/>	0.00	
6	<input type="button" value="ON"/>	<input type="button" value="OFF"/>	<input type="button" value="ON"/>	0.00	
7	<input type="button" value="OFF"/>	<input type="button" value="OFF"/>			
8	<input type="button" value="OFF"/>				

Exit
v0.0.0

Screen 41 – Diagnostics Control Mode

- 5) Using the scroll keys, navigate to the desired parameter. Pressing the ← key will toggle the status of the hardware item between on and off.
- 6) Pressing the right soft key at any point will return the user to the 'Device Info' menu.




Note: After returning to the 'Gas Readings Screen' after being in diagnostics control mode, the sampling process will start from the beginning.

7.6.3 General Set-Up

The image below shows an example of how the equipment will look when performing the test procedure.



Note: Due to the significant differences between models, each set-up will be slightly different to the image shown.

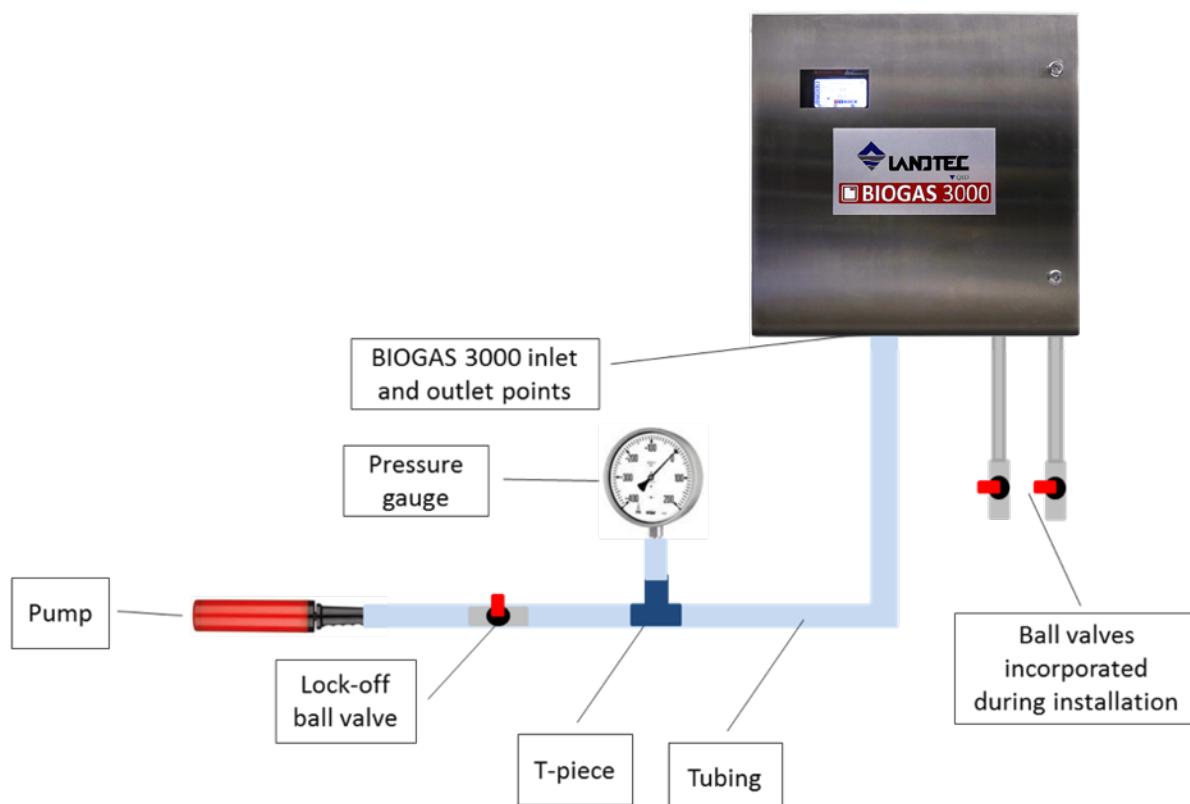

7.6.4 Performing the Pressure Test

⚠ Warning

Do not open when an explosive atmosphere is present.

Ensure the gas supply has been isolated at the source before disconnecting the tubing from the equipment.



The test is to apply 100mbar of pressure to each gas inlet, including air, in turn as per the table associated to the model types below. Solenoids are to be toggled via the [Diagnostics Control Mode](#). A successful test is a pressure drop of less than 10mbar in a minute on each test point.

For each test, the ball valves on the 'Process Return' and 'Vent to Atmosphere' lines should be closed.

 Note: Ensure the drain valve is closed when performing the pressure test.

 Note: An additional two ball valves will be required if not installed on the 'Process Return' and 'Vent to Atmosphere' outlets as recommended during the installation.

7.6.4.1 BG3K1 and BG3KE without an External Sensor

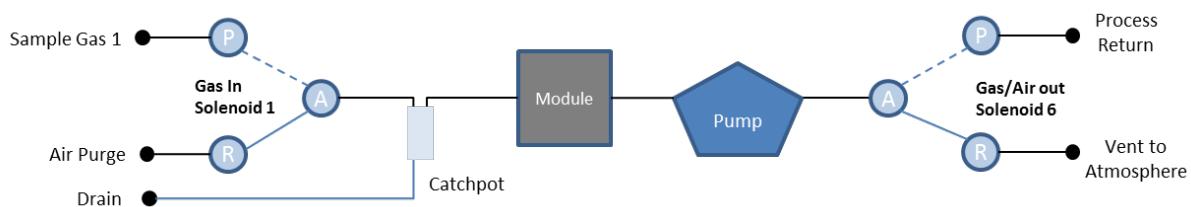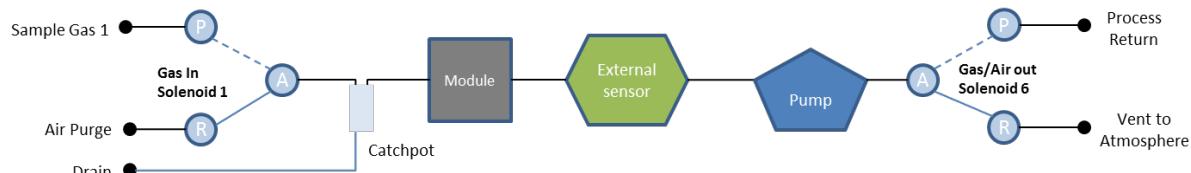


Apply pressure to:	Solenoid 1	Solenoid 6
Air Purge	OFF	OFF
Sample Gas 1	ON	ON

 Note: Ensure the ball valves on the 'Process Return' and 'Vent to Atmosphere' lines are opened once testing is completed.

 Note: When reattaching the sample pipes to the system, ensure all tube connections are tight and free from leaks.

 Note: If assistance is required, please contact our technical support team at (800) 968-2026 or email landtec_support@gedenv.com.


7.6.4.2 BG3K2

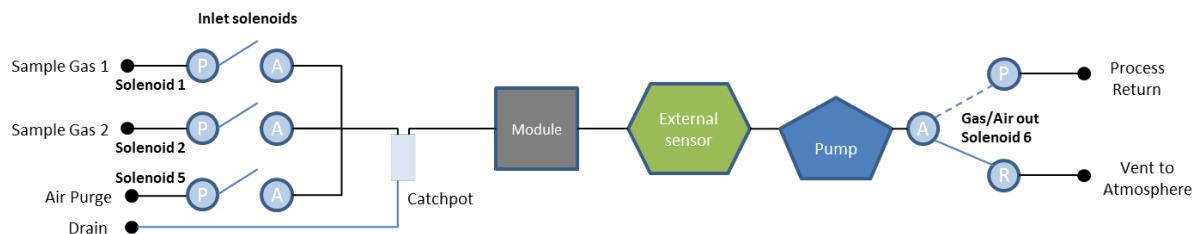


Apply pressure to:	Solenoid 1	Solenoid 2	Solenoid 5	Solenoid 6
Air Purge	OFF	OFF	ON	OFF
Sample Gas 1	OFF	OFF	OFF	OFF
Sample Gas 2	ON	OFF	OFF	ON

- ☞ Note: Ensure the ball valves on the 'Process Return' and 'Vent to Atmosphere' lines are opened once testing is completed.
- ☞ Note: When reattaching the sample pipes to the system, ensure all tube connections are tight and free from leaks.
- ☞ Note: If assistance is required, please contact our technical support team at (800) 968-2026 or email landtec_support@qedenv.com.

7.6.4.3 BG3K3

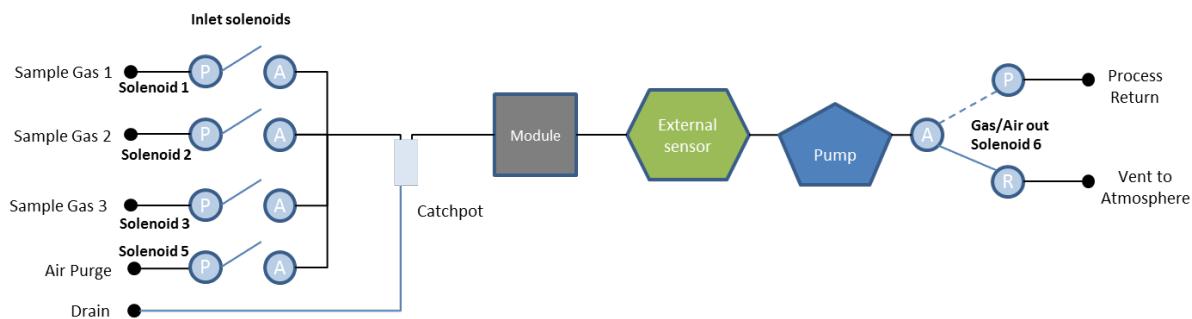


With hydrolysis option:

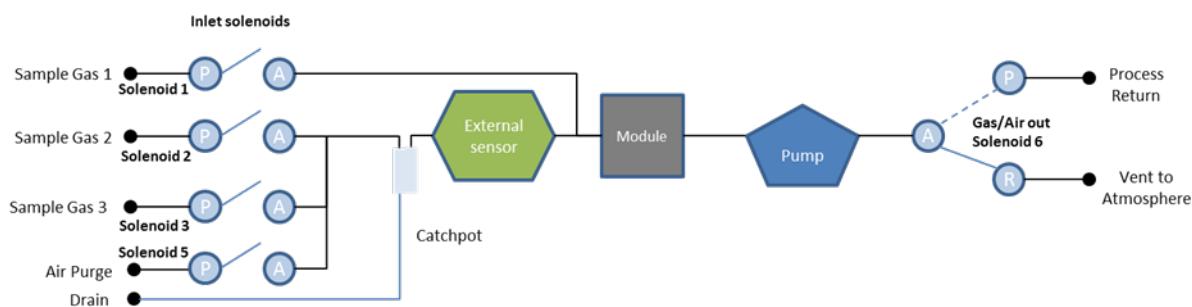


Apply pressure to:	Solenoid 1	Solenoid 2	Solenoid 3	Solenoid 5	Solenoid 6
Air Purge	OFF	OFF	OFF	ON	OFF
Sample Gas 1	OFF	OFF	OFF	OFF	OFF
Sample Gas 2	OFF	OFF	OFF	OFF	OFF
Sample Gas 3	OFF	OFF	ON	OFF	ON

- ☞ Note: Ensure the ball valves on the 'Process Return' and 'Vent to Atmosphere' lines are opened once testing is completed.
- ☞ Note: When reattaching the sample pipes to the system, ensure all tube connections are tight and free from leaks.
- ☞ Note: If assistance is required, please contact our technical support team at (800) 968-2026 or email landtec_support@gedenv.com.

7.6.4.4 BG3K4

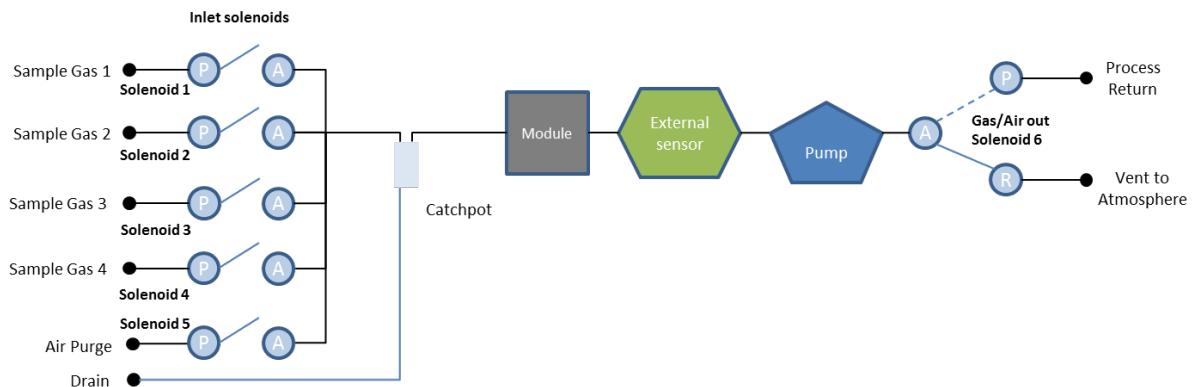


With hydrolysis option:

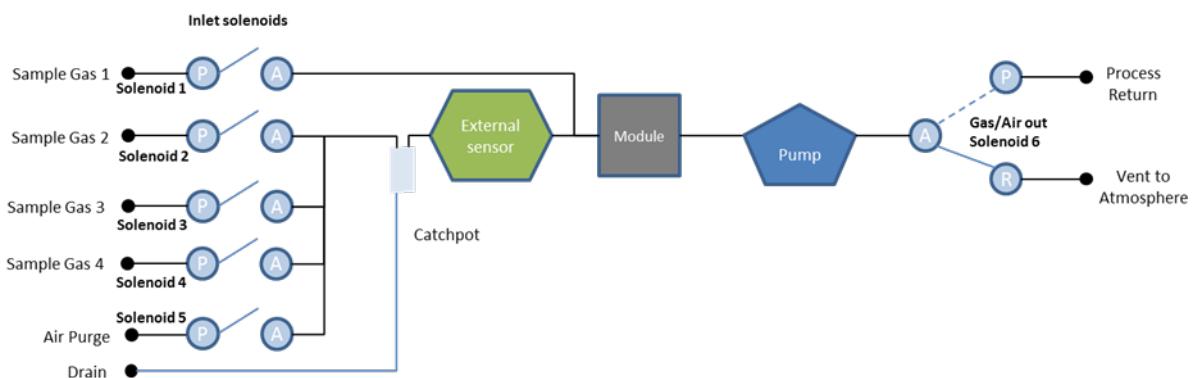

Apply pressure to:	Solenoid 1	Solenoid 2	Solenoid 3	Solenoid 4	Solenoid 5	Solenoid 6
Air Purge	OFF	OFF	OFF	OFF	ON	OFF
Sample Gas 1	OFF	OFF	OFF	OFF	OFF	OFF
Sample Gas 2	OFF	OFF	OFF	OFF	OFF	OFF
Sample Gas 3	OFF	OFF	OFF	OFF	OFF	OFF
Sample Gas 4	OFF	OFF	OFF	ON	OFF	ON

- ☞ Note: Ensure the ball valves on the 'Process Return' and 'Vent to Atmosphere' lines are opened once testing is completed.
- ☞ Note: When reattaching the sample pipes to the system, ensure all tube connections are tight and free from leaks.
- ☞ Note: If assistance is required, please contact our technical support team at (800) 968-2026 or email landtec_support@qedenv.com.


7.6.4.5 BG3KD

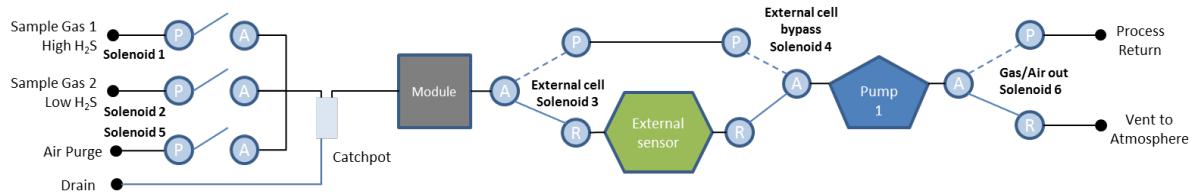

Apply pressure to:	Solenoid 1	Solenoid 2	Solenoid 3	Solenoid 4	Solenoid 5	Solenoid 6
Air Purge	OFF	OFF	OFF	OFF	ON	OFF
Sample Gas 1	OFF	OFF	OFF	OFF	OFF	OFF
Sample Gas 2	OFF	OFF	ON	ON	OFF	ON

- ☞ Note: Ensure the ball valves on the 'Process Return' and 'Vent to Atmosphere' lines are opened once testing is completed.
- ☞ Note: When reattaching the sample pipes to the system, ensure all tube connections are tight and free from leaks.
- ☞ Note: If assistance is required, please contact our technical support team at (800) 968-2026 or email landtec_support@gedenv.com.

7.6.4.6 BG3KE with an External Sensor

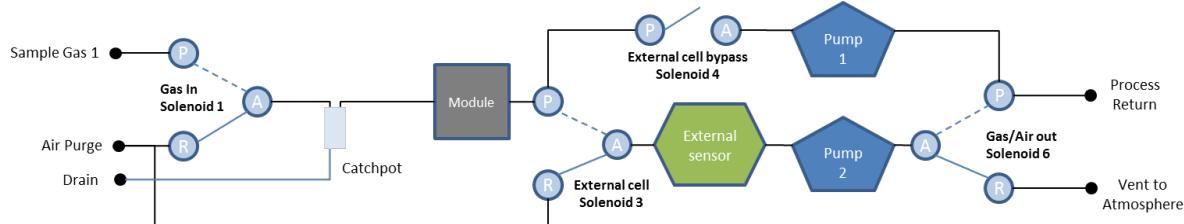

Apply pressure to:	Solenoid 1	Solenoid 3	Solenoid 4	Solenoid 6
Air Purge	OFF	OFF	OFF	OFF
Sample Gas 1	ON	OFF	ON	OFF

- ☞ Note: Ensure the ball valves on the 'Process Return' and 'Vent to Atmosphere' lines are opened once testing is completed.
- ☞ Note: When reattaching the sample pipes to the system, ensure all tube connections are tight and free from leaks.
- ☞ Note: If assistance is required, please contact our technical support team at (800) 968-2026 or email landtec_support@gedenv.com.

7.7 Cleaning and Decontamination

The equipment must be isolated from the mains supply prior to cleaning or decontamination. The enclosure can be cleaned externally using a mild soapy water and non-abrasive cloth.

Should the need arise for the BIOGAS 3000 module to be returned for service, it is the responsibility of the owner to ensure that the module has been decontaminated or that LANDTEC has been made aware of any contaminants that may be present, prior to it being returned.

 **Warning**

Only the exterior of the enclosure should require cleaning. Cleaning the interior could result in injury due to mains power being present.

High-pressure jet washers should not be used to clean the enclosure.

8 Service

8.1 General

The BIOGAS 3000 module should be regularly serviced to ensure correct and accurate operation. LANDTEC recommends a service and recalibration every **12 months**.

It is recommended that only qualified engineers service the BIOGAS 3000 module. Failure to observe this will result in the warranty becoming invalid.



Note: For further information on how to return your BIOGAS 3000 module for service, please contact our service team at (800) 968-2026 or email landtec_support@qedenv.com.

8.2 Service Notifications

The BIOGAS 3000 uses two icons on the ‘Gas Readings Screen’ to notify the user that the module is due a service:



The service is due in 28 days



The service is overdue

In addition to the icons on screen, the service due date is a readable parameter in the Modbus, Profibus and Profinet registers, and is viewable in the [System Information](#) screen.

8.3 Replacement BIOGAS 3000 Module for Service – Hot Swap

The BIOGAS 3000 has been designed to avoid unnecessary downtime and a temporary BIOGAS 3000 module can be supplied during service upon request. Below are instructions on how to swap out the BIOGAS 3000 module for service.

⚠ Warning

Do not open when an explosive atmosphere is present.

Mains voltages are present within the BIOGAS 3000 system and great care needs to be observed. If there is any uncertainty, seek advice from a professional or isolate the supply. Alternatively, contact our technical support team at (800) 968-2026 or email landtec_support@qedenv.com to arrange a site visit. (Please note a charge may be applicable.)

Op.	Image	Instruction
1		<p>Power off the module by holding the on/off key for two seconds.</p> <p> Note: This will freeze the outputs at their last known value</p>
2		<p>Disconnect the gas inlet and gas outlet tubing from the top of the BIOGAS 3000 module.</p>
3		<p>Disconnect the USB lead from the communications connector and the power supply lead from the power supply connector from the top of the BIOGAS 3000 module.</p>

4		<p>Remove the four screws securing the module mounting brackets to the pillars using a 4mm Allen key.</p> <p> Note: Keep the screws safe, as they will be required to secure the hot swap module.</p>
5	No image	<p>Send the module to your distributor or our service team at LANDTEC.</p>
6		<p>Align the new module with the four pillars and secure in place using the four screws and 4mm Allen key. The screws must be tightened to 4N·m.</p>
⚠ Warning		<p>It is critical that the screws are torqued to 4N·m. Failure to tighten to this setting will invalidate the ATEX and IECEx certification.</p>
7		<p>Reconnect the USB lead to the communications connector and the power supply lead to the power supply connector at the top of the BIOGAS 3000 module.</p>
8		<p>Reconnect the gas in and gas out tubing to the module.</p> <p> Note: Ensure that the couplings are fully pushed into the housing.</p> <p> Note: The yellow tubing should connect to the yellow</p>

		port on the module.
⚠ Warning		It is critical that the connections are fully secured to ensure that no gas leaks in to the main enclosure. It is recommended that a Pressure Test be completed to ensure the system is leak free.
9		Power on the module by pressing the on/off key for two seconds.
10	<p>First Time Configure</p> <p>You will now be lead through a first-time configuration.</p> <p>Any previous settings, if appropriate, will already be loaded, otherwise pre-defined default values will be provided.</p> <p>At the end you will be provided an opportunity to carry out a gas check on the equipment to prove its accuracy and rectify any inaccuracies with a calibration. Alternatively, pressing 'Exit' will begin the monitoring process.</p> <p> Continue V2.0.1091</p>	The hot swap module will pre-load the configuration from the Interface PCB and run the operator through a First Time Run Set-up .

 Note: After replacing the BIOGAS 3000 module, LANDTEC recommends that a gas check be performed on the system to ensure it is still reading accurately. If required, a user calibration can also be performed; refer to the [Gas Check and Calibration](#) section of this operating manual for more information.

9 Problem Solving

This section discusses various problems that may be encountered, and warnings or error messages that the operator may receive during general operation of the BIOGAS 3000. For further assistance please contact our technical support team at (800) 968-2026 or email landtec_support@gedenv.com.


9.1 Fault Detection

When switched on the instrument will perform a pre-determined self-test sequence taking approximately sixty seconds. During this time, many of the systems working parameters and settings are checked. In addition, during normal operation, similar parameters are checked to ensure the channels are valid.

There are two types of faults, critical and non-critical.

9.1.1 Non-Critical Faults

If a non-critical fault is detected after power on, a warning will be displayed in a summary screen:

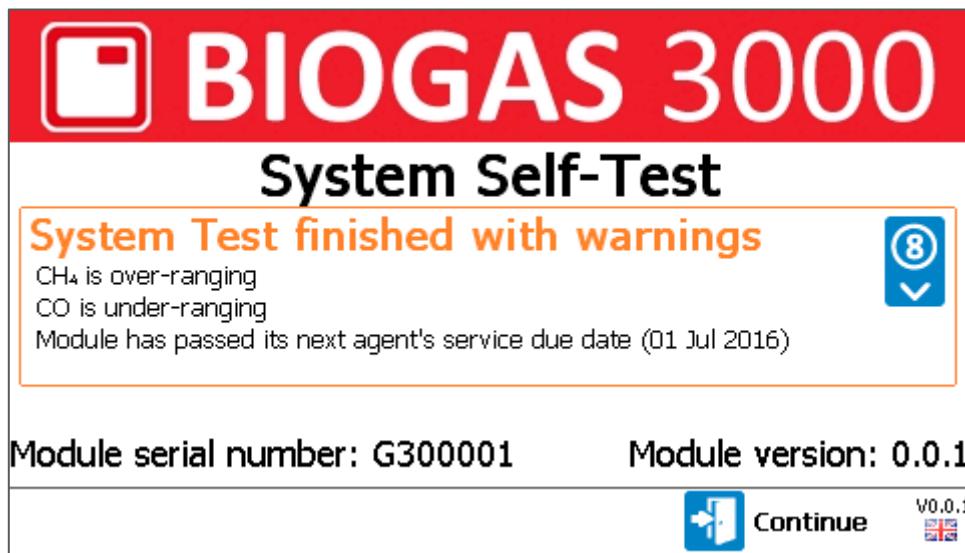

Screen 42 - Self-test with warnings


For non-critical faults at this stage, the user can continue by pressing the right soft key 'Continue'. The BIOGAS 3000 will continue automatically after thirty seconds if continue is not pressed.

In addition to [Screen 42 - Self-test with warnings](#), there will be a non-critical fault icon present on the ‘Gas Readings Screen’ during monitoring:



A non-critical fault does not stop the sampling process and this will continue as normal. Examples of non-critical faults are a channel under-ranging or the service being due.

Pressing the right soft key on the ‘Gas Readings Screen’ will display the non-critical faults the system has detected.

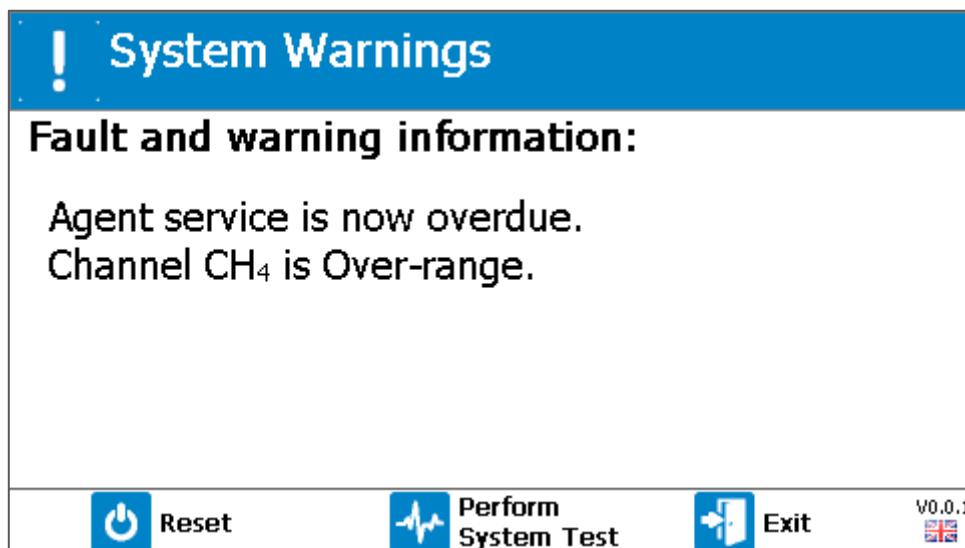


[Screen 43 - System Warnings \(non-critical faults\)](#)

From this screen:

- Pressing the left soft key will ‘Reset’ the system and power cycle the BIOGAS 3000 module
- Pressing the middle soft key will perform a system test. If the fault clears after this, monitoring will resume and the icon will be removed
- Pressing the right soft key will ‘Exit’ and returns the operator to the ‘Gas Readings Screen’.

9.1.2 Critical Faults

If a critical fault is detected after power on, a warning will be displayed in a summary screen:

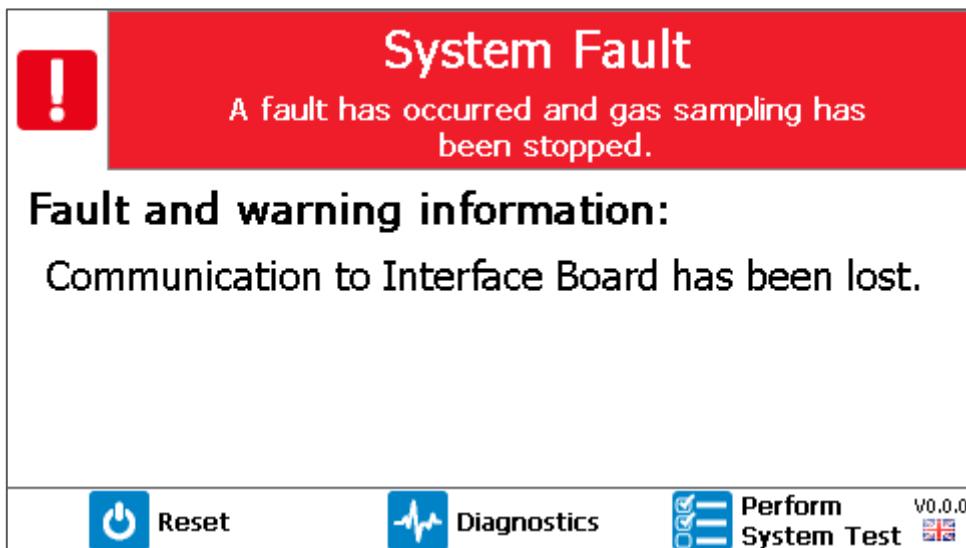

Screen 44 - System Fault

The difference between a non-critical fault and critical fault after the self-test is that the user cannot proceed until the fault is rectified. In addition, the fault relay is de-energized to inform the operator of a problem.

Examples of critical faults are a loss of communications to the Interface PCB and low flow. If a critical fault occurs during the monitoring process, the process will be immediately stopped, the outputs will be frozen at their last known value, the fault relay will be de-energised, and an error message posted on screen.

From this screen:

- Pressing the left soft key will ‘Reset’ the system and power cycle the BIOGAS 3000 module
- Pressing the middle soft key will access the ‘Diagnostics’ screen. This may be required if seeking technical support
- Pressing the right soft key will perform a system test. If the fault clears after this, monitoring will resume, the message will be cleared, and the fault relay energized.

After a critical fault occurs, the system will perform a self-test every fifteen minutes on four occasions to check if the fault has cleared. In the event it is still present, the self-test will then occur every 24-hours until user intervention or the fault has cleared.

9.2 System Will Not Power On

Ensure the switched mains supply is turned on and check that the LEDs are illuminated on the 24Vdc and 12Vdc power supplies. If they are not, check the mains fuse (fuse 1) and replace if necessary.

**Warning**

Do not remove fuses whilst energised.

If the problem persists, please contact our technical support team at LANDTEC on (800) 968-2026 or email landtec_support@qedenv.com

9.3 Module Will Not Power On

Ensure there is power to the system by checking that the LEDs are illuminated on the 24Vdc and 12Vdc power supplies. If they are not, check the mains fuse (fuse 1) and replace if necessary.

If they are illuminating, it can take up to one minute for the BIOGAS 3000 module to power on. If it does not turn on at the point power to the system is applied, please wait one minute before pressing any keys on the module.

If after one minute the module has not powered on, check the fuse for the supply to the module (fuse 2) and replace if necessary.

Finally, check fuse 3, which provides 12Vdc to the Interface PCB, which in turn supplies the power to the module.

**Warning**

Do not remove fuses while energized.

If the problem persists, please contact our technical support team at (800) 968-2026 or email landtec_support@qedenv.com.

9.4 Module Lock-Up

In the rare event that the BIOGAS 3000 ‘locks up’ and will not recognize button presses, the system should automatically power cycle the module due to a loss of communications.

If this does not occur or fix the problem, isolate the supply to the system and leave the system switched off for 60 seconds. After this duration, turn the power back on and check the systems operation.

If the problem persists, please contact our technical support team at (800) 968-2026 or email landtec_support@qedenv.com.

9.5 Under and Over Range Codes

If a reading is under range (i.e. below zero) it will display ‘less than’ chevrons (<<<). This can occur if:

- A channel has been incorrectly user calibrated
- The BIOGAS 3000 module has been damaged (e.g. during transit)
- The BIOGAS 3000 module has drifted out of calibration or it is due for factory calibration.

If a reading is over range (i.e. above the maximum allowed value) it will display ‘more than’ chevrons (>>>). This can occur:

- For the same reasons as an under range error
- If the channel is reading more than its acceptable limit (e.g. CH₄ > 100%)
- Due to potential cross gas effects.

In most circumstances, a return to factory settings (see [Restore to Factory](#)) and performing a user calibration (see [Gas Check and Calibration](#)) will resolve the error. If the error is not cleared by performing these tasks, please contact our technical support team at (800) 968-2026 or email landtec_support@qedenv.com.

9.6 Analogue Outputs Not Working

Please refer to section [4-20mA Outputs](#) in this operating manual to ensure the outputs have been wired correctly. If the wiring method is not suitable for the input systems configuration, please contact our technical support team at (800) 968-2026 or email landtec_support@qedenv.com.

If the system is wired correctly, ensure the analogue outputs have been configured correctly; refer to [Configure Analog Outputs](#) for more information.

Check that your 4-20mA input channel is being interpreted correctly; refer to [4-20mA Scaling](#).

Finally, check fuse 5, which is used to provide power to the 4-20mA loop.

If the problem persists, please contact our technical support team at (800) 968-2026 or email landtec_support@qedenv.com.

9.7 Modbus Outputs Not Working

Please refer to section [Configure Modbus Slave](#) in this operating manual and ensure that the configuration of the Modbus port is correct and that the wiring is correct as per [Wiring Diagram 2 – Modbus](#).

 Note: If the BIOGAS 3000 is last on the bus, ensure the termination is set to 'On'. Likewise, if it is not, ensure the termination is set to 'Off'.

In addition, also check that no two nodes on the bus have the same slave address. If this is the case, the BIOGAS 3000 slave address can be changed by referring to section [Configure Modbus Slave](#) in this operating manual.

If the problem persists, please contact our technical support team at (800) 968-2026 or email landtec_support@qedenv.com.

9.8 Low Flow / Flow Fail

If a flow fail occurs, this is classified as a critical fault and sampling will be stopped.

A flow fail occurs when there is not enough gas flowing through the BIOGAS 3000 module. This can be for a number of reasons:

- You are sampling against a vacuum outside of the range of the system
- There are blockages in the system
- There is a gas leak in the system.

Firstly, check that all gas in and gas out valves are open, the drain valve is closed, and the calibration valve is closed.

If the valves are in the correct position and the problem persists:

- Ensure that the system is not operating against a vacuum outside of its operating range. Refer to the latest technical specification (available at www.LANDTECNA.com) for further information.
- Empty the catchpot of any contents (see [Emptying the Catchpot](#)).
- Replace inline PTFE filter (see [Replacing the Inline PTFE Filter](#)).
- Replace the catchpot filter (see [Replacing the Catchpot Filter](#)).
- Visually check for damaged pipes or obvious signs of leaks.
- Perform a [Pressure Test](#).
- Retest the system.

If after performing the above steps the problem is still present, please contact our technical support team at (800) 968-2026 or email landtec_support@gedenv.com.

9.9 Fuses

Warning

The use of alternative fuses may affect the safety of the apparatus and will invalidate the ATEX/IECEx certification.

Ensure the power is isolated and the [Protective Cover](#) is removed before replacing fuses. Once replaced, the protective cover will need to be fitted.

Please refer to the following table for the designation and location of each fuse together with its type and rating:

Designation	Circuit	Rated voltage	Rated current	Type
FS1	Mains input Power supplies Heater	250v	3.15A	20mm time delay, ceramic
FS2	24Vdc pumps Drain pump Reed switch	250v	1.25A	20mm time delay, ceramic
FS3	4-20mA loop Relay control External sensor	250v	500mA	20mm time delay, ceramic
FS4	Solenoids	250V	1A	20mm time delay, ceramic
FS5	24Vdc supply	250V	2A	20mm time delay, ceramic
FS6	BIOGAS 3000 module supply	250v	1A	20mm time delay, ceramic
FS7	12Vdc supply to Interface PCB	250V	1A	20mm time delay, ceramic




Note: Please contact our Technical Support team at (800) 968-2026 or email landtec_support@qedenv.com for further information.

9.10 User Calibration Explained

9.10.1 General

User calibration is a means of optimising the performance of the BIOGAS 3000 system to the current operating conditions such as temperature and pressure as well as correcting for analyser drift caused by the infrared source.

User calibration has two operations, zero and span, and each may be performed individually. However, for a complete user calibration both must be completed.

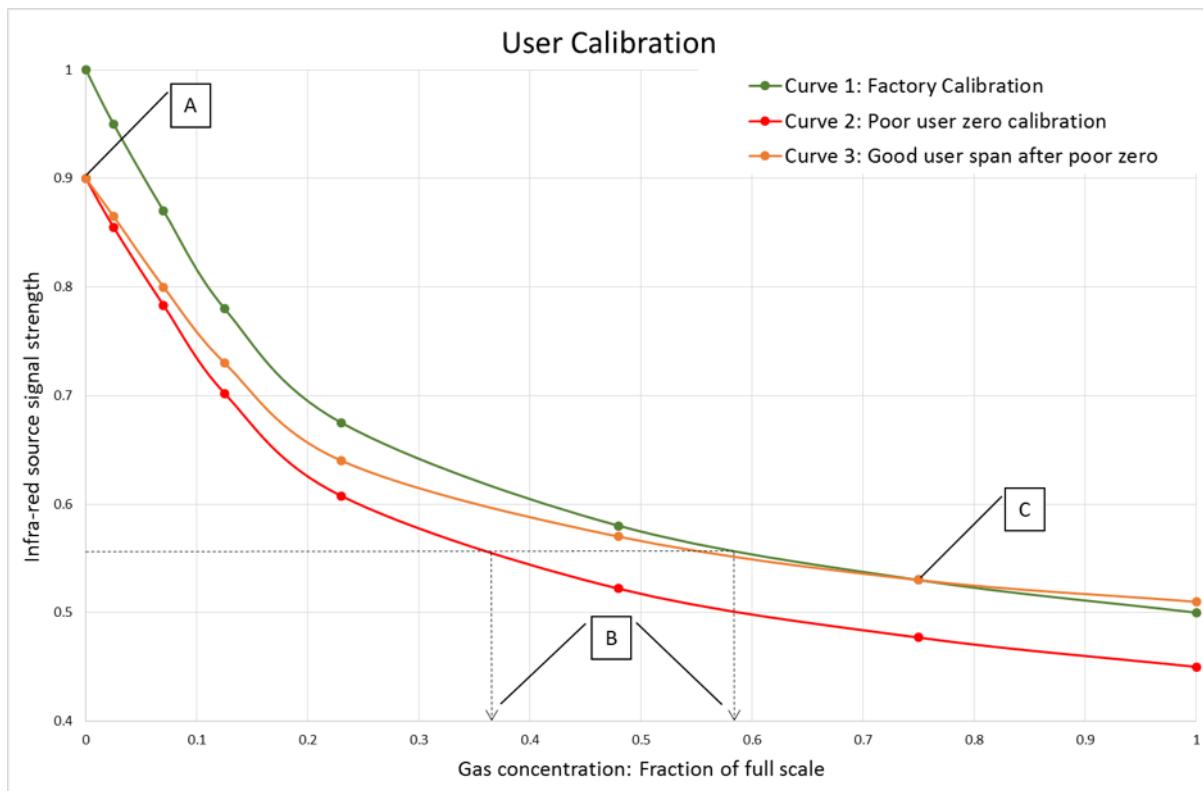

Graph 1 - User calibration explained

9.10.2 Factory Calibration

When the BIOGAS 3000 module is factory calibrated, a stable gas curve is generated (see curve 1 on [Graph 1 - User calibration explained](#)). This curve is then used to determine the gas concentration based on the infrared signal strength after being absorbed by the gas.

9.10.3 User Zero Calibration

A zero calibration is used to correct the entire curve for the infrared source and filter variations caused by aging and induced drift due to dirt and other contaminants. If done correctly, there is often no need to complete a span calibration, as the new curve will follow closely to the factory calibration curve (curve 1 on [Graph 1 - User calibration explained](#)).

The zero calibration is very sensitive and a rushed or poor calibration, (such as the target gas still being present), will result in a zero error; see point A on curve 2 of [Graph 1 - User calibration explained](#). This also produces an error throughout the remainder of the curve proportional to signal strength, but the

effect on the span is significant, see point B on [Graph 1 - User calibration explained](#).

- ☞ Note: To perform an accurate user calibration it is critical that a good user zero has been performed. LANDTEC recommends that this be done with nitrogen in order to guarantee that none of the gas of interest is present.
- ☞ Note: To obtain a good zero it may be necessary to flow nitrogen for several minutes, especially if the BIOGAS 3000 system has been subjected to high levels of gas previously, in order to ensure there are no remains of the target gas present. On the BIOGAS 3000, this would result in leaving the system for several minutes before pressing 'check' during the gas check process.

9.10.4 User Span Calibration

A span calibration is used to optimize the analyser at the span calibration concentration (see point C on [Graph 1 - User calibration explained](#)) for the current operational conditions. It corrects the span point but leaves the zero unadjusted (this will be left at the last user zero if this has been performed) and should be done at the concentration of interest in the particular application.

If the user zero is poor and the span calibration is good, it will correct the gas curve for the point of interest, but other points on the curve could be incorrect, see curve 3 on [Graph 1 - User calibration explained](#).

9.10.5 Trouble Shooting

9.10.5.1 User Zero Calibration Failed

Three possible reasons for this are that:

- The BIOGAS 3000 module is trying to zero to a level which is outside the predetermined range set when the module was last factory calibrated
- The gas is not stable i.e. it is still purging out the measured gas
- The system is not seeing a flow of gas.

To rectify this:

- Ensure the BIOGAS 3000 module contains none of the gas that is being zeroed by flushing through with nitrogen, or clean ambient air if this is not available and repeat a user zero calibration
- Ensure the correct zero calibration has been selected (nitrogen, fresh air, or a mix with none of the target gas present) and retry
- Ensure the flow regulator on the gas bottle is open (if being used).

If after performing the above steps the problem is still present, please contact our technical support team at (800) 968-2026 or email landtec_support@qedenv.com.

9.10.5.2 User Span Calibration Failed

Check the span target (see [Gas Mixtures](#)) is set to the value given on the calibration bottle. If not, correct and re-span the channel.

In addition, check that the flow regulator on the gas bottle is open.

If the problem persists, repeat an entire user calibration by zeroing the channel prior to performing a span calibration.



Note: Always ensure that the on-screen reading has begun to stabilize before pressing 'Check'. If you notice that the reading is still changing after the elapsed time, use the 'Retry' function and perform the span calibration again.

If after performing the above steps the problem is still present, please contact our technical support team at (800)968-2026 or email landtec_support@qedenv.com.

9.10.5.3 Channel Outside of Limits

A channel outside of its limits to be calibrated is indicated by the  icon in the 'User Calibration' screen. The cause of this is either:

- The channel is under-ranging or over-ranging
- The current user reading is too far from the target

In both scenarios, perform a [Restore to Factory](#), followed by a zero or span check.

If after performing the above steps the problem is still present, please contact our technical support team at (800)698-2026 or email landtec_support@gedenv.com.

9.11 CH₄ Reading Low and O₂ Reading High

If you believe that the CH₄ reading is lower than you expect or the O₂ reading is higher than you expect, there could be two reasons for this:

- There could be a leak in the tubing and when sampling you could be drawing in air and diluting the sample. Refer to the [Pressure Test](#) section of this operating manual for instructions on how to pressure test the BIOGAS 3000 system.
- The BIOGAS 3000 has drifted since its calibration and may be due a user calibration; see section [Gas Check and Calibration](#) of this operating manual for further information.

If after performing the above steps the problem is still present, please contact our technical support team at (800) 968-2026 or email landtec_support@gedenv.com.

9.12 Event Log

The BIOGAS 3000 incorporates the ability to log significant events performed on the system via the event log. This can be used as an aid to monitoring the use of the system and used as a diagnostic tool if there is a problem.

The system stores ten logs, each able to store 10kb of event memory. 10kb is approximately 80-100 single event entries. Applicable events are stored in the event log automatically and no user intervention is required. When the tenth log file is full, the events of log file one are deleted and replaced with log file eleven.

Below are some examples of events recorded to the logs:

- Alarm disabled

- Starting air calibration
- User requested shutdown from module
- Flow has failed
- Manufacturer's service was overdue on [date]

10 BIOGAS 3000 Warranty Terms and Conditions

QED Environmental Systems, Inc. will repair or replace (at QED's discretion) any goods supplied by the company in respect to defects arising within **12 months** for components related to the system and **3 years** for components related to the module from date of purchase or delivery, whichever is later, provided that:

- The defect is due to faulty parts or workmanship provided by QED.
- Proof of delivery/purchase must be provided to QED for any claims. This includes a QED sales order, invoice, or delivery note.
- All warranty repairs can only be carried out by QED or its authorized agents. In certain circumstances, permission may be granted by QED for the owner to replace a supplied part under warranty.
- Any repair or replacement component under warranty will not extend the warranty period of the system.
- Products must have been returned for service and calibration as recommended by QED or its authorized agents.
- Where replacement parts have been supplied by QED under warranty, the replaced parts must be returned to QED. If not returned, QED reserves the right to charge for the replacement part.
- If no fault is found an investigation charge may apply.
- Technical support MUST be notified in the event of a pending warranty claim. They will then issue a warranty reference number that must be included in any return. Failure to provide this will void any warranty claim.

The following is not included:

- Normal wear and tear of parts that might wear out over time, or be consumed, is not covered. Parts not covered include, but not limited to, the, suppression diodes, PTFE filter, coalescing filter, electrochemical cells, and tubing.
- A service is not part of a warranty claim.
- Accidental damage, including dropping during installation.
- Damage as a result of vandalism.

17 **BIOGAS 3000 Operating Manual**

BIOGAS 3000 Warranty Terms and Conditions

- Faults arising from use of the equipment that is not in accordance with standard operating procedures laid out in BIOGAS 3000 Operating Manual.
- Faults arising from use of the equipment in unsuitable applications.
- Repairs or alterations carried out by parties other than QED, its authorized agents, or under the instruction of QED.
- Any data stored on the equipment that may be lost.
- A claim due to a failure in maintaining the system in accordance with the operating manual.
- A claim as a result of poor quality or inadequate repairs.
- Any business related losses such as income, profits, and contracts (as far as the law allows).

The following voids the warranty:

- When non-approved LANDTEC parts have been used for repair or maintenance.
- When parts are added, or alterations made, to the system outside the scope of the operating manual.
- The BIOGAS 3000 module has been opened, unless by QED approved service centers (where applicable).
- The BIOGAS 3000 system has been opened in poor weather conditions that have resulted in damage to any of its components.
- The equipment has been stored or installed outside of the operating range and environmental conditions determined in the operating manual.
- The equipment has not been maintained in accordance with the operating manual.

Service Warranty:

- QED offers a three-month warranty period, following a QED service, to cover any defects that have arisen because of that service.

-  Note: Warranty repair is only granted after an investigation by QED.
-  Note: For assistance in determining if your equipment qualifies for warranty investigation, please contact our technical support team at (800) 968-2026 or email landtec_support@qedenv.com.

QED Environmental Systems, Inc. reserves the right to update these terms and conditions without notice.

11 WEEE Compliance



The wheelie bin symbol displayed on electrical equipment supplied by LANDTEC signifies that the apparatus must not be disposed of through the normal municipal waste stream but through a registered recycling scheme.

The Waste Electrical and Electronic Equipment Directive (WEEE) make producers responsible in meeting their obligations, with the fundamental aim of reducing the environmental impact of electrical and electronic equipment at the end of its life.

LANDTEC is registered with the Environmental Agency as a producer and has joined a recycling scheme provider that manage and report on our electrical waste on our behalf.



Note: When your instrument is at the end of its life, please contact our sales team at (800) 968-2026 or email landtec_support@qedenv.com, who will advise you on the next step in order to help us meet our obligations.

12 Glossary of Terms

Term	Definition
Air purge	Process used to clear out gas from the tubing within the BIOGAS 3000 system and used as part of a user zero in air.
Baro	The atmospheric pressure at the given location, measured in milli bar (mb/mbar).
CH ₄	Methane
CO ₂	Carbon dioxide
CO	Carbon monoxide
Catchpot filter	The filter used to drop water droplets from the sample gas into the catchpot.
Current source	The BIOGAS 3000 supplies the source to the 4-20mA loop. Other configurations are available.
Electrochemical gas sensor	A method of gas detection that works based on a chemical reaction with the target gas e.g. H ₂ S.
External gas sensor	An electrochemical gas sensor incorporated in to an assembly external to the BIOGAS 3000 module but part of the overall system. It allows an additional gas to be monitored by the equipment.
Factory settings	Default settings pre-set at time of manufacture or service.
Firmware	Firmware is the term by which the internal module software is known and is not accessible by the client. This firmware is updated to the latest version when the analyser is returned to LANDTEC or an approved agent for servicing. In addition, the firmware can be updated by the end user using a LANDTEC approved power source and the LANDTEC Firmware Updater Tool.
H ₂	Hydrogen
H ₂ S	Hydrogen sulphide
Hazard	A potential source of harm.
Hazardous live	Capable of rendering an electric shock or electric burn.
Infrared source	The component used to provide a source of infrared light that can be absorbed by the gas.

Infrared source drift	The component used to provide a source of infrared light has changed its brightness, and may not have been fully compensated by the reference channel. This may be due to age or contamination.
Inline PTFE filter	The component used to help protect the BIOGAS 3000 module from water ingress.
Material safety data sheet	A document that contains information about a particular substance. Commonly known as MSDS.
Modbus	Modbus is a serial communications protocol and is a means of connecting industrial electronic devices.
Polymeric materials	Organic material, natural or synthetic, with high molecular weight made of repetitive structural units. Examples include wool and PVC.
Pump	Used to draw the gas sample from the monitoring point to the BIOGAS 3000.
Reference channel	An infrared channel that has no sensitivity to the gas of interest that is used as a baseline for the CH ₄ and CO ₂ absorption.